## BABY LOCK SERGER ACCESSORIES

## **Ruffling Foot**

(BL480A-RF)

## Instructions

This serger foot is used for joining two pieces of fabric while ruffling the bottom layer in one easy operation.



| Stitch type:       | 4-Thread overlock      |
|--------------------|------------------------|
| Thread tension:    | Standard setting       |
| Needle:            | One or two needles     |
| Stitch length:     | 3 to 4                 |
| Upper knife:       | Engaged                |
| Differential feed: | Set between N and .08  |
| Sewing speed:      | Slow to moderate speed |

## INSERTING THE FABRIC:

- 1. Raise the sewing foot.
- 2. Set needle at its highest position.
- Place bottom fabric layer (1) between needle plate and ruffling foot and insert up to upper knife.
- Place top fabric layer (2) in opening (3) flush with the bottom layer (right side of the fabric to right side of the fabric) and insert up to stop (4).
- 5. Lower the sewing foot.
- Make a sewing test.





