


Operation Manual Sewing

Embroidery and Sewing Machine

Product Code: 882-W30

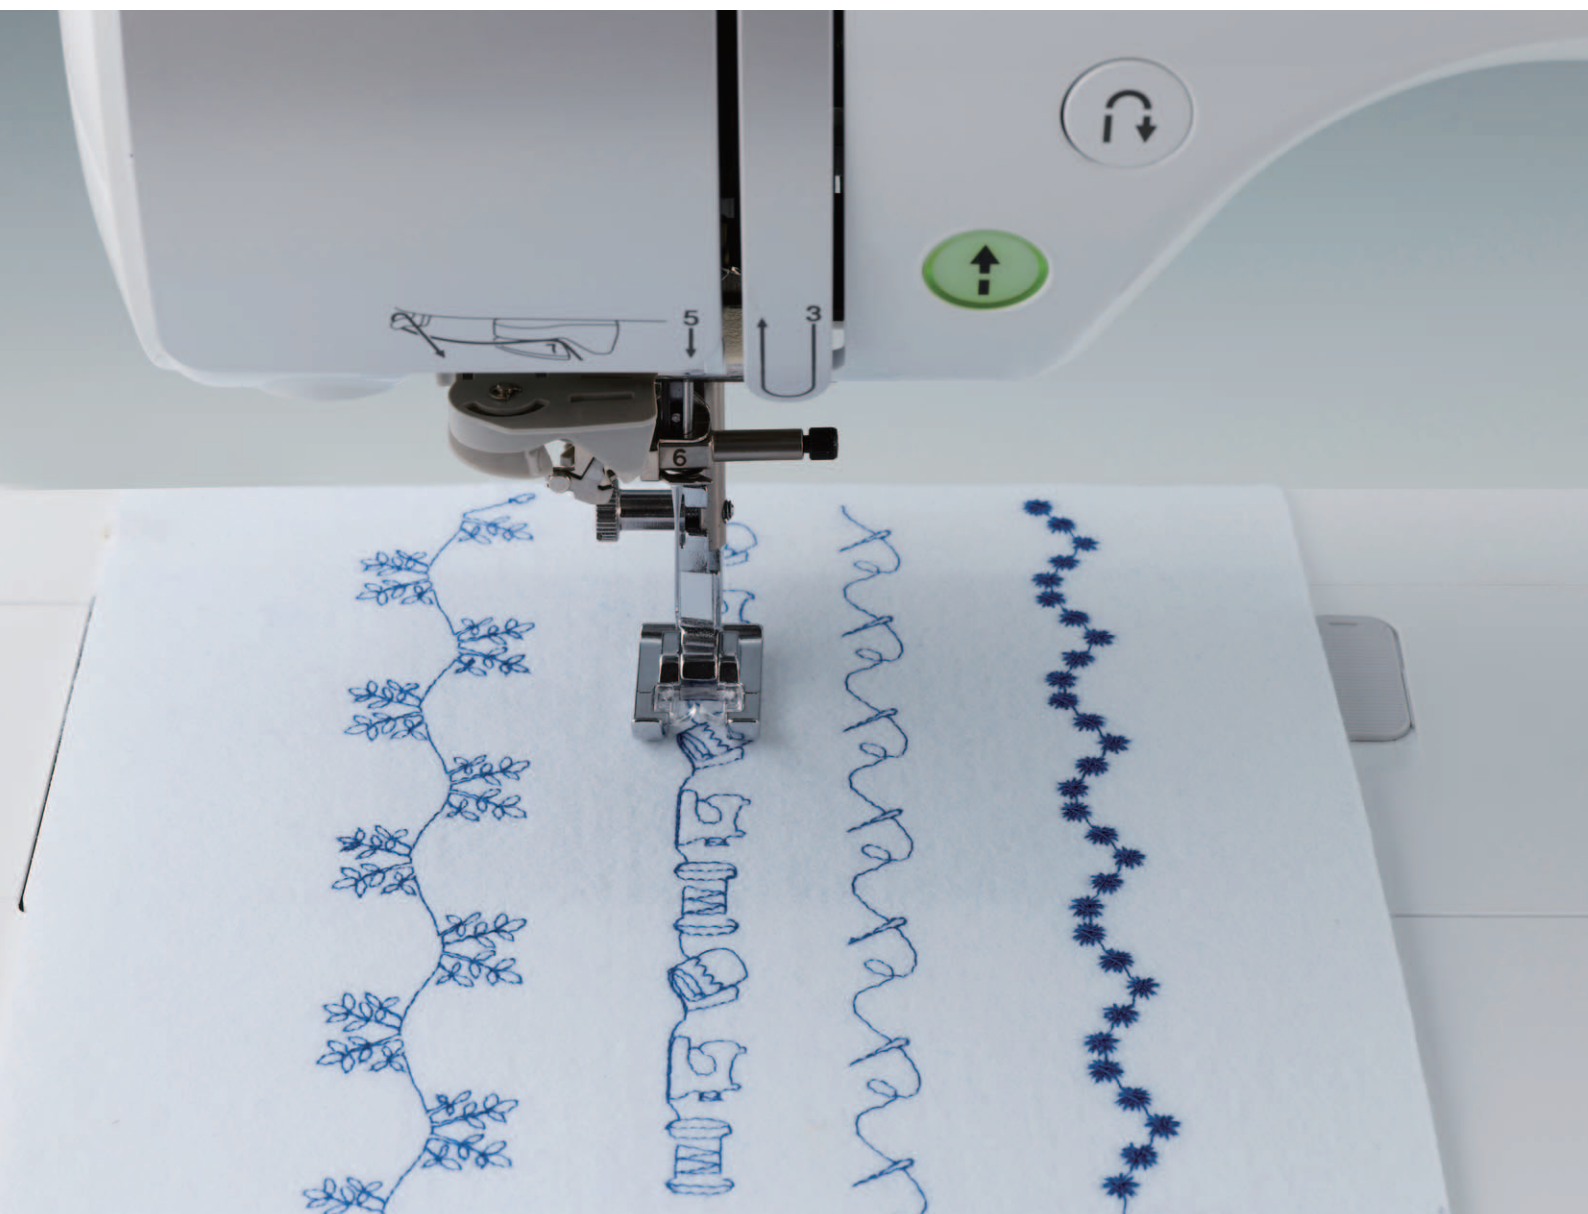

Be sure to read this manual before using the machine.
We recommend that you keep this document nearby for future reference.

INTRODUCTION

Thank you for purchasing this machine.

Before using this machine or attempting any maintenance, carefully read the "IMPORTANT SAFETY INSTRUCTIONS" on this page, and then study the Operation Manual for the correct operation of the various functions. In addition, after you have finished reading this product safety manual, store it where it can quickly be accessed for future reference. Failure to follow these instructions may result in an increased risk of personal injury or damage to property, including through fire, electrical shock, burns or suffocation.

IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions before attempting to use the machine.

⚠ DANGER - To reduce the risk of electric shock

1 Always unplug the machine from the electrical outlet immediately after using, when cleaning, when making any user servicing adjustments mentioned in this manual, or if you are leaving the machine unattended.

⚠ WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons.

2 Always unplug the machine from the electrical outlet when removing covers, or when making any adjustments mentioned in the instruction manual.

- To unplug the machine, switch the machine to the symbol "O" position to turn it off, then grasp the plug and pull it out of the electrical outlet. Do not pull on the cord.
- Plug the machine directly into the electrical outlet. Do not use an extension cord.
- Always unplug your machine if the power is cut.

3 Electrical Hazards:

- This machine should be connected to an AC power source within the range indicated on the rating label. Do not connect it to a DC power source or inverter. If you are not sure what kind of power source you have, contact a qualified electrician.
- This machine is approved for use in the country of purchase only.

4 Never operate this machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or water is spilled on the unit. Return the machine to the nearest authorized Brother dealer for examination, repair, electrical or mechanical adjustment.

- While the machine is stored or in use if you notice anything unusual, such as an odor, heat, discoloration or deformation, stop using the machine immediately and unplug the power cord.
- When transporting the sewing machine, be sure to carry it by its handle. Lifting the sewing machine by any other part may damage the machine or result in the machine falling, which could cause injuries.
- When lifting the sewing machine, be careful not to make any sudden or careless movements, otherwise you may injure your back or knees.

5 Always keep your work area clear:

- Never operate the machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the build up of lint, dust, and loose cloth.
- Do not store objects on the foot controller.
- Do not use extension cords. Plug the machine directly into the electrical outlet.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the machine near a heat source, such as a stove or iron; otherwise, the machine, power cord or garment being sewn may ignite, resulting in fire or an electric shock.
- Do not place this sewing machine on an unstable surface, such as an unsteady or slanted table, otherwise the sewing machine may fall, resulting in injuries.

6 Special care is required when sewing:

- Always pay close attention to the needle. Do not use bent or damaged needles.
- Keep fingers away from all moving parts. Special care is required around the machine needle.
- Switch the sewing machine to the symbol "O" position to turn it off when making any adjustments in the needle area.
- Do not use a damaged or incorrect needle plate, as it could cause the needle to break.
- Do not push or pull the fabric when sewing, and follow careful instruction when free motion stitching so that you do not deflect the needle and cause it to break.

7 This machine is not a toy:

- Your close attention is necessary when the machine is used by or near children.
- The plastic bag that this sewing machine was supplied in should be kept out of the reach of children or disposed of. Never allow children to play with the bag due to the danger of suffocation.
- Do not use outdoors.

8 For a longer service life:

- When using and storing this machine, avoid direct sunlight and high humidity locations. Do not use or store the machine near a space heater, iron, halogen lamp, or other hot objects.
- Use only neutral soaps or detergents to clean the case. Benzene, thinner, and scouring powders can damage the case and machine, and should never be used.
- Always consult the operation manual when replacing or installing any assemblies, the presser feet, needle, or other parts to assure correct installation.

9 For repair or adjustment:

- If the light unit is damaged, it must be replaced by an authorized Brother dealer.
- In the event a malfunction occurs or adjustment is required, first follow the troubleshooting table in the back of the operation manual to inspect and adjust the machine yourself. If the problem persists, please consult your local authorized Brother dealer.

Use this machine only for its intended use as described in the manual.

Use accessories recommended by the manufacturer as contained in this manual.

The contents of this manual and specifications of this product are subject to change without notice.

For additional product information and updates, visit our website at www.brother.com

SAVE THESE INSTRUCTIONS

This machine is intended for household use.

FOR USERS IN COUNTRIES EXCEPT CENELEC COUNTRIES


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR USERS IN CENELEC COUNTRIES

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOR USERS IN THE UK, EIRE, MALTA AND CYPRUS ONLY

IMPORTANT

- In the event of replacing the plug fuse, use a fuse approved by ASTA to BS 1362, i.e. carrying the  mark, rating as marked on plug.
- Always replace the fuse cover. Never use plugs with the fuse cover omitted.
- If the available electrical outlet is not suitable for the plug supplied with this equipment, you should contact your authorized Brother dealer to obtain the correct lead.

Federal Communications Commission (FCC) Supplier's Declaration of Conformity (For U.S.A. Only)

Responsible Party: Brother International Corporation
200 Crossing Boulevard
P.O. Box 6911
Bridgewater, NJ 08807-0911 USA
TEL : (908) 704-1700

declares that the product

Product Name: Brother Sewing Machine
Model Number: XP2

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the authorized Brother dealer or an experienced radio/TV technician for help.
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Important

Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

For Users in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

For Users in Mexico

The operation of this equipment is subject to the following two conditions:

- (1) it is possible that this equipment or device may not cause harmful interference, and
- (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Declaration of Conformity (Europe and Turkey only)

We, Brother Industries, Ltd.

15-1 Naeshiro-cho, Mizuho-ku, Nagoya 467-8561 Japan

declare that this product is in conformity with the essential requirements of all relevant directives and regulations applied within the European Community.

The Declaration of Conformity (DoC) can be downloaded from Brother support website.

Visit support.brother.com and:

- click "Manuals"
- select your model
- click "Declaration of Conformity"
- click "Download"

Your Declaration will be downloaded as a PDF file.

Declaration of Conformity for RE Directive 2014/53/EU (Europe and Turkey only) (Applicable to models with radio interfaces)

We, Brother Industries, Ltd.

15-1 Naeshiro-cho, Mizuho-ku, Nagoya 467-8561 Japan

declare that these products are in conformity with the provisions of the RE Directive 2014/53/EU. A copy of the Declaration of Conformity can be downloaded by following the instructions in the Declaration of Conformity (Europe and Turkey only) section.

Wireless LAN (Models with Wireless LAN function only)

This machine supports wireless interface.

Frequency band(s): 2400-2483.5 MHz

Maximum radio-frequency power transmitted in the frequency band(s): Less than 20 dBm(e.i.r.p)

For Users in Norway

- * This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Alesund on Svalbard.
- * Dette underavsnittet gjelder ikke for det geografiske området innenfor en radius av 20 km fra sentrum av Ny-Ålesund på Svalbard.

For Users in Thailand

This telecommunication equipment conforms to NTC technical requirement.

Trademarks

Secure Digital (SD) Card is a registered trademark or a trademark of SD-3C, LLC.

CompactFlash is a registered trademark or a trademark of Sandisk Corporation.

Memory Stick is a registered trademark or a trademark of Sony Corporation.

SmartMedia is a registered trademark or a trademark of Toshiba Corporation.

MultiMediaCard (MMC) is a registered trademark or a trademark of Infineon Technologies AG.

xD-Picture Card is a registered trademark or a trademark of Fuji Photo Film Co. Ltd.

“Adobe” and “Adobe Reader” are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Artifex, the Artifex logo, MuPDF, Ghostscript, the SmartOffice logo, and the Ghostscript logo are registered trademarks of Artifex Software, Inc.

Portions Copyright © 1998/2016 Artifex Software Inc.

This software is based in part on the work of the Independent JPEG Group.

Portions Copyright © 1998 Soft Horizons.

Portions Copyright © 2005 LuraTech Imaging GmbH. All Rights Reserved.

WPA™ and WPA2™ are trademarks of Wi-Fi Alliance®.

Android and Google Play are trademarks of Google LLC.

App Store is a service mark of Apple Inc.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Open Source Licensing Remarks

This product includes open-source software.


To see the open source licensing remarks, please go to the manual download section on your model's home page of Brother Support website at “ <http://s.brother/cpdab/> ”.

Precaution for Wireless Connection

Make sure you use a router or firewall when connecting your machine to the Internet to protect it against unauthorized access from the Internet.

HOW TO USE THIS MANUAL

The Operation Manuals for this machine consist of the Operation Manual (Sewing) and the Operation Manual (Embroidery). Refer to the appropriate Operation Manual according to your needs. For basic information about, for example, the included accessories or the settings screen, refer to chapter 1 of the Operation Manual (Sewing).

In the screens appearing in the step-by-step instructions, the parts referred to in the operations are marked with . Compare the screen in the directions with the actual screen, and carry out the operation.

If, while using the machine, you experience something you do not understand, or there is a function you would like to know more about, refer to the index at the back of the Operation Manual in conjunction with the table of contents to find the section of the manual you should refer to.

CONTENTS

INTRODUCTION	1	Using the Dual Feed Foot	74
IMPORTANT SAFETY INSTRUCTIONS	1	SEWING	77
Trademarks	6	Sewing a Stitch	77
Open Source Licensing Remarks	6	Sewing Reinforcement Stitches	79
Precaution for Wireless Connection	6	Automatic Reinforcement Stitching.....	79
HOW TO USE THIS MANUAL	7	Automatic Presser Foot Lowering Function and Thread	
Chapter 1 Getting Ready	11	Cutting Function	81
NAMES OF MACHINE PARTS AND THEIR FUNCTIONS	12	Sewing Curves	81
Machine.....	12	Changing Sewing Direction	81
Needle and Presser Foot Section	14	Sewing Heavyweight Fabrics	82
Embroidery Unit.....	15	Sewing Hook-and-Loop Fastener Tape.....	83
Operation Buttons	15	Sewing Lightweight Fabrics.....	84
Using the Flat Bed Attachment	16	Sewing Stretch Fabrics	84
Using the Accessory Case.....	16	STITCH SETTINGS	85
Storing Bobbin Clips.....	16	Setting the Stitch Width	85
Included Accessories.....	17	Setting the Stitch Length.....	86
Accessories that are Included in Some Countries or Regions	20	Setting the "L/R Shift".....	86
Options	21	Setting the Thread Tension.....	87
Using the Multi-purpose Screwdriver	24	USEFUL FUNCTIONS	88
Using the Spool Stand	24	Automatic Thread Cutting.....	88
Assembling the Spool Stand	25	Pivoting	89
TURNING THE MACHINE ON/OFF	26	Using the Knee Lifter	90
Setting Your Machine for the First Time	27	Automatic Fabric Sensor System (Automatic Presser Foot Pressure)	91
LCD SCREEN	28	Needle Position - Stitch Placement	92
Using the Machine Setting Mode Key.....	29	Checking the Needle Location in the Screen.....	92
Sewing Settings	29	Specifying the Sewing End Point	93
General Settings	30	USING THE PROJECTOR	97
Embroidery Settings.....	32	Convenient Sewing Features by Using the Projector	97
Wireless LAN settings.....	33	About the Dual Purpose Stylus.....	97
Setting Functions	33	Installing a Battery in the Dual Purpose Stylus	97
Using the Machine Help Key.....	39	Operating the Projector with the Dual Purpose Stylus.....	98
Using the Operation Guide Function.....	40	Using the Dual Purpose Stylus Holder	98
Using the Sewing Guide Function	41	PROJECTOR FUNCTIONS (UTILITY STITCHES AND CHARACTER/DECORATIVE STITCHES)	99
Playing a Tutorial Video	42	Projection Area of Projector.....	99
Playing MPEG-4 (MP4) Videos	43	Projecting the Stitch Pattern with the Projector	99
Using the Stitch Pattern Explanation Function	44	Selecting a Stitch Pattern with the Dual Purpose Stylus.....	100
Viewing the Operation Manual (PDF File) on the Machine... 45		Editing a Stitch Pattern Selected with the Dual Purpose Stylus.....	100
WIRELESS NETWORK CONNECTION FUNCTIONS	46	Projecting the Guidelines with the Projector	101
Specifying Wireless Network Connection Settings	46	Chapter 3 Utility Stitches	103
Using the Wizard to Set Up the Wireless Network Connection	47	SELECTING UTILITY STITCHES	104
CONNECTING THE ACCESSORY TO THE MACHINE	49	Selecting a Stitch	107
Using USB Media/SD Card (Sold Separately)	49	Saving Your Stitch Settings.....	109
Using a USB Mouse	49	SEWING THE STITCHES	110
Chapter 2 Sewing Basics	51	Straight Stitches	110
LOWER THREADING	52	Dart Seam.....	114
Winding the Bobbin	52	Gathering	115
Setting the Bobbin	58	Flat Fell Seam	115
Pulling Up the Bobbin Thread	59	Pintuck	116
UPPER THREADING	61	Zigzag Stitches.....	118
Upper Threading.....	61	Elastic Zigzag Stitches.....	119
Using the Twin Needle Mode.....	64	Overcasting	120
Using the Spool Stand	66	Quilting.....	123
Using Threads that Unwind Quickly	68	Hand-Look Quilting.....	133
CHANGING THE NEEDLE	69	Blind Hem Stitches	133
Fabric/Thread/Needle Combinations	71	Appliqué.....	136
CHANGING THE PRESSER FOOT	72	Shelltuck Stitches.....	137
Removing the Presser Foot	72	Scallop Stitches.....	137
Attaching the Presser Foot	72	Crazy Quilting.....	138
Attaching the Presser Foot with the Included Adapter..... 73		Smocking Stitches.....	138
		Fagoting.....	139
		Tape or Elastic Attaching	140
		Heirloom	141
		Basting.....	142
		Zigzag Couching	143

One-Step Buttonholes	146	SPECIFICATIONS.....	218
Four-Step Buttonholes.....	150	UPGRADING YOUR MACHINE'S	
Bar Tacks	152	SOFTWARE.....	219
Button Sewing.....	153	Upgrade Procedure Using USB Media.....	219
Eyelet	155	Downloading Update Files Via a Wireless Network	
Multi-directional Sewing		Connection	220
(Straight Stitch and Zigzag Stitch)	155	STITCH SETTING CHART	221
Zipper Insertion	156	INDEX.....	230
Chapter 4 Character/Decorative			
Stitches	161		
SELECTING STITCH PATTERNS	162		
Selecting Decorative Stitch Patterns	164		
Selecting Character Stitch Patterns	164		
SEWING STITCH PATTERNS.....	167		
Sewing Attractive Finishes.....	167		
Basic Sewing.....	167		
Making Adjustments	168		
EDITING STITCH PATTERNS	170		
Changing the Size	173		
Changing the Length			
(for 7mm Satin Stitch Patterns Only).....	173		
Creating a Vertical Mirror Image	173		
Creating a Horizontal Mirror Image	173		
Sewing a Stitch Pattern Continuously	173		
Changing Thread Density (for Large Satin Only).....	174		
Returning to the Beginning of the Stitch Pattern	174		
Checking the Image	175		
COMBINING STITCH PATTERNS	176		
Before Combining.....	176		
Combining Various Stitch Patterns	176		
Combining Large and Small Stitch Patterns	177		
Combining Horizontal Mirror Image Stitch Patterns	178		
Combining Stitch Patterns of Different Length	179		
Making Step Stitch Patterns	179		
USING THE MEMORY FUNCTION.....	182		
Stitch Data Precautions	182		
Saving Stitch Patterns in the Machine's Memory	183		
Saving Stitch Patterns to USB Media	183		
Retrieving Stitch Patterns from the Machine's Memory.....	184		
Recalling from USB Media.....	185		
Managing Saved File	186		
Transferring Stitch Patterns to the Machine			
(PE-DESIGN to this machine)	186		
Chapter 5 MY CUSTOM STITCH	187		
DESIGNING A STITCH	188		
ENTERING STITCH DATA.....	190		
Editing Stitch Stored in the Machine.....	194		
USING STORED CUSTOM STITCHES.....	196		
Storing Custom Stitches in Your List	196		
Retrieving Stored Stitches.....	197		
Chapter 6 Appendix	199		
CARE AND MAINTENANCE.....	200		
Restrictions on Oiling	200		
Precautions on Storing the Machine	200		
Cleaning the LCD Screen	200		
Cleaning the Machine Casing	200		
Cleaning the Race	200		
Cleaning the Cutter in the Bobbin Case Area	202		
About the Maintenance Message	202		
TROUBLESHOOTING.....	203		
Frequent Troubleshooting Topics	203		
Upper Thread Is Too Tight	203		
Tangled Thread on Wrong Side of Fabric	204		
Incorrect Thread Tension	206		
Fabric Is Caught in the Machine and Cannot be			
Removed	207		
List of Symptoms.....	210		
ERROR MESSAGES	215		



Chapter *1* Getting Ready

Be sure to install the latest software.


Refer to “UPGRADING YOUR MACHINE’S SOFTWARE” on page 219.

NAMES OF MACHINE PARTS AND THEIR FUNCTIONS

The names of the various parts of the machine and their functions are described below. Before using the machine, carefully read these descriptions to learn the names of the machine parts.

Machine

■ Front View

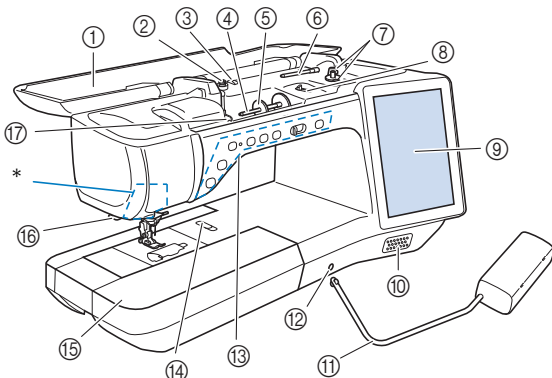

- ① **Top cover**
Open the top cover when threading the machine or winding the bobbin.

⚠ CAUTION

- Do not place any object weighing 1 kg or more on the top cover, otherwise the cover may be damaged.


- ② **Pretension disk**
Pass the thread around the pretension disk when winding the bobbin thread. (page 52)
- ③ **Thread guide for bobbin winding**
Pass the thread through this thread guide when winding the bobbin thread. (page 52)
- ④ **Spool pin**
Place a spool of thread on the spool pin. (page 61)
- ⑤ **Spool cap**
Use the spool cap to hold the spool of thread in place. (page 61)
- ⑥ **Supplemental spool pin**
Use this spool pin to wind the bobbin thread, or to sew with the twin needle. (page 52, 64)
- ⑦ **Bobbin winder**
Use the bobbin winder when winding the bobbin. (page 52)
- ⑧ **Bobbin winding slider**
Adjust the amount of thread wound onto the bobbin. (page 54)
- ⑨ **LCD (liquid crystal display)**
Settings for the selected stitch and error messages appear in the LCD. (page 28)
- ⑩ **Speaker**
- ⑪ **Knee lifter**
Use the knee lifter to raise and lower the presser foot. (page 90)
- ⑫ **Knee lifter slot**
Insert the knee lifter into the slot. (page 90)
- ⑬ **Operation buttons (7 buttons) and sewing speed controller**
Use these buttons and the slide to operate the machine. (page 15)
- ⑭ **Needle plate lever**
Slide the lever toward you to remove the needle plate. (page 200)

- ⑮ **Flat bed attachment with accessory compartment**
Store presser feet and bobbins in the accessory compartment of the flat bed attachment. When sewing cylindrical pieces, remove the flat bed attachment. (page 16)
- ⑯ **Thread cutter**
Pass the threads through the thread cutter to cut them. (page 63)
- ⑰ **Thread guide plate**
Pass the thread around the thread guide plate when threading upper thread. (page 61)
- * Camera and projector (built-in)

⚠ CAUTION

- Do not touch the camera or projector. Otherwise, it will not display properly.

■ Right-side/Rear View

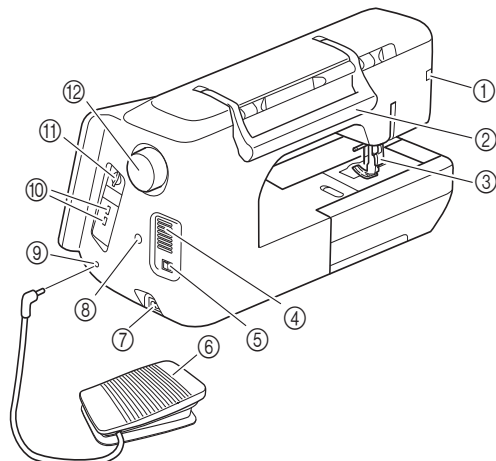

- ① **Connector for the presser foot**
Connect the dual feed foot or embroidery foot with LED pointer (sold separately). (page 74)
- ② **Handle**
Carry the machine by its handle when transporting the machine.
- ③ **Presser foot lever**
Raise and lower the presser foot lever to raise and lower the presser foot. (page 72)
- ④ **Air vent**
The air vent allows the air surrounding the motor to circulate. Do not cover the air vent while the machine is being used.
- ⑤ **Main power switch**
Use the main power switch to turn the machine ON and OFF. (page 26)
- ⑥ **Foot controller**
Use the foot controller to operate the machine.
- ⑦ **Power cord receptacle**
Insert the power cord into the machine receptacle. (page 26)
- ⑧ **Dual purpose stylus holder connector**
Connect the included dual purpose stylus holder. (page 98)
- ⑨ **Foot controller jack**
Insert the foot controller plug into its jack on the machine. (page 78)

⑩ USB port

In order to send stitch patterns and embroidery patterns from/to USB media, plug the USB media directly into the USB port.


⑪ SD card slot

Insert an SD card into the SD card slot in order to import/export stitch patterns and embroidery patterns.

⑫ Handwheel

Rotate the handwheel toward you (counterclockwise) to raise and lower the needle. The wheel should be turned toward the front of the machine.


Needle and Presser Foot Section

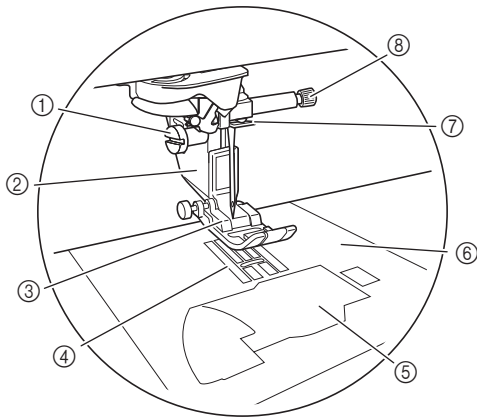

- ① **Presser foot holder screw**
Use the presser foot holder screw to hold the presser foot holder in place. (page 73)
- ② **Presser foot holder**
The presser foot is attached to the presser foot holder. (page 72)
- ③ **Presser foot**
The presser foot consistently applies pressure to the fabric as sewing takes place. Attach the appropriate presser foot for the selected stitch. (page 72)
- ④ **Feed dogs**
The feed dogs feed the fabric in the sewing direction.
- ⑤ **Bobbin cover**
Open the bobbin cover to set the bobbin. (page 58, 119)
- ⑥ **Needle plate**
The needle plate is marked with guides to help sew straight seams. (page 112)
Remove the needle plate to clean the race. (page 113, 200)
- ⑦ **Needle bar thread guide**
Pass the upper thread through the needle bar thread guide. (page 61)
- ⑧ **Needle clamp screw**
Use the needle clamp screw to hold the needle in place. (page 73)


Measurements on the needle plate and the bobbin cover (with mark)

The measurements on the bobbin cover and needle plate are references for stitch patterns with a left or middle (center) needle position.

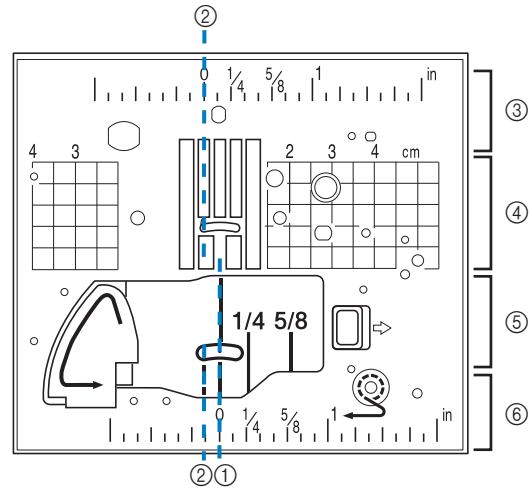

- ① **For stitches with a middle (center) needle position**
- ② **For stitches with a left needle position**
- ③ **Left needle position on the needle plate <inch>**
- ④ **Left needle position on the needle plate <cm>**
- ⑤ **Middle (center) needle position on the bobbin cover (with mark) <inch>**
- ⑥ **Middle (center) needle position on the needle plate <inch>**

Embroidery Unit

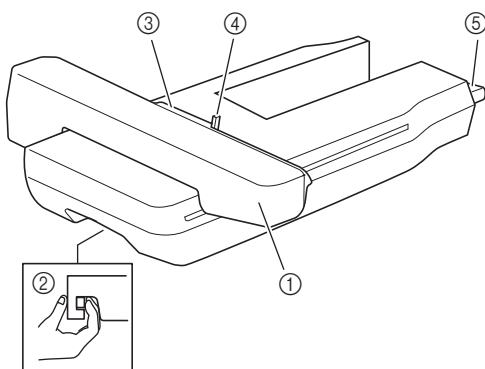


- ① **Carriage**
The carriage moves the embroidery frame automatically when embroidering.
- ② **Release lever (located under the embroidery unit)**
Press the release lever to remove the embroidery unit.
- ③ **Embroidery frame holder**
Insert the embroidery frame into the embroidery frame holder to hold the frame in place.
- ④ **Frame-securing lever**
Press the frame-securing lever down to secure the embroidery frame.
- ⑤ **Embroidery unit connection**
Insert the embroidery unit connection into the connection port when attaching the embroidery unit.

⚠ CAUTION

- Before inserting or removing the embroidery unit, turn the main power to off.
- After the embroidery frame is set in the frame holder, be sure the frame-securing lever is correctly lowered.

Operation Buttons

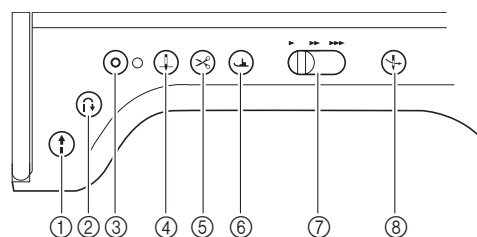

- ① **“Start/Stop” button** Press this button and the machine will sew a few stitches at a slow speed and then begin sewing at the speed set by the sewing speed controller. Press the button again to stop the machine. Hold the button in to sew at the machine’s slowest speed. The button changes color according to the machine’s operation mode.


Green: The machine is ready to sew or is sewing.
Red: The machine cannot sew.
- ② **“Reverse Stitch” button** For straight, zigzag, and elastic zigzag stitch patterns that take reverse stitches, the machine will sew reverse stitches at low speed only while holding down the “Reverse Stitch” button. The stitches are sewn in the opposite position. For other stitches, use this button to sew reinforcement stitches at the beginning and end of sewing. Press and hold this button, and the machine sews 3 stitches in the same spot and stops automatically. (page 79)
- ③ **“Reinforcement Stitch” button** Use this button to sew a single stitch repeatedly and tie-off. For character/decorative stitches, press this button to end with a full stitch instead of at a mid-point. The LED light beside this button lights up while the machine is sewing a full motif, and automatically turns off when the sewing is stopped. (page 79) In addition, use this button to sew reinforcement stitches before cutting the thread when changing the bobbin thread in embroidery mode. This will prevent stitches from unraveling.
- ④ **“Needle Position” button** Use this button when changing sewing direction or for detailed sewing in small areas. Press this button to raise or lower the needle position. With this button, you can lower and raise the needle to sew a single stitch.
- ⑤ **“Thread Cutter” button** Press this button after sewing to automatically trim the excess thread.
- ⑥ **“Presser Foot Lifter” button** Press this button to lower the presser foot and apply pressure to the fabric. Press this button again to raise the presser foot.
- ⑦ **Sewing Speed controller** Use this controller to adjust the sewing speed. Move the slide to the left to sew at slower speeds. Move the slide to the right to sew at higher speeds.
- ⑧ **“Automatic Threading” button** Use this button to automatically thread the needle.

⚠ CAUTION

- Do not press the thread cutter button after the threads have been cut. The needle may break and threads may become tangled, or damage to the machine may occur.

Using the Flat Bed Attachment


Pull the top of the flat bed attachment to open the accessory compartment.

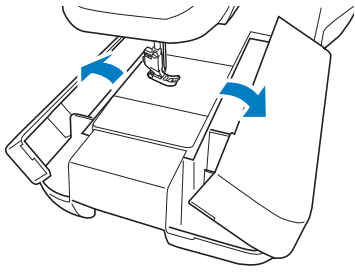

Using the Accessory Case

Opening the Accessory Case

Slide the latches on the front of the accessory case outward to open it.

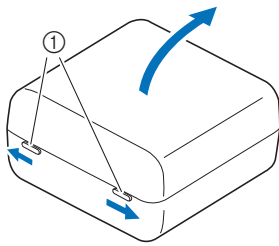


① Latches

Using the Accessory Trays

Three presser foot storage trays are stored in the included accessory case.


For your convenience, a presser foot storage tray can be stored in the accessory compartment of the flat bed attachment.

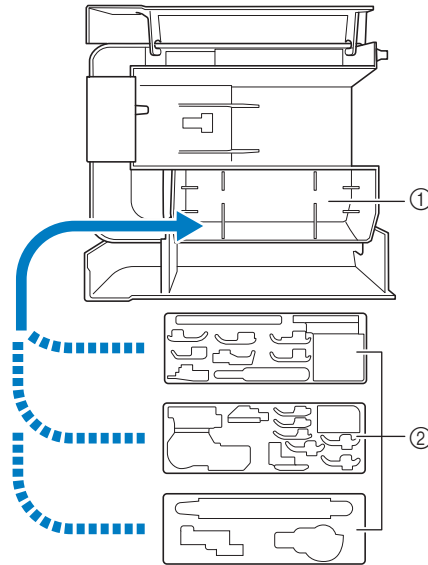

- ① Presser foot storage space of the flat bed attachment
- ② Presser foot storage trays


Storing Bobbin Clips

Bobbin clips can be stored inside of the accessory case cover.

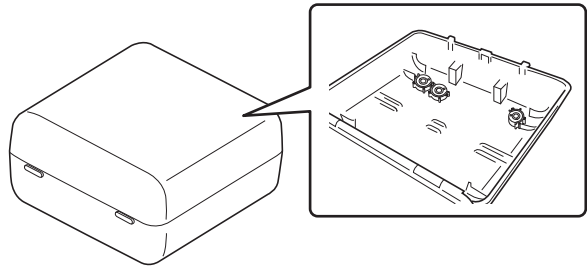










Memo

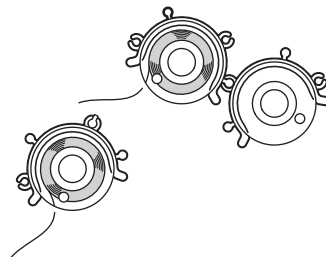



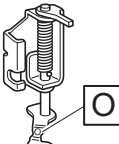
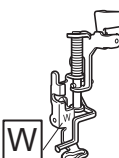
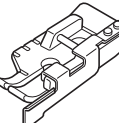
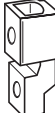
- Placing bobbin clips on bobbins helps prevent the thread from unwinding from the bobbin. In addition, snapping bobbin clips together allows the bobbins to be conveniently stored and prevents them from rolling around if they are dropped.


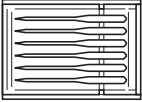
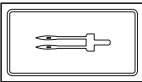

 
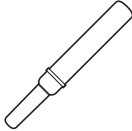




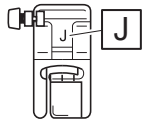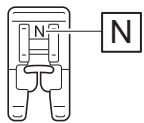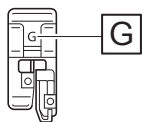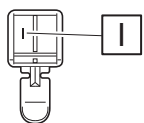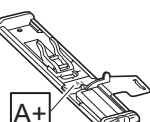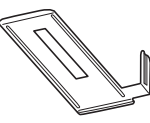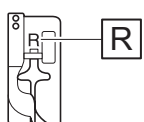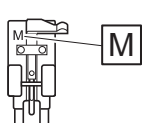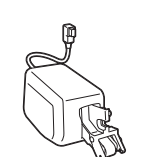




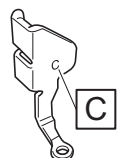






Included Accessories

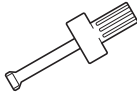
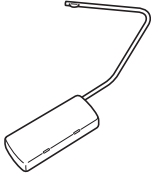








After opening the box, check that the following accessories are included. If any item is missing or damaged, contact your authorized Brother dealer.



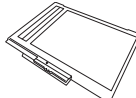



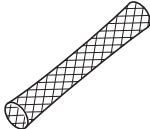



	Part Name
	Part Code
1. 	Zigzag foot "J" (on machine)
	XF3022-001
2. 	Monogramming foot "N"
	X53840-351
3. 	Overcasting foot "G"
	XC3098-051
4. 	Zipper foot "I"
	X59370-051
5. 	Buttonhole foot "A+"
	XH2665-101
6. 	Buttonhole foot stabilizer
	XH1726-201
7. 	Blind stitch foot "R"
	X56409-051
8. 	Button fitting foot "M"
	130489-001
9. 	Dual feed foot
	SA196 (Americas) DF1: XF4166-001 (Europe) DF1AP: XF6843-001 (other area)





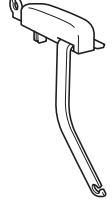
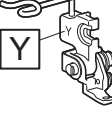


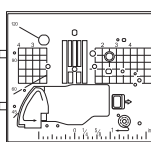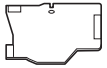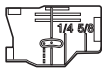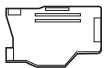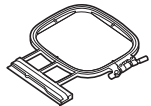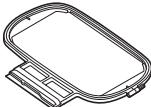
	Part Name
	Part Code
10. 	Regular dual feed foot
	XF4419-001
11. 	Straight stitch foot
	SA167 (Americas) F042N: XG6615-001 (Europe) F042N: XC1973-052 (other area)
12. 	Free motion quilting foot "C"
	XF4737-001
13. 	Free motion echo quilting foot "E"
	XE0766-001
14. 	Free motion open toe quilting foot "O"
	XF4873-001
15. 	Embroidery foot "W"
	XF4012-101
16. 	1/4" quilting foot with guide
	SA185 (Americas) F057: XC7416-252 (Europe) F057: 115C05E7005 (other area)
17. 	Adapter
	SA131 (Americas) F010N: XG2001-001 (Europe) F010AP: 115Z05E7004 (other area)

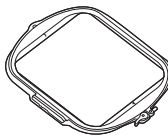	Part Name
	Part Code
18.	Screw (small)
	XA4813-051
19.	Needle set 75/11 2 needles 90/14 2 needles 90/14 2 needles: Ball point needle (gold colored)
	XE4962-001
20.	Twin needle 2.0/11 needle
	XE4963-001
21.	Ball point needle set 75/11 2 needles: Ball point needle for embroidery HAX130EBBR
	XD0705-151
22.	Bobbin x 10 (One is on machine.)
	SA156 (Americas) SFB: XA5539-151 (Europe) SFB: 115J05E7001 (other area)
23.	Seam ripper
	XF4967-001
24.	Scissors
	XF2052-001
25.	Cleaning brush
	X59476-051
26.	Eyelet punch
	XZ5051-001
27.	Screwdriver (small)
	X55468-051

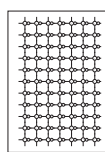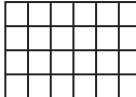	Part Name
	Part Code
28.	Screwdriver (large)
	XC4237-021
29.	Multi-purpose screwdriver
	SAMDRIVER1 (U.S.A) / SAMDRIVER1C (Canada) MDRIVER1: XG1298-001 (Europe) MDRIVER1AP: 115Z05E7003 (other area)
30.	Spool cap (small)
	130013-157
31.	Spool cap (medium) x 2 (One is on machine.)
	X55260-156
32.	Spool cap (large)
	130012-057
33.	Thread spool insert (mini king thread spool)
	XA5752-121
34.	Spool stand
	XH1606-001 Refer to "Using the Spool Stand" on page 24.
35.	Bobbin clip x 10
	XE3060-001
36.	Spool felt (on machine)
	X57045-051
37.	Spool net x 2
	XA5523-050

	Part Name
	Part Code
38.	Embroidery needle plate cover
	XE5131-001
39.	Knee lifter
	SA599 (Americas) KL1: XG6723-001 (Europe) KL1: 115Z05E700C (other area)
40.	Alternate bobbin case (no color on the screw)
	XC8167-651
41.	Standard bobbin case (green marking on the screw) (on machine)
	XE5342-101
42.	Straight stitch needle plate
	XH1569-001
43.	Cord guide bobbin cover (with single hole)
	XE5992-001
44.	Bobbin cover (with mark)
	XH3126-001
45.	Bobbin cover (on machine)
	XE8878-001
46.	Embroidery frame (medium) H 100 mm × W 100 mm (H 4 inches × W 4 inches)
	SA438 (Americas) EF74: XC8480-152 (Europe) EF74: 115D05E7005 (other area)
47.	Embroidery frame (large) H 180 mm × W 130 mm (H 7 inches × W 5 inches)
	SA439 (Americas) EF75: XC8481-152 (Europe) EF75: 115D05E7001 (other area)

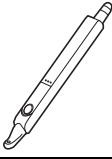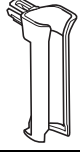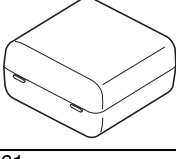	Part Name
	Part Code
48.	Embroidery frame H 272 mm × W 272 mm (H 10-5/8 inches × W 10-5/8 inches)
	XH4014-001
49.	Embroidery frame (LL) H 408 mm × W 272 mm (H 16 inches × W 10-5/8 inches)
	XH1466-001
50.	Scanning frame
	XF9321-001
51.	Magnet × 6
	XF9325-001
52.	Embroidery bobbin thread
	SA-EBT (Americas) EBT-CEN: X81164-001 (Europe) EBT-CEN: 115G05E7001 (other area)
53.	Embroidery positioning sticker sheets × 2
	SAEPS2 (U.S.A.) / SAEPS2C (Canada) EPS2: XG6749-001 (Europe) EPS2: 115Z05E700E (other area)
54.	White calibration stickers (solid)
	XE7916-001
55.	Stabilizer material
	SA519 (Americas) BM3: XG6683-001 (Europe) BM3: 115Z05E7007 (other area)
56.	Grid sheet set
	X81277-150
57.	Chalk pencil
	XE8568-001

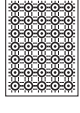	Part Name
	Part Code
58. 	Dual purpose stylus
	XH1791-001 XH1807-001 (Europe)
59. 	Dual purpose stylus holder
	XH1805-001
60. 	Accessory case
	D01MBJ-001
61. 	Couching Dual Feed Foot
	XF9332-101
62. 	Yarn guide for sewing couching
	XG0786-101
63. 	Embroidery couching foot "Y"
	XH1815-101
64. 	Yarn guide for embroidery couching
	XH3803-001
65. 	Yarn Threader
	XF7187-001
66. 	End Point Stickers (4 sheets, 243 stickers per sheet) SAEPS3 (Americas) ENDPS1: D01M32-001 (Europe) ENDPS1AP: 115Z05E700R (other areas)

Following documents can be downloaded at Brother Support website:

- Operation Manual (Sewing)
- Operation Manual (Embroidery)
- Embroidery Design Guide
- DISNEY DESIGN GUIDE

<http://s.brother/cpdab/>



Memo

- Always use accessories recommended for this machine.
- The screw for the presser foot holder is available through your authorized Brother dealer (Part code XA4813-051).




Accessories that are Included in Some Countries or Regions

If these accessories are not included with your machine, these are available as optional accessories.



Memo

- (For U.S.A. only)
Foot controller: Model T
This foot controller can be used on the machine with product code 882-W30. The product code is mentioned on the machine rating plate.










	Part Name
	Part Code
1. 	Bobbin center pin and instruction sheet
	XF5048-001
2. 	Dust Cover
	XG1096-001
3. 	Foot controller
	XD0501-151 (Europe) XC8816-051 (other areas)



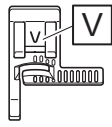
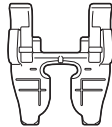
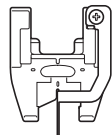
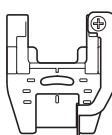
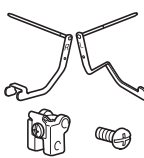
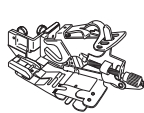
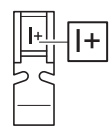

Options

The following are available as optional accessories to be purchased separately from your authorized Brother dealer.

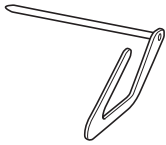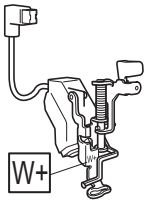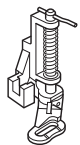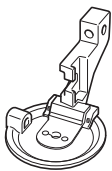	Part Name
	Part Code
1.	Embroidery frame set (small) H 20 mm x W 60 mm (H 1 inch x W 2-1/2 inches)
	SA437 (Americas) EF73: XG6663-001 (Europe) EF73: 115D05E700W (other area)
2.	Embroidery frame set (square) H 150 mm x W 150 mm (H 6 inches x W 6 inches)
	SA448 (U.S.A.) SA448C (Canada) SEF150: XG6761-001 (Europe) SEF150: 115D05E000E (other area)
3.	Embroidery frame set (quilt) H 200 mm x W 200 mm (H 8 inches x W 8 inches)
	SA446 (U.S.A.) SA446C (Canada) EF91: XG6715-001 (Europe) EF91: XE5068-101 (other area)
4.	Embroidery frame set (extra large) H 300 mm x W 200 mm (H 12 inches x W 8 inches)
	SA447 (Americas) EF92: XG6717-001 (Europe) EF92: 115D05E700Z (other area)
5.	Embroidery frame set (extra large) H 260 mm x W 160 mm (H 10-1/4 inches x W 6-1/4 inches)
	SA441 (Americas) EF81: XG6673-001 (Europe) EF81: 115D05E700Y (other area)
6.	Embroidery frame set (super large) H 360 mm x W 240 mm (H 14 inches x W 9-1/2 inches)
	Embroidery frame: XF9309-101 Embroidery sheet: XF9314-001
7.	Border embroidery frame H 300 mm x W 100 mm (H 12 inches x W 4 inches)
	SABF6200D1 (U.S.A.) SABF6200D1C (Canada) BF3: XG6763-001 (Europe) BF3: 115D05E000N (other area)
8.	Border embroidery frame set H 180 mm x W 100 mm (H 7 inches x W 4 inches)
	SABF6000D (U.S.A.) SABF6000DC (Canada) BF2: XG6709-001 (Europe) BF2: XE5059-001 (other area)

	Part Name
	Part Code
9.	Embroidery bobbin thread (white)
	SA-EBT (Americas) EBT-CEN: X81164-001 (Europe) EBT-CEN: 115G05E7001 (other area)
	Embroidery bobbin thread (black)
10.	Embroidery bobbin thread (black)
	SA-EBT999 (Americas) EBT-CEBN: XG6643-001 (Europe) EBT-CEBN: XC5520-001 (other area)
	10 spool stand
11.	10 spool stand
	SA561 (U.S.A.) SA561C (Canada) TS5: XG6765-001 (Europe) TS5: 115L05E7003 (other area)
	Wide table
12.	Wide table
	SAWXP1 (U.S.A.) SAWXP1C (Canada) WT16: XH3620-001 (Europe) WT16AP: 115K05E700J (other area)
	Stabilizer material
13.	Stabilizer material
	SA519 (Americas) BM3: XG6683-001 (Europe) BM3: 115Z05E7007 (other area)
	Water soluble stabilizer
14.	Water soluble stabilizer
	SA520 (Americas) BM5: XG6681-001 (Europe) BM5: XE0615-001 (other area)
	Seam guide
15.	Seam guide
	SA538 (Americas) SG1: XC8483-052 (Europe) SG1: 115Z05E7002 (other area)
	Walking foot
16.	Walking foot
	SA140 (Americas) F033N: XG6623-001 (Europe) F033N: 115C05E7015 (other area)
	Side cutter foot
17.	Side cutter foot
	SA177 (Americas) F054: XC3879-152 (Europe) F054: 115C05E7008 (other area)
	Side cutter foot

	Part Name
	Part Code
16.	 <p>Quilting guide</p> <p>SA132 (Americas) F016N: XC2215-052 (Europe) F016N: 115Z05E7001 (other area)</p>
17.	 <p>Embroidery foot "W+" with LED pointer</p> <p>SA197 (U.S.A.) SA197C (Canada) FLED1: XF4168-001 (Europe) FLED1AP: 115C05E700W (other area)</p>
18.	 <p>Free-motion quilting foot</p> <p>SA129 (Americas) F005N: XC1948-052 (Europe) F005N: 115C05E7002 (other area)</p>
19.	 <p>Couching foot</p> <p>SA199V (U.S.A.) SA199VC (Canada) F073: XF8185-001 (Europe) F073AP: XF8188-001 (other area)</p>
20.	 <p>Multi-Function Foot controller</p> <p>SAMFFC (U.S.A.) SAMFFCC (Canada) MFFC1: XG6777-001 (Europe) MFFC1OC: 115F05E7002 (other area)</p>
21.	 <p>Circular attachment</p> <p>SACIRC1 (Americas) SACIRC1C (Canada) CIRC1: XG6705-001 (Europe) CIRC1: 115Y05E7003 (other area)</p>
22.	 <p>Stitch in the ditch foot</p> <p>SA191 (Americas) F065: XF2339-001 (Europe) F065: 115C05E700C (other area)</p>
23.	 <p>Edge joining foot</p> <p>SA184 (Americas) F056: XC6441-352 (Europe) F056: 115C05E700K (other area)</p>
24.	 <p>Vertical spool pin</p> <p>XC8619-052</p>

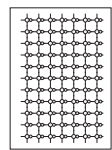	Part Name
	Part Code
25.	 <p>Embroidery positioning sticker sheets</p> <p>SAEPS2 (U.S.A.) / SAEPS2C (Canada) EPS2: XG6749-001 (Europe) EPS2: 115Z05E700E (other area)</p>
26.	 <p>Free motion guide grip</p> <p>SAFMGRIP (Americas) FMG2: XF6266-001 (Europe) FMG2AP: XF6267-001 (other area)</p>
27.	 <p>Vertical stitch alignment foot "V"</p> <p>SA189 (Americas) F063: XG6721-001 (Europe) F063: XE5224-001 (other area)</p>
28.	 <p>Open toe for dual feed foot</p> <p>SA195 (Americas) F070: XG6773-001 (Europe) F070: 115C05E7011 (other area)</p>
29.	 <p>Stitch in the Ditch Dual Feed Foot</p> <p>SA204 (U.S.A.) SA204C (Canada) F075: XG3155-001 (Europe) F075AP: 115C05E700Y (other area)</p>
30.	 <p>1/4 inch Guide Dual Feed Foot</p> <p>SA205 (U.S.A.) SA205C (Canada) F076: XG4868-001 (Europe) F076AP: 115C05E701D (other area)</p>
31.	 <p>Dual Feed Quilting Guide</p> <p>SA206 (U.S.A.) SA206C (Canada) F077: XG4879-001 (Europe) F077AP: 115Z05E7008 (other area)</p>
32.	 <p>Ruffler foot</p> <p>SA565 (Americas) SA565C (Canada) F078: 115C05E002C (Europe) F078AP: 115C05E702C (other area)</p>
33.	 <p>Narrow Zipper Foot "I+"</p> <p>SA208 (U.S.A.) SA208C (Canada) F079: 115C05E002D (Europe) F079AP: 115C05E702D (other area)</p>
34.	 <p>Bi-level Foot (Right)</p> <p>SA103 (U.S.A.) SA103C (Canada) F081: 115C05E002F (Europe) F081AP: 115C05E702F (other area)</p>

	Part Name
	Part Code
35.	Bi-level Foot (Left) SA104 (U.S.A.) SA104C (Canada) F082: 115C05E002G (Europe) F082AP: 115C05E702G (other area)
36.	Concealed Zipper Foot "K" SA102 (U.S.A.) SA102C (Canada) F080: 115C05E002E (Europe) F080AP: 115C05E702E (other area)
37.	Embroidery frame sheet (medium) H 100 mm × W 100 mm (H 4 inches × W 4 inches) XC8357-051
38.	Embroidery frame sheet (large) H 180 mm × W 130 mm (H 7 inches × W 5 inches) XC8359-051
39.	Embroidery frame sheet H 272 mm × W 272 mm (H 10-5/8 inches × W 10-5/8 inches) XH4412-001
40.	Embroidery frame sheet (LL) H 408 mm × W 272 mm (H 16 inches × W 10-5/8 inches) XH1825-001
41.	Embroidery frame (quilt) H 240 mm × W 240 mm (H 9-1/2 inches × W 9-1/2 inches) XG5558-001
42.	Embroidery frame sheet (quilt) H 240 mm × W 240 mm (H 9-1/2 inches × W 9-1/2 inches) XG5566-001
43.	Bobbin Work Kit SABWRK1 (U.S.A.) SABWRK1C (Canada) BWRK1: XG6745-001 (Europe) BWRK1: XE9099-001 (other area)
44.	Magnetic sash frame H 360 mm × W 180 mm (H 14 inches × W 7 inches) SAMS360 (Americas) XPMSF360: D01M3G-001 (Europe) XPMSF360AP: 115D05E701A (other area)

	Part Name
	Part Code
45.	Magnifying lens SAML (Americas) ML1: D01M2P-001 (Europe) ML1AP: 115Z05E700P (other area)
46.	Dynamic walking foot set SA101 (Americas) F085: D01MRB-001 (Europe) F085AP: 115C05E702M (other area)

 **Memo**

- All specifications are correct at the time of printing. Please be aware that some specifications may change without notice.


 **Note**

- Visit your nearest authorized Brother dealer for a complete listing of optional accessories for your machine.



Using the Multi-purpose Screwdriver

Since the screwdriver can be changed to three different positions, it can be extremely useful for the various machine preparations. With this machine, position "1" and position "3" are used.


■ Position "1"

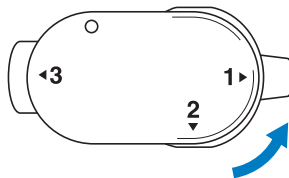


You can install/remove the presser foot holder, needle clamp screw.

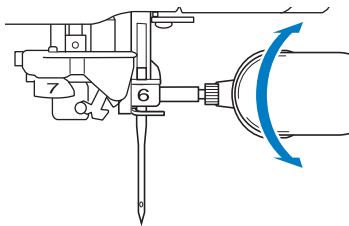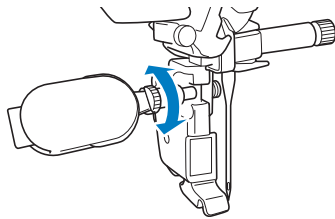

■ Position "3"

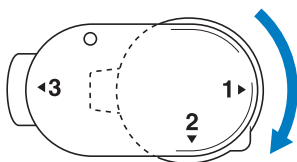

The multi-purpose screwdriver can be positioned over the screw on the embroidery frame to tighten the screw after hooping the fabric or when removing the fabric.

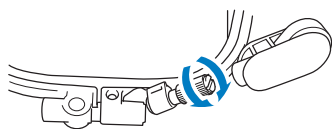


Note

- When rotating the multi-purpose screwdriver, do not forcefully rotate it in the direction that it does not rotate; otherwise, it may break.

Using the Spool Stand

The included spool stand is useful when using thread spools with a large diameter (cross-wound thread). The spool stand can hold two spools of thread.

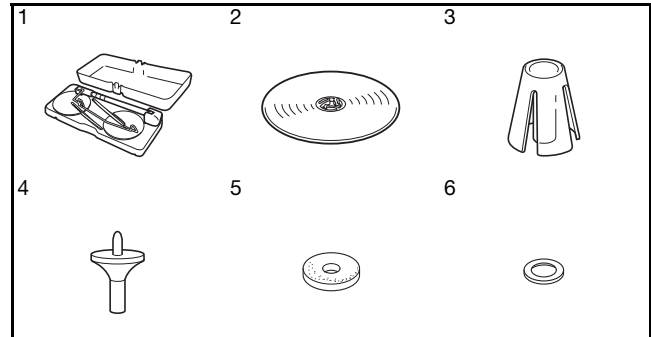


No.	Part Name	Part Code
1	Spool stand	XH1606-001
2	Spool cap (XL) × 2	XE0779-001
3	Spool holder × 2	XA0679-050
4	Spool cap base × 2	XE0780-001
5	Spool felt × 2	XC7134-051
6	Ring × 4	026030-136

* No.2 to No.6 are included in a plastic bag.

⚠ CAUTION

- Do not lift the handle of the machine while the spool stand is installed.
- Do not push or pull the telescopic thread guide or spool pins with extreme force, otherwise damage may result.
- Do not place any object other than spools of thread on the spool support.
- Do not try to wind thread on the bobbin while sewing using the spool stand.

■ Warning Label

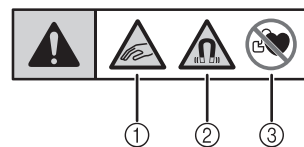


This product contains magnets.

- ① Be careful not to pinch your fingers or any objects between the spool stand and the upper cover of the machine.
- ② Be sure to keep the magnets away from precision electronics, computer disks, credit cards with a magnetic stripe, etc.
- ③ Do not use the spool stand if you have a pacemaker.


Assembling the Spool Stand

- 1 Hold in the tabs on the spool stand and remove the lid.

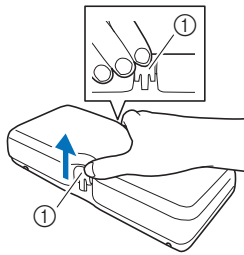


① Tabs

- 2 Raise the telescopic thread guide shaft and the two spool pins.

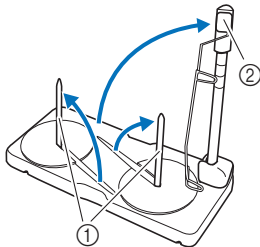


① Spool pins
② Telescopic thread guide shaft


- 3 Fully extend the telescopic thread guide shaft until the two internal stoppers snap into place.

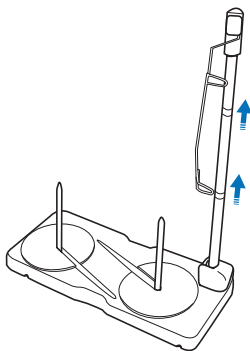

- 4 Turn the thread guide counterclockwise.

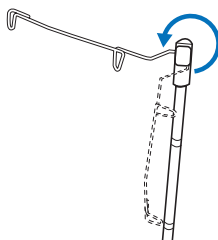

- 5 Open the upper cover of the machine, and then place the spool stand on the upper cover with the notches in the spool stand aligned with the tabs on the upper cover.

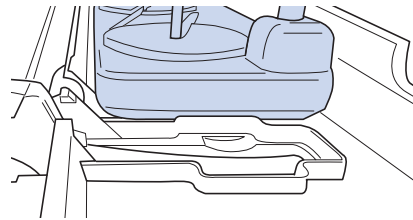

Note

- Make sure that the spool stand is firmly secured. Otherwise, the spool stand may fall during sewing.
- Do not place any object weighing 1 kg or more on the top cover. The weight of the spool stand with its lid removed is about 280 g.



Memo

- For details on winding the bobbin using the spool stand, refer to page 56.
- For details on upper threading using the spool stand, refer to page 66.

TURNING THE MACHINE ON/OFF


WARNING

- Use only regular household electricity for the power source. Using other power sources may result in fire, electric shock, or damage to the machine.
- Make sure that the plugs on the power cord are firmly inserted into the electrical outlet and the power cord receptacle on the machine. Otherwise, a fire or electric shock may result.
- Do not insert the plug on the power cord into an electrical outlet that is in poor condition.
- Turn the main power to OFF and remove the plug in the following circumstances:
 - When you are away from the machine
 - After using the machine
 - When the power fails during use
 - When the machine does not operate correctly due to a bad connection or a disconnection
 - During electrical storms

CAUTION


- Use the power cord included with this machine.
- Do not use extension cords or multi-plug adapters with many other appliances plugged in to them. Fire or electric shock may result.
- Do not touch the plug with wet hands. Electric shock may result.
- When unplugging the machine, always turn the main power to OFF first. Always grasp the plug to remove it from the outlet. Pulling on the cord may damage the cord, or lead to fire or electric shock.
- Do not allow the power cord to be cut, damaged, modified, forcefully bent, pulled, twisted, or bundled. Do not place heavy objects on the cord. Do not subject the cord to heat. These things may damage the cord, or cause fire or electric shock. If the cord or plug is damaged, take the machine to your authorized Brother dealer for repairs before continuing use.
- Unplug the power cord if the machine is not to be used for a long period of time. Otherwise, a fire may result.
- When leaving the machine unattended, either the main switch of the machine should be turned to OFF or the plug must be removed from the socket-outlet.
- When servicing the machine or when removing covers, the machine must be unplugged.
- For U.S.A only
This appliance has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.
If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

- 1** Insert the power supply cord into the power cord receptacle, then insert the plug into a wall outlet.

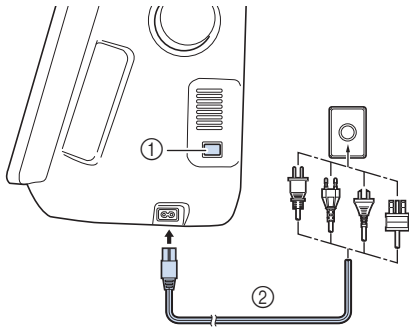

- ① Main power switch
② Power supply cord

- 2** Turn the main power switch to “I” to turn on the machine.

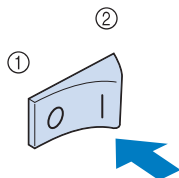

- ① OFF
② ON



Memo

- When the machine is turned on, the needle and the feed dogs will make sound when they move; this is not a malfunction.

- 3** Turn the main power switch to “O” to turn off the machine.




Memo

- If the machine is turned off in the middle of sewing in the “Sewing” function, the operation will not be continued after turning the power on again.

Setting Your Machine for the First Time

When you first turn on the machine, set the language and time/date to your language and local time/date. Follow the procedure below when the settings screen appears automatically.

- 1** Press **<** and **>** to set your local language.

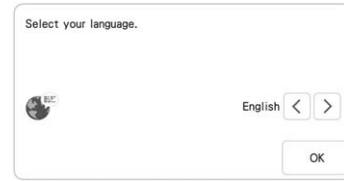


- 2** Press **OK**.

- 3** The message screen, confirming if you want to set time/date, appears. To set the time/date, press **OK**; to cancel the setting, press **Cancel**.

→ The screen to set time/date appears.

- 4** Press **-** or **+** to set time date.

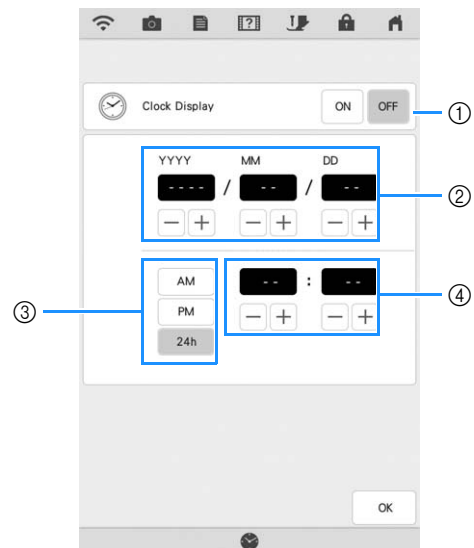

- ① Press to display the time on the screen.
② Set the year (YYYY), month (MM) and date (DD).
③ Select whether 24h or 12h setting to display.
④ Set the current time.

- 5** Press **OK** to start using your machine.

→ The clock starts from 0 second of the time you set.



Note

- The time/date you set may be cleared if you don't turn on the machine for an extended period of time.
- Time setting is also available by pressing clock button/time on the LCD screen.

LCD SCREEN

When the machine is turned on, the opening movie is played. Touch anywhere on the screen for the home page screen to be displayed. Touch the LCD screen or a key with your finger or the included dual purpose stylus to select a machine function.


Note

- When the straight stitch needle plate is on the machine, the needle will automatically move to the middle position.

Memo

- Only touch the screen with your finger or the included dual purpose stylus. Do not use a sharp pencil, screwdriver, or other hard or sharp object. It is not necessary to press hard on the screen. Pressing too hard or using a sharp object may damage the screen.



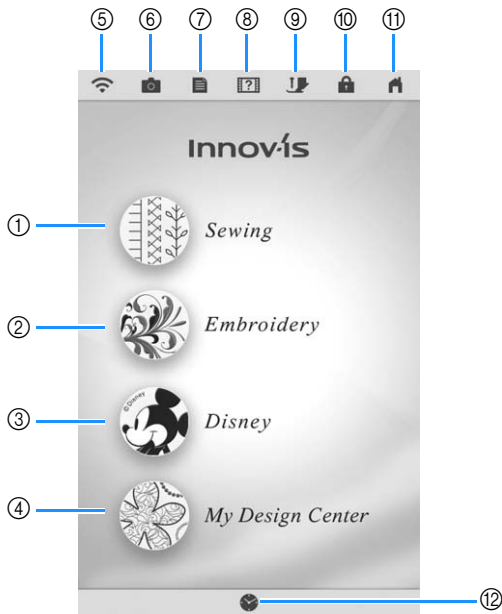


Home Page Screen



No.	Display	Key Name	Explanation	Page
④		My Design Center key	Press this key to start creating your custom design embroidery patterns.	-
⑤		Wireless LAN key	Check the machine's signal strength. Press this key to specify the wireless settings.	46
⑥		Camera view key	Press this key to check the needle location as it is shown on the screen through the built-in camera.	92
⑦		Machine setting mode key	Press this key to change the needle stop position, adjust the stitch patterns and embroidery patterns or screen, and change other machine settings.	29
⑧		Machine help key	Press this key to see explanations on how to use the machine. You can see the tutorial videos and also the MP4 movie files that you have.	39
⑨		Presser foot/Needle exchange key	Press this key before changing the needle, the presser foot, etc. This key locks all key and button functions to prevent operation of the machine.	58, 72
⑩		Screen lock key	Press this key to lock the screen. When the screen is locked, you can still sew, but cannot change any of the screen functions. Press this key again to unlock the settings.	162
⑪		Home page screen key	Press this key anytime it is displayed to return to the home page screen and select a different category - "Sewing", "Embroidery" or "My Design Center".	-
⑫		Time/Date key	Press this key to set the clock to your local time.	27

No.	Display	Key Name	Explanation	Page
①		Sewing key	Press this key to sew utility stitches or character/ decorative stitch patterns.	104, 162
②		Embroidery key	Attach the embroidery unit and press this key to embroider patterns.	-
③		Disney key	Press this key to sew Disney stitch patterns.	-

Using the Machine Setting Mode Key


Press  to change the default machine settings (needle stop position, embroidery speed, opening display, etc.). To display the different settings screens, press  for “Sewing settings”,  for “General settings”,  for “Embroidery settings” or  for “Wireless LAN settings”.

Memo

- Press  or  to display a different settings screen.


Sewing Settings

■ Page 1

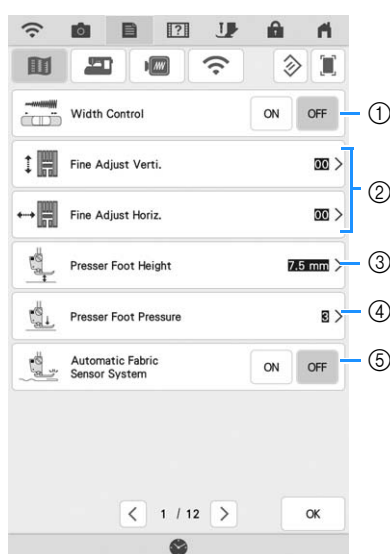


- ① Select whether to use the sewing speed controller to determine the zigzag width (page 127).
- ② Make adjustments to character or decorative stitch patterns (page 168).
- ③ Adjust the presser foot height. Select the height of the presser foot when the presser foot is raised.
- ④ Adjust the presser foot pressure. The higher the number, the greater the pressure will be. Set the pressure at “3” for normal sewing.
- ⑤ When set to “ON”, the thickness of the fabric is automatically detected by an internal sensor while sewing. This enables the fabric to be fed smoothly (pages 83 and 91).


 
■ Page 2

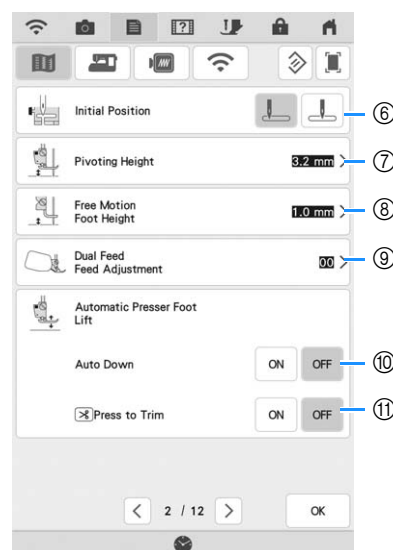

- ⑥ Select whether “1-01 Straight stitch (Left)” or “1-03 Straight stitch (Middle)” is the utility stitch that is automatically selected when the machine is turned on.
- ⑦ Change the height of the presser foot when sewing is stopped when the pivot setting is selected (page 89). Adjust the presser foot to one of the four heights.
- ⑧ Change the height of the presser foot when the machine is set to free motion sewing mode (page 128).
- ⑨ Adjust the amount of fabric feeding of the dual feed foot (page 76).
- ⑩ Pressing the “Start/Stop” button or depressing the foot controller automatically lowers the presser foot (if it is raised) before starting sewing. When releasing the pedal of the foot controller or pressing the “Start/Stop” button to stop sewing, the presser foot will be automatically raised.
- ⑪ Pressing the “Thread Cutter” button automatically lowers the presser foot before cutting the thread. The presser foot will be raised after the thread is cut.


■ Page 3

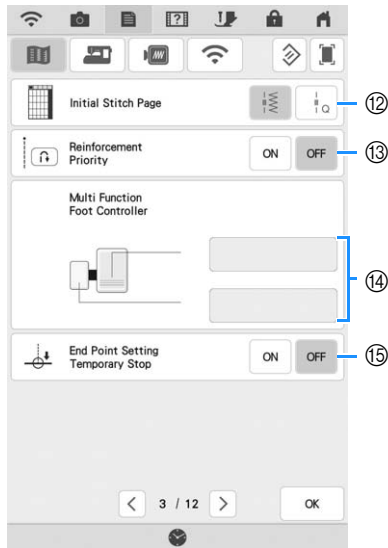

- ⑫ Select whether utility stitches () or quilting stitches () are displayed first in the stitch selection screen.
- ⑬ When set to “ON”, reinforcement stitches are sewn at the beginning and/or end of sewing for a reinforcement stitch pattern, even when the “Reverse Stitch” button is pressed (page 79).
- ⑭ You can activate this setting after connecting the multi-function foot controller (optional). (These settings are not operable unless the multi-function foot controller is attached to the machine.) (page 34)
- ⑮ If this setting is set to “ON” with “End Point Setting” set to “ON” in the stitch edit menu, the machine will temporarily stop so the end point sticker can be peeled off (page 93).


General Settings

■ Page 4

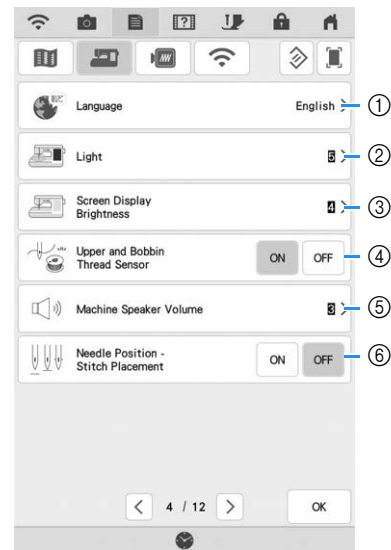


- ① Change the display language.
- ② Change the brightness of the needle area and work area lights.
- ③ If the screen is not very clear in certain environments, you can adjust the brightness of the screen.
- ④ Turn both the upper and bobbin thread sensor “ON” or “OFF”. If it is turned “OFF”, the machine can be used without thread.
- ⑤ Change the speaker volume. Increase the number for louder volume, decrease for softer volume.
- ⑥ Select the operation of the “Needle Position - Stitch Placement” button from the following two sequences. (page 92)

■ Page 5

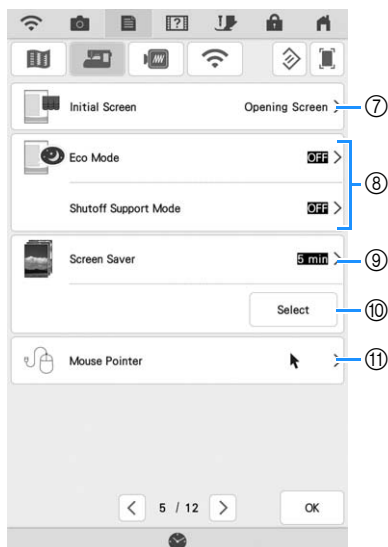


- ⑦ Select whether to display the opening screen video when the machine is turned on.
- ⑧ Select to save the machine power by setting the “Eco Mode” or the “Shutoff Support Mode” (page 35).
- ⑨ Select the length of time until the screen saver appears.
- ⑩ Change the image of the screen saver (page 36).
- ⑪ Change the shape of the pointer when a USB mouse is used. The setting remains selected even after the machine is turned off.

■ Page 6

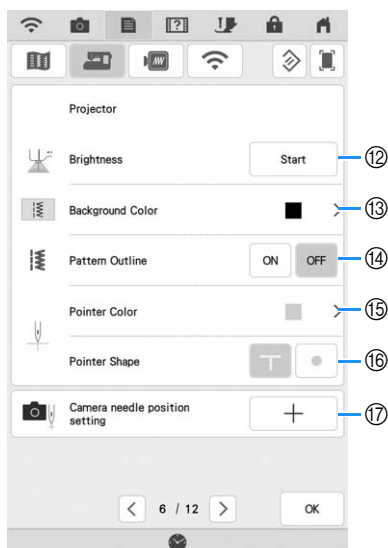

- ⑫ Select the brightness of the projector.
- ⑬ Select which background color will display when using projector function.
- ⑭ Select whether to display outline of the pattern.
- ⑮ Select the color of the pointer.
- ⑯ Select a T shape or a point as the shape for the guideline marker.
- ⑰ The camera needle drop point can be specified. (page 37)

■ Page 7

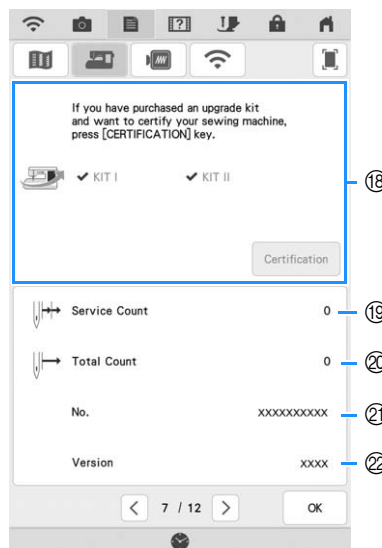


- ⑱ Use to certify your sewing machine when you purchase one of the upgrade kits. KIT 1 and KIT 2 have been certified on this machine.
- ⑲ Display the service count which is a reminder to take your machine in for regular servicing. (Contact your authorized Brother dealer for details.)
- ⑳ Display the total number of stitches sewn on this machine.
- ㉑ The “No.” is the internal machine number for the machine.
- ㉒ Display the program version.

Embroidery Settings


For details on embroidering settings, refer to the Operation Manual (Embroidery).

Page 8

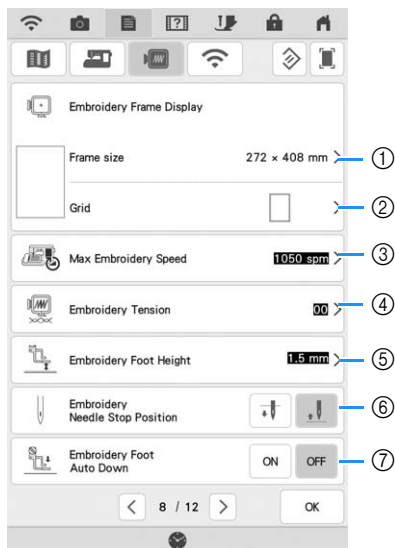


- ① Select the embroidery frame to be used.
- ② Change the center point marker or grid lines.
- ③ Adjust the maximum embroidery speed setting.
- ④ Adjust the upper thread tension for embroidering.
- ⑤ Select the height of the embroidery foot during embroidering.
- ⑥ Adjust the needle position for embroidering.
- ⑦ When set to "ON", pressing the "Start/Stop" button when the presser foot is raised automatically lowers the presser foot before starting embroidering.

Page 9

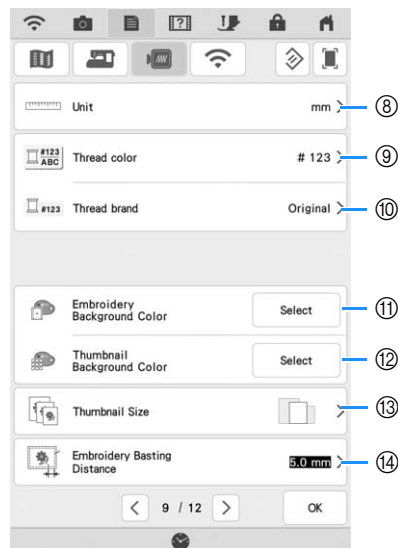

- ⑧ Change the display units (mm/inch).
- ⑨ Change the thread color display on the "Embroidery" screen: thread number or color name.
- ⑩ Select the thread brand of the thread color display. The thread brand setting is reflected the next time a pattern is imported.
- ⑪ Change the color of the background for the embroidery display area.
- ⑫ Change the color of the background for the thumbnail area.
- ⑬ Press to specify the size of pattern thumbnails.
- ⑭ Adjust the distance between the pattern and the basting stitching.


Page 10

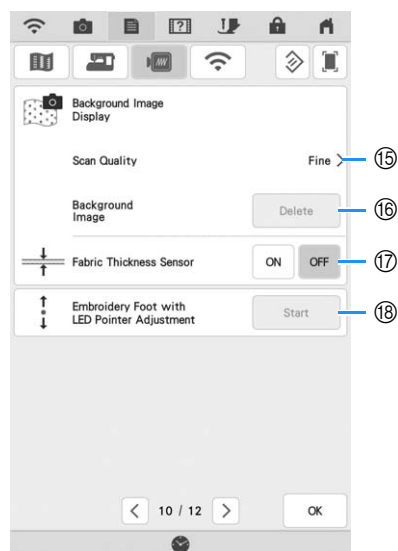

- ⑮ Select the quality for displaying the fabric in the screen.
- ⑯ Erase the scanned image.
- ⑰ Set to "ON" when positioning the pattern on thick fabric using the built-in camera.
- ⑱ Adjust the position and brightness of the embroidery foot "W+" with LED pointer (sold separately). (These settings are not available unless embroidery foot "W+" with LED pointer is installed on the machine.)

Wireless LAN settings

Page 11

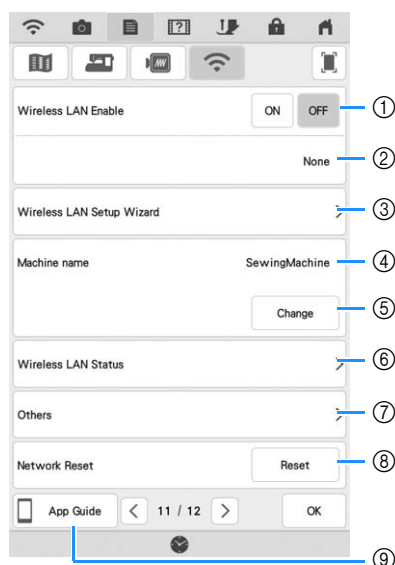


- ① Enable/disable the wireless LAN function.
- ② Display the connected SSID.
- ③ Set the machine to connect wireless LAN function.
- ④ Display the machine name of wireless LAN function.
- ⑤ Press to change the machine name of wireless LAN function.
- ⑥ Check the wireless LAN status.
- ⑦ Display other menus.
- ⑧ Press to reset network operations.
- ⑨ This machine supports two apps. Press the key of the app whose information you want to display. On smart devices with a QR reader app installed, scan the QR code to display a screen that shows how to install the app. For details on each app, refer to the Operation Manual (Embroidery).



My Stitch Monitor: The machine's embroidering status can be monitored from your smart device.

My Design Snap: Images saved on a smart device can be transferred to the machine so that an embroidery pattern can be created in My Design Center.

Page 12

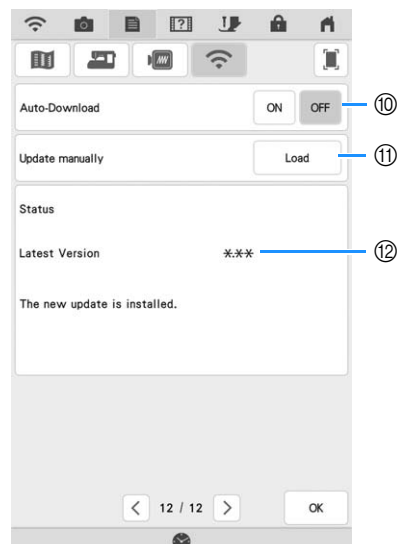


- ⑩ When set to "ON", the machine periodically checks if there is a new version of the update file. If there is one, it is downloaded (page 220).
- ⑪ If "Load" is pressed, the machine will check if there is a new version of the update file. If there is one, it is downloaded (page 220).
- ⑫ Display program information (page 220).

Setting Functions

Saving a Settings Screen Image to USB Media

An image of the settings screen can be saved as .PNG file.

- 1 **Insert the USB media into the USB port on the right side of the machine.**

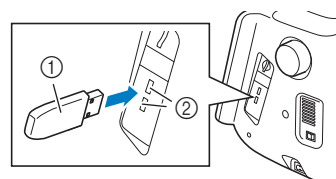

- ① USB media
- ② USB port

- 2 **Press .**

→ The settings screen appears. Select the settings screen page that you want to save the screen image of.


- 3 **Press .**

→ The image file will be saved to the USB media.

■ Specifying the Multi-Function Foot Controller (Sold Separately)

With the multi-function foot controller, various machine operations in addition to starting/stopping sewing, such as thread cutting and reverse stitching, can be specified to be performed.

Functions that can be specified

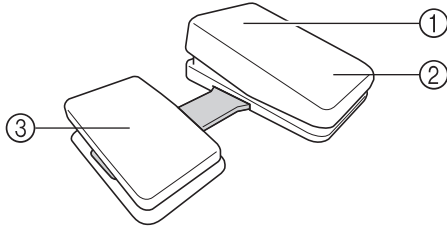

	Controller	Functions that can be specified
①	Main foot controller	Start/Stop
②	Heel switch	Select any of the following: <ul style="list-style-type: none"> • Thread Cutting • Needle Position – Up/Down • Single Stitch • Reverse Stitch (Reinforcement Stitch) * • Presser Foot Up/Down • No Setting
③	Side pedal	

- * If you set the “Reverse Stitch” function on the heel switch, machine operates the same as pressing the “Reverse Button” on the machine.
- * Reinforcement stitching may be applied depending on the selected stitch pattern. For the details, refer to “Automatic Reinforcement Stitching” on page 79.

Memo

- If you set “Reverse Stitch” on the side pedal, you can create a darning stitch effect using zigzag stitches. With both feet, keep pressing the main foot controller, and repeat pressing and releasing the side pedal to sew forward and reverse in turn. Machine will reverse at the speed you press the main foot controller.


Specifying the functions

The functions performed by the multi-function foot controller can be specified in the settings screen.

Note

- Before specifying the functions, connect the multi-function foot controller to the machine. The settings screen is activated the first time that the machine detects the multi-function foot controller.
- After the multi-function foot controller is connected to the machine and the functions are specified, the “Start/Stop” button cannot be used. All buttons other than the “Start/Stop” button can continue to be used.

- 1 Press .
- 2 Display page 3 of the settings screen.
- 3 Select the functions to be performed by the multi-function foot controller.

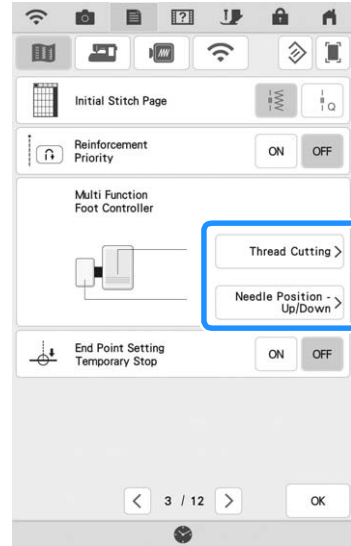

- 4 Press .

■ Selecting the “Eco Mode” or “Shutoff Support Mode”

You can save the machine power by setting the eco mode or the shutoff support mode.

If you leave the machine without using for a specified period of time, the machine enters in one of these modes.

“Eco Mode”;



Machine will enter a sleep mode. Touch the screen or press the “Start/Stop” button to continue sewing.


“Shutoff Support Mode”;

Machine will enter the lower power mode after set period of time. Turn machine off and then back on to restart sewing.

Condition	Eco Mode	Shutoff Support Mode
Available time	OFF, 10 - 120 (minute)	OFF, 1 - 12 (hour)
“Start/Stop” button	Green flashing	Green slow flashing
Suspended function	Machine light, Screen display	All functions
After recovering	The machine starts from the previous operation.	You need to turn off the machine.

Press the “Start/Stop” button or touch the screen display to recover from these modes.

- 1 Press .
 - The settings screen appears.
- 2 Press .
 - The General settings screen appears.
- 3 Display page 5 of the General settings screen.
- 4 Press circled area to select the time until entering the mode.

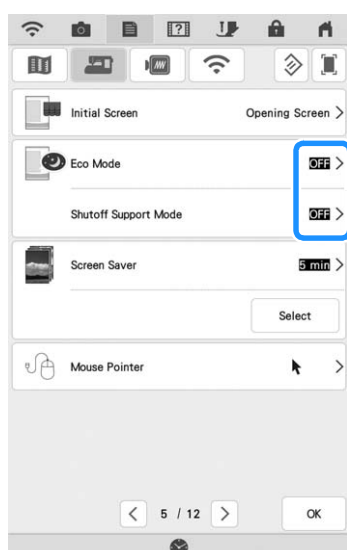

Note

- If you turn off the machine while the machine is in the “Eco Mode” or the “Shutoff Support Mode”, wait for about 5 seconds before turning on the machine again.


■ Changing the Screen Saver Image

Instead of the default image, you can select your own personal images for the screen saver of your machine.

Before changing the screen saver image, prepare the image on your computer or USB media.

Compatible image files


Format	.jpg
File size	Max. 2 MB for each image
File dimension	800 × 1280 pixels or less (If the width is more than 800 pixels, the image imported will be reduced to a width of 800 pixels.)
Number allowed	5 or less

1 Press .
→ The settings screen appears.

2 Press .
→ The General settings screen appears.

3 Display page 5 of the General settings screen.

4 Press .

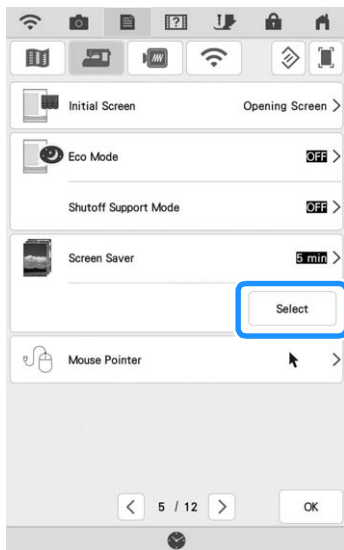


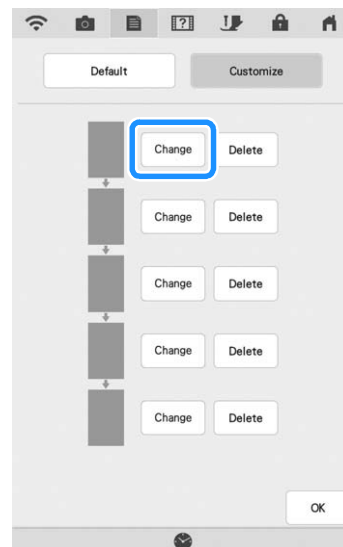
5 Press .




6 Connect the USB media that contains your personal image to the USB port of the machine.

* Refer to page 49 about USB connectivity.

7 Press  to select the first image.



* The images will appear in a list in this screen. Select the desired  to specify the image.

* Press  to delete the selected image.


8 Select the device that is connected.



→ A list of your personal images appear on the screen.

* Press **Cancel** to view the previous page.

9 Press a file name to select image and then press **Set**.

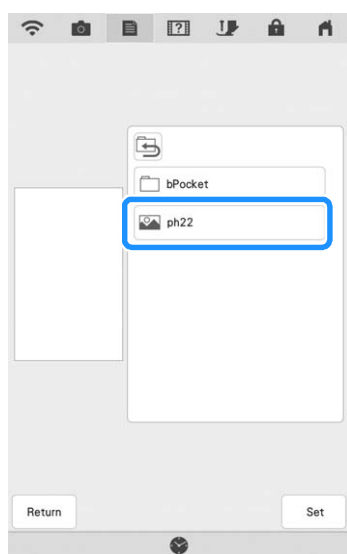

→ The selected image is stored on your machine.


* Press **Return** to view the previous page.

10 Repeat the procedure from step 7 to select the remaining images.

11 Press **OK** to return to the original screen.

Needle Calibration Using the Built-in Camera

Setting the camera needle position is essential when you use camera or projector function. It is not necessary to perform this operation each time, but we recommend performing it when the needle is changed. Use the white stickers (solid) included with the machine.

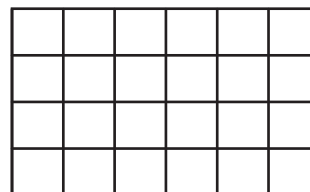

1 Press **[Menu]**.

→ The settings screen appears.


2 Press **[General]**.

→ The General settings screen appears.

3 Display page 6 of the General settings screen.

4 Press **[+]**.


→ Camera needle position setting screen appears.

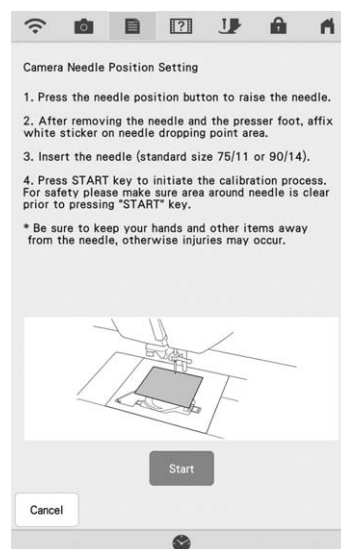

5 Follow the on-screen instructions to complete the procedure.

1. Press the needle position button to raise the needle.

2. After removing the needle and the presser foot, affix white sticker on needle dropping point area.

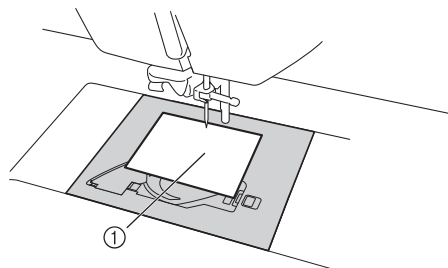

① White sticker

3. Insert the needle (standard size 75/11 or 90/14).

Note



- Use a new sticker. The camera needle position cannot be set correctly if there is a hole in sticker or if it is dirty. If you have no new stickers, contact your nearest authorized Brother dealer.

4. Press to initiate the calibration process. For safety please make sure area around needle is clear prior to pressing



→ Setting the needle drop point begins.


- 6 The operation is finished when “OK” appears. If “NG” appears, affix a new white sticker, and then press . If multiple attempts to set the position are not successful, contact your nearest authorized Brother dealer.**

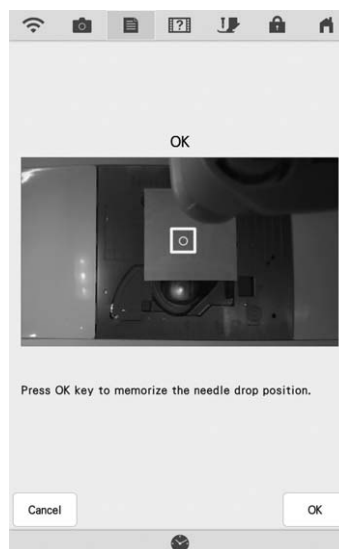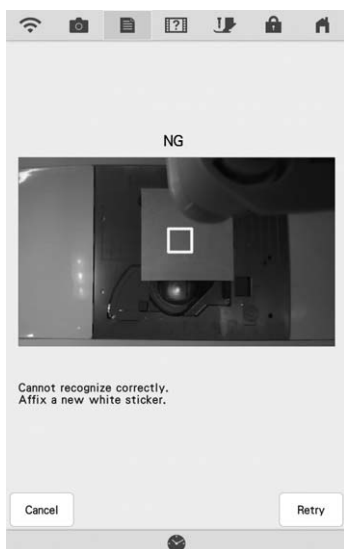


- * Press to memorize the calibration data.
- * Press to back to original screen without memorizing the calibration data.

- 7 Remove the sticker.**

Using the Machine Help Key

Press  to open the machine help screen. Seven functions are available from the screen shown below.

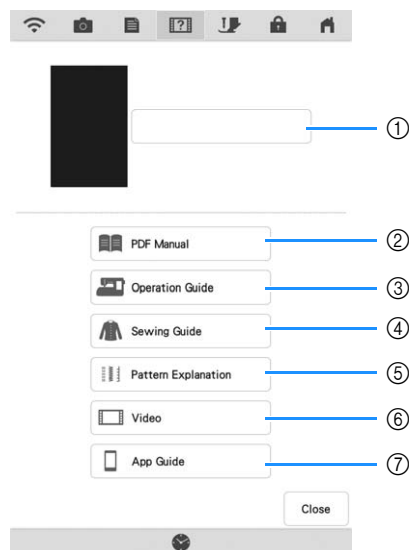


- ① Press this key to continue viewing the Operation Manual (PDF file) or watching the video that was stopped.
- ② Press this key to view the Operation Manual (PDF file).
- ③ Press this key to see explanation for upper threading, winding the bobbin, changing the presser foot, preparing to embroider a pattern, and how to use the machine (page 40).
- ④ Press this key to select utility stitches when you are not sure which stitch to use or how to sew the stitch (page 41).
- ⑤ Press this key to see an explanation of the selected stitch (page 44).
- ⑥ Press this key to watch tutorial videos or MPEG-4 (MP4) files from USB media (page 42).
- ⑦ This machine supports two apps. Press the key of the app whose information you want to display. On smart devices with a QR reader app installed, scan the QR code to display a screen that shows how to install the app. For details on each app, refer to the Operation Manual (Embroidery).



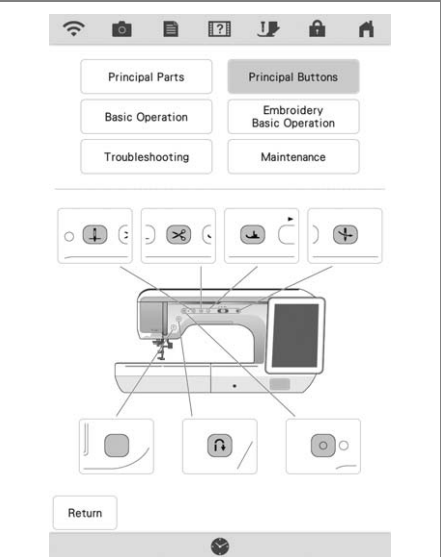
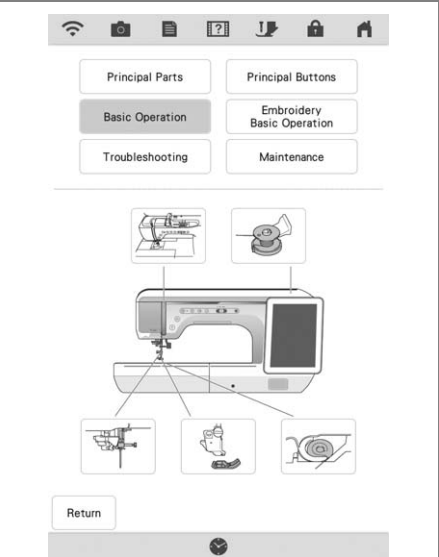
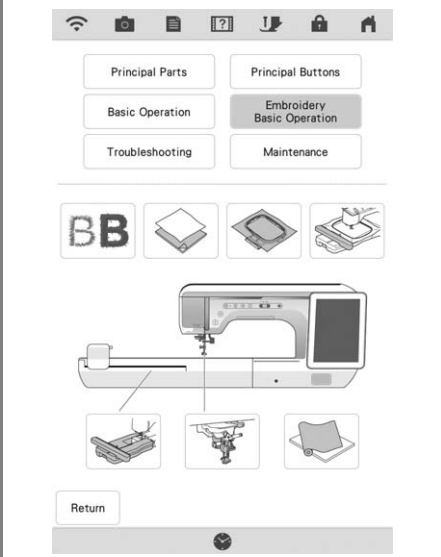
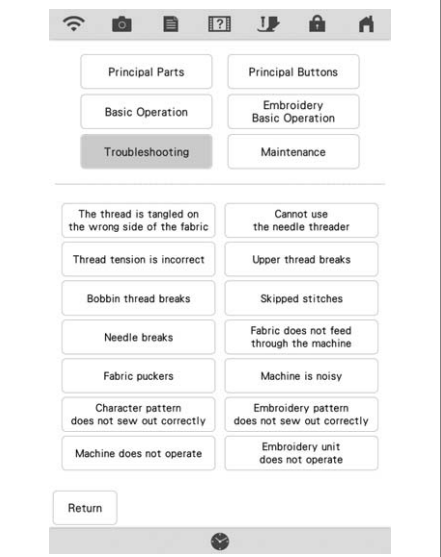
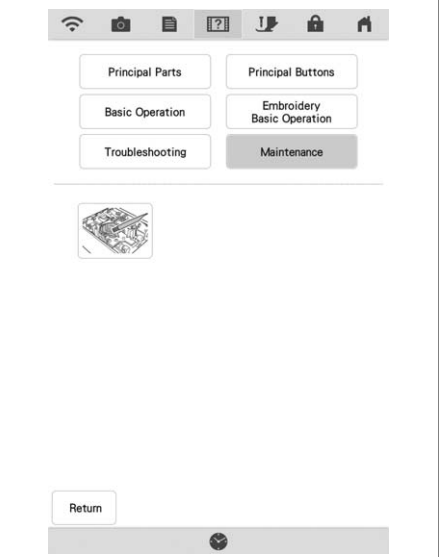


My Stitch Monitor: The machine's embroidering status can be monitored from your smart device.

My Design Snap: Images saved on a smart device can be transferred to the machine so that an embroidery pattern can be created in My Design Center.

Using the Operation Guide Function


Press  Operation Guide to open the screen shown below. Six categories are displayed at the top of the screen. Press a key to see more information about that category.

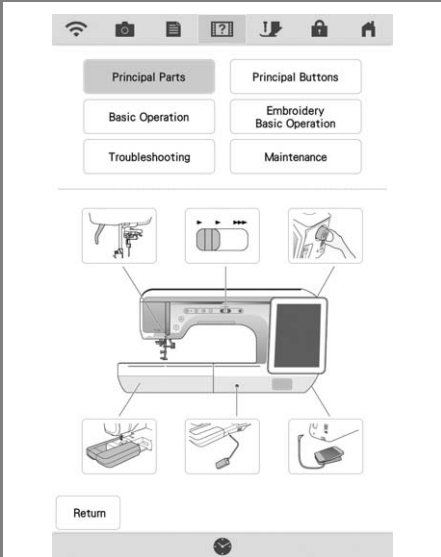 <p>Principal Parts displays information about the main parts of the machine and their functions. This is the first screen displayed when you press .</p>	 <p>Principal Buttons displays information about the operation buttons.</p>	 <p>Basic Operation displays information about threading the machine, changing presser feet, etc. Some of the functions are described in the movies. Watch these movies for a better understanding of the functions.</p>
 <p>Embroidery Basic Operation displays information about attaching the embroidery unit, preparing fabric for embroidering, etc. Some of the functions are described in the movies. Watch these movies for a better understanding of the functions.</p>	 <p>Troubleshooting displays troubleshooting information.</p>	 <p>Maintenance displays information about cleaning the machine, etc. Some of the functions are described in the movies. Watch these movies for a better understanding of the functions.</p>

Example: Displaying information about upper threading

1 Press .


2 Press .

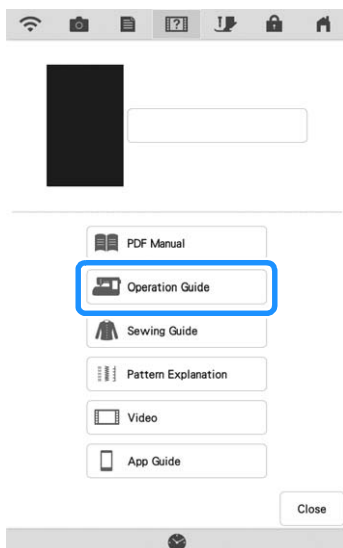

3 Press .


→ The lower half of the screen will change.

4 Press  (upper threading).

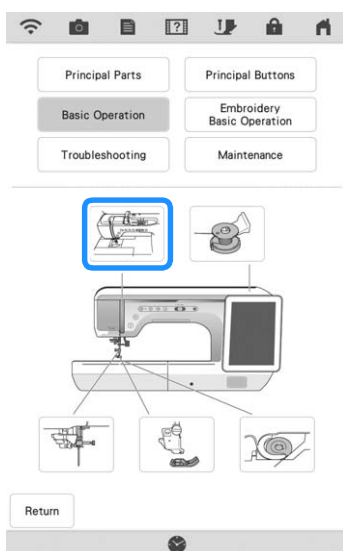

→ The screen shows instructions for threading the machine.

5 Read the instructions.

* Press  to view the next page.

* Press  to view the previous page.

6 Press  to return to the original screen.

Using the Sewing Guide Function


The sewing guide function can be used to select stitch patterns from the Utility Stitch screen. Use this function when you are not sure which stitch to use for your application, or to get advice about sewing particular stitches. For example, if you want to sew overcasting, but you do not know which stitch to use or how to sew the stitch, you can use this screen to get advice. We recommend that beginners use this method to select stitches.

1 Enter Utility Stitch category from the home page.

2 Press .

3 Press .

→ The advice screen is displayed.

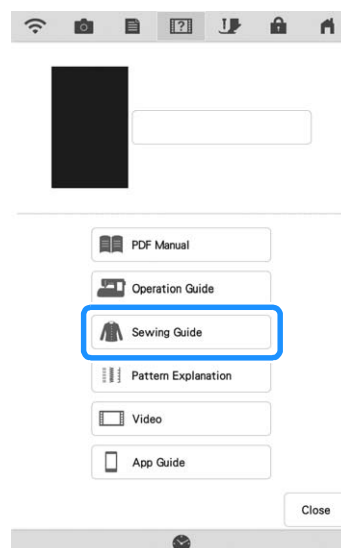


1

Getting Ready

4 Press the key of the category whose sewing instructions you wish to view.

* Press **Return** to return to the original screen.

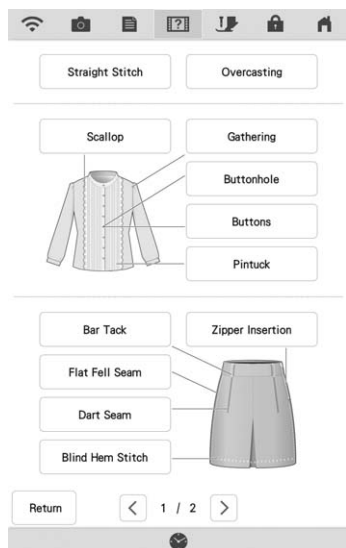

5 Read the explanations and select the appropriate stitch.

→ The screen displays directions for sewing the selected stitch. Follow the directions to sew the stitch.

Playing a Tutorial Video

This machine provides tutorial videos on how to use the machine. Together with the help guides, which offer descriptions through text and illustrations, the tutorial videos assist with machine operation.

Memo

- The specifications shown in the movie may have different details than the actual product.


1 Press **[?]**.

2 Press **[Video]**.

3 Press the title of the desired tutorial video.

→ The selected tutorial video begins playing.

4 Play the tutorial video.

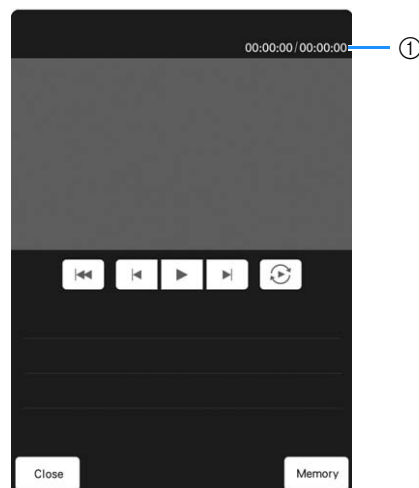

① Number of seconds elapsed/Total number of seconds

Operation keys

	Play
	Pause
	Skip back 10 seconds
	Skip forward 10 seconds
	Return to beginning
	Repeat
	Delete video (when playing from the machine's memory)
	Save to machine (when playing from USB media)

Memo

- A frequently viewed tutorial video can be saved to **[Favorite]** (favorites) of the machine, from where it can be played.

5 After you are finished playing the video, press **[Close]**.

Playing MPEG-4 (MP4) Videos

Your MP4 videos can be played from USB media. In addition, the MP4 video can be saved to the machine so that a tutorial video on creating a project, for example, can be viewed at any time.

Videos that can be played

MP4 file format: Video - H.264/MPEG-4 AVC, Audio - AAC
--

Size: 450 (H) × 800 (W)


Memo


- MP4 file size will be changed to fit the screen. If you view the large MP4 file, the file will be reduced to fit the screen. If you view the smaller MP4 file, the file will be expanded to fit the screen.
- Some type of MP4 file cannot be viewed with the machine.

1 Press .

2 Press  Video.

3 Select the device where the video is saved.

: Play a tutorial video


: Play a video saved on the machine (favorites)

: Play a video from USB media plugged into the USB port

: Play a video from USB media plugged into the USB port for mouse

* To return to the previous screen, press .

4 Select the video that you want to play.

* To return to the previous screen, press .

Note

- Long video file names may be shortened when they are displayed.

5 Play the video.



* Use the operation keys as described in "Playing a Tutorial Video" on page 42.

Note

- Up to about 1 GB of MP4 videos can be saved on the machine. When the maximum capacity has been reached, delete unnecessary videos.

6 After you are finished playing the video, press .


Using the Stitch Pattern Explanation Function

If you want to know more about the uses of a stitch pattern, select the stitch pattern and press  and then  to see an explanation of the stitch selection. Descriptions are displayed for each stitch pattern in the Utility Stitch screen.




Note

- With the stitch pattern explanation function, descriptions can be displayed for the stitch patterns available on the Utility Stitch and Character/Decorative Stitch screens.


Example: Displaying information about 

1 Press .

2 Press .

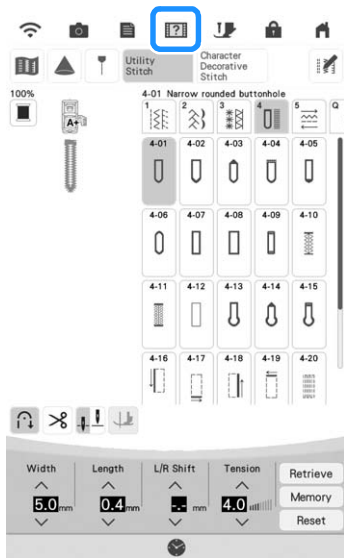

3 Press .

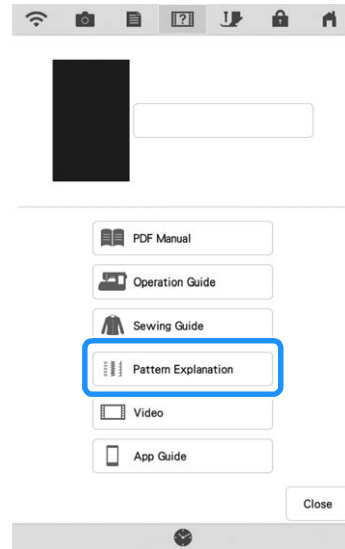

→ The screen shows information.

4 Press  to return to the original screen.



Memo


- The settings remain displayed to allow you to fine tune the stitch.

Viewing the Operation Manual (PDF File) on the Machine

The Operation Manual (PDF file) for this machine can be viewed on the machine.

1 Press .

2 Press  PDF Manual.

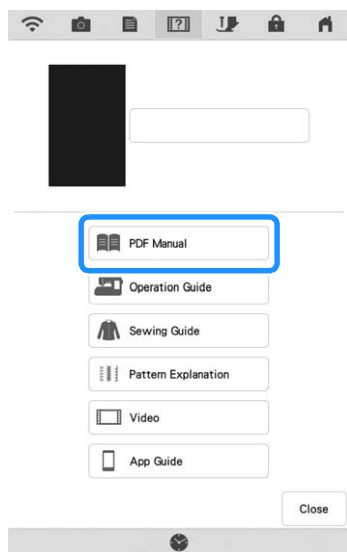


3 Select the document to be viewed.




Memo

- The Operation Manual can be viewed in the currently selected display language. (Depending on the selected language, the English Operation Manual may be displayed.) For details on selecting the display language, refer to “Page 4” on page 30.

4 Read the Operation Manual.

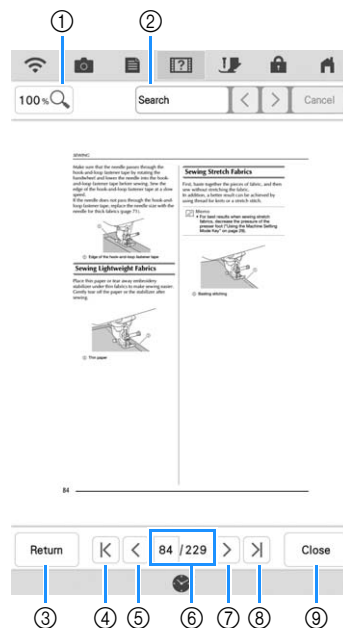Operation keys




①		Press to select from 100%, 200% and 400%.
②	<input type="text" value="Search"/>	1. Press to display a keyboard. 2. Enter the text to be searched for. 3. To search from the current page to the beginning of the document, press  . To search from the current page to the end of the document, press  .
③	<input type="button" value="Return"/>	Press to return to the screen before the Operation Manual (PDF file) was opened.
④	<input type="button" value="K"/>	Press to display the first page.
⑤	<input type="button" value="←"/>	Press to display the previous page.
⑥	84 / 229	Shows the current page/total number of pages. Press the current page number, and then enter a page number to display the desired page.
⑦	<input type="button" value="→"/>	Press to display the next page.
⑧	<input type="button" value="> "/>	Press to display the last page.
⑨	<input type="button" value="Close"/>	Press to close the screen and exit the machine help screen.

Memo

- To zoom in or out on a page, pinch two fingers together or spread them apart. You can also move a page after zooming in by dragging it.

WIRELESS NETWORK CONNECTION FUNCTIONS

This machine supports a wireless network connection. Using this function, an embroidery pattern or decorative stitch pattern edited in embroidery editing software (PE-DESIGN version 11 or later) with wireless transfer functions can be transferred to the machine from a computer. In addition, embroidery patterns can be transferred from the machine to the embroidery editing software (PE-DESIGN version 11 or later). The machine and computer must be connected to the same network. For detailed procedures, refer to the PE-DESIGN manual for the application.

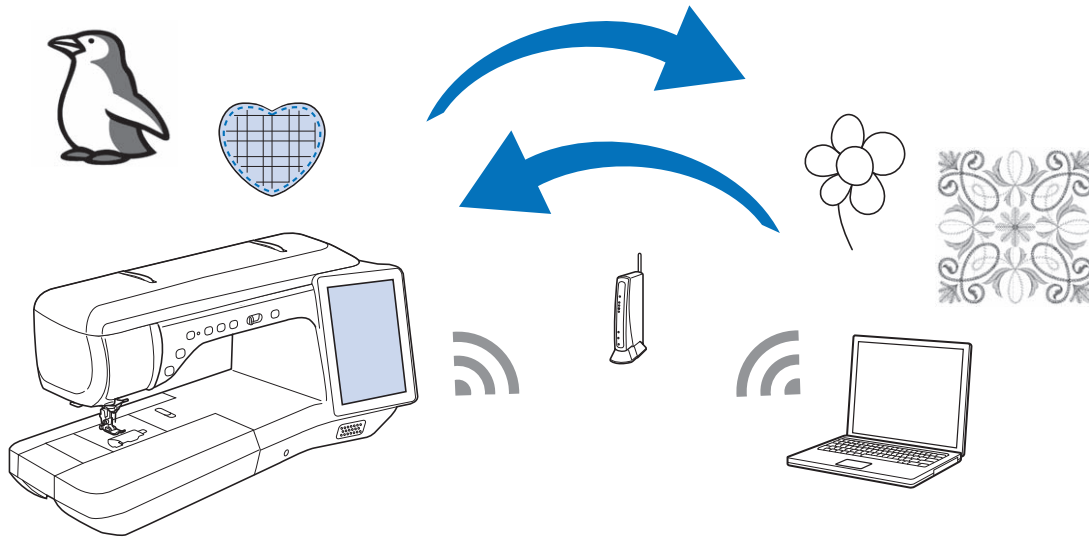

Specifying Wireless Network Connection Settings

The machine can be connected to your wireless network. Useful functions are available with wireless network connection.

- Downloading software updates
- My Stitch Monitor App
- My Design Snap App

Requirements for a Wireless Network Connection


The wireless network connection complies with IEEE 802.11 n/g/b standards and uses the 2.4 GHz frequency.



- A wireless network cannot be set up with WPA/WPA2 Enterprise.

Connecting the Machine to Your Wireless Network

- 1 Press
- 2 Set "Wireless LAN Enable" to "ON".

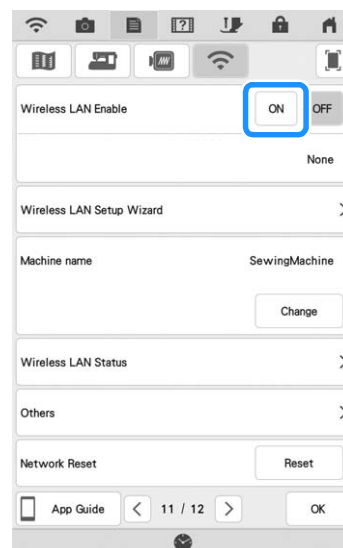

→ The machine will begin to emit the wireless network signal.

Using the Wizard to Set Up the Wireless Network Connection

There are multiple ways to set up the wireless network connection. We recommend the method that uses the wizard on this machine.


- In order to connect your machine to a wireless network, the security information (SSID and network key) for your home network will be required. The network key may also be called a password, security key or encryption key. First, find your security information and note it.**

SSID	Network Key (Password)

Memo


- The wireless network connection cannot be set up if you do not have the security information.
- How to find the security information
 - Check the manual provided with your home network.
 - The default SSID may be the manufacturer's name or the model name.
 - If you cannot find the security information, contact the manufacturer of the router, your network administrator or your Internet provider.

- Press > beside "Wireless LAN Setup Wizard".**

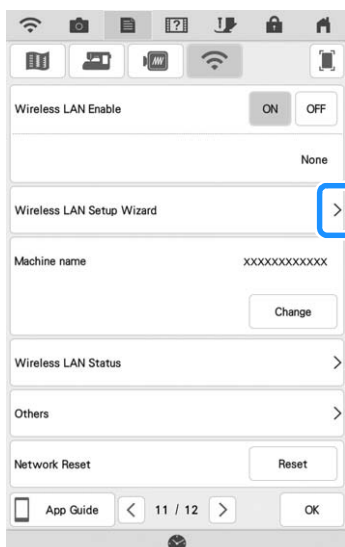

→ A list of available SSIDs appears.

- Select > beside the SSID that was noted.**

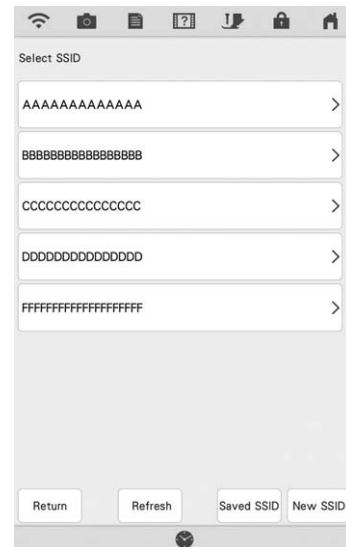


→ The screen for entering the network key (password) appears.

Memo

- If the desired network SSID does not appear in the list, press .
- If the desired network SSID is not displayed, specify it as described below.
 - Select in the list of SSIDs, and then press .
 - Enter the desired network SSID, and then press .
 - Select the authentication method and encryption mode.
- If the machine had already been connected to the home network, press , and then select the saved SSID.

4 Enter the network key (password) that was noted, and then press **OK**.

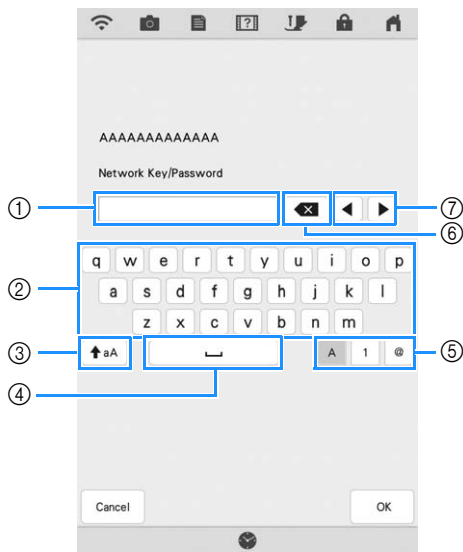


- ① Text input area
- ② Character keys
- ③ Caps key
- ④ Space key
- ⑤ Letters/numbers/symbols key
- ⑥ Backspace key (Deletes the character at the cursor's position.)
- ⑦ Cursor keys (Move the cursor to the left or right.)


5 When the following message appears, press **OK**.



→ When a connection is established, the following message appears.

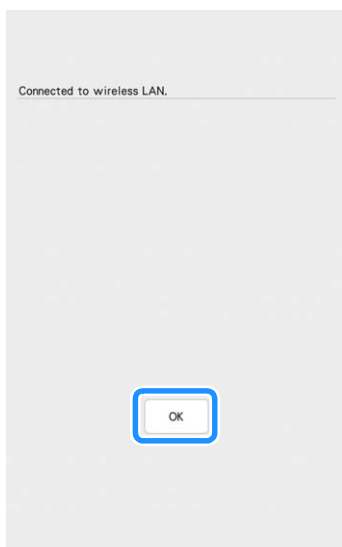

6 Press **OK** to exit the setup.

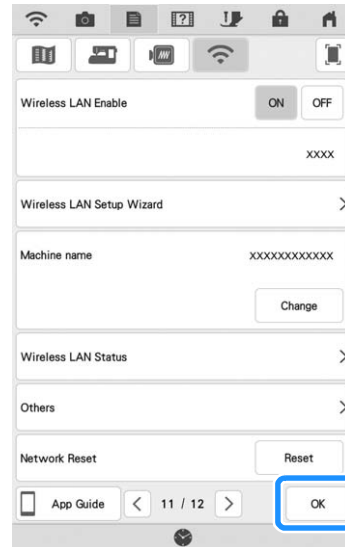


→ The name beside "Machine name" is the name that will be used when registering the machine with embroidery editing software (PE-DESIGN version 11 or later) in order to transfer files.

Memo

- The name in the "Machine name" field will be used with the My Stitch Monitor App and My Design Snap App.
- While connected, the signal strength is indicated by the icon in the upper-left corner of the display.
- Once a wireless network connection has been set up, a wireless network connection will be established each time the machine is turned on. However, "Wireless LAN Enable" in the network settings screen must remain set to "ON".

Using the "Others" Menu

The "Others" menu contains the following items.

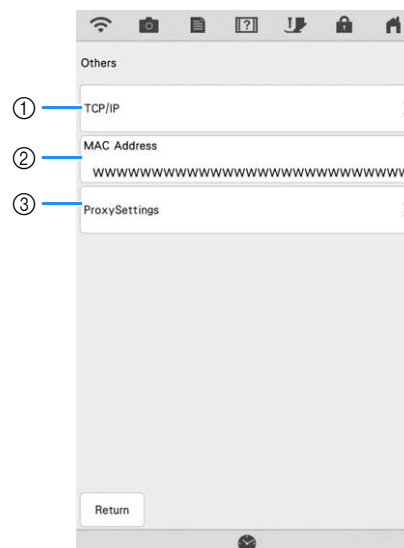

- ① TCP/IP settings can be manually entered.
- ② Shows the MAC address.
- ③ Use when proxy settings are required.


CONNECTING THE ACCESSORY TO THE MACHINE

1

Getting Ready

Using USB Media/SD Card (Sold Separately)

When sending or reading stitch patterns using the USB media, connect the device to the USB port. When using SD card, insert the SD card into the SD card slot.

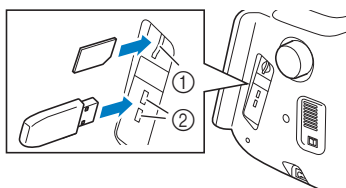

- ① SD card slot
- ② USB port

Memo

- USB media is widely used, however some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.
- Do not insert anything other than USB media into the USB media port. Otherwise, the machine may be damaged.
- Do not insert anything other than SD card into the SD card slot. Otherwise, the machine may be damaged.


Using a USB Mouse

The USB mouse, connected to the machine, can be used to perform a variety of operations in the screens.

Connect a USB mouse to the USB port.

Memo

- Use a basic computer mouse to operate the machine functions. Some USB mouse devices may not be compatible with this machine.

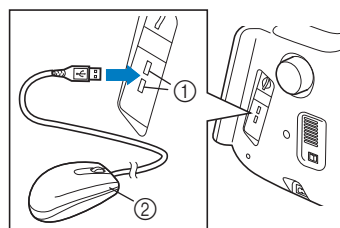

- ① USB port
- ② USB mouse

Note


- A USB mouse can be connected or disconnected at any time.
- The left mouse button can be used to perform operations such as choosing a design and choosing menu keys.
- The mouse pointer does not appear in the camera view window, the screen saver or opening screen.

■ Clicking a Key

When the mouse is connected, the pointer appears on the screen. Move the mouse to position the pointer over the desired key, and then click the left mouse button.


 


Memo

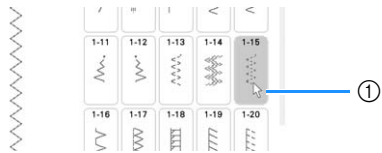
- Double-clicking has no effect.



① Pointer

■ Changing Pages

If page numbers and a vertical scroll bar for additional pages are displayed, click the left mouse button with the pointer on   or   to display the previous or next page.

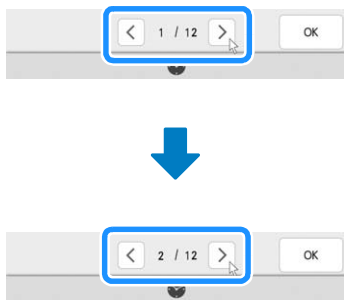



Chapter **2**

Sewing Basics

LOWER THREADING


Winding the Bobbin

⚠ CAUTION

- The included bobbin was designed specifically for this machine. If bobbins from other models are used, the machine will not operate correctly. Use the included bobbin or bobbins of the same type (part code: SA156, (SFB: XA5539-151 / 115J05E0001)). SA156 is Class 15 type bobbin.


■ Using the Supplemental Spool Pin

With this machine, you can wind the bobbin during sewing. While the main spool pin is being used for sewing, you can wind a bobbin by using the supplemental spool pin.

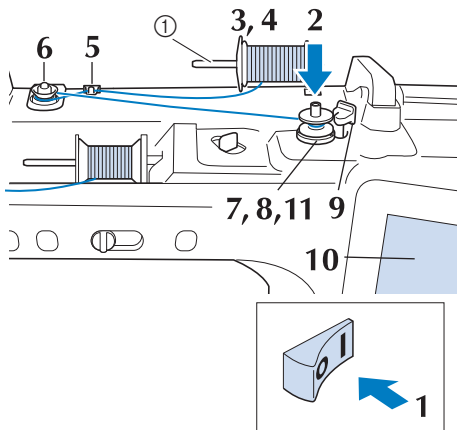


① Supplemental spool pin

- Turn the main power to ON and open the top cover.
- Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.

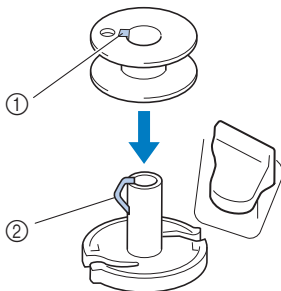


① Groove in the bobbin
② Spring on the shaft

- Set the supplemental spool pin in the “up” position.

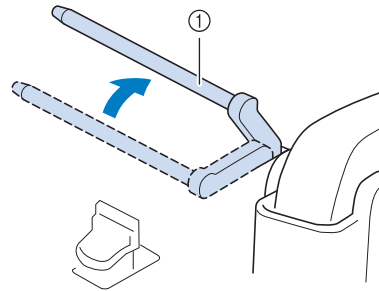

① Supplemental spool pin

- Place the spool of thread on the supplemental spool pin, so that thread unrolls from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.

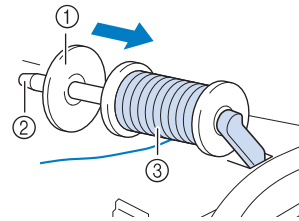


① Spool cap
② Spool pin
③ Thread spool

⚠ CAUTION

- If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large, medium or small) that is closest in size to the thread spool. If a spool cap smaller than the thread spool is used, the thread may become caught in the slit on the end of the spool and cause the needle to break.


Memo

- When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.

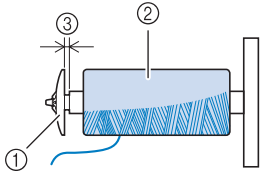


- ① Spool cap (small)
- ② Thread spool (cross-wound thread)
- ③ Space

- If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high is inserted onto the spool pin, use the mini spool cap.

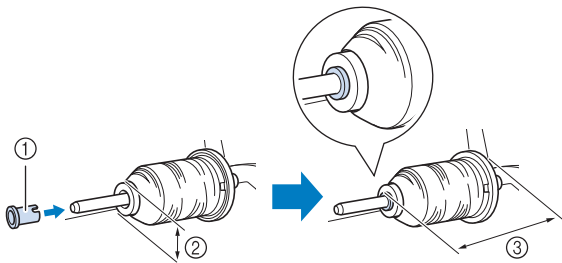


- ① Spool cap (mini king thread spool)
- ② 12 mm (1/2 inch)
- ③ 75 mm (3 inches)

- 5** With your right hand, hold the thread near the thread spool. With your left hand, hold the end of the thread, and use both hands to pass the thread through the thread guide.

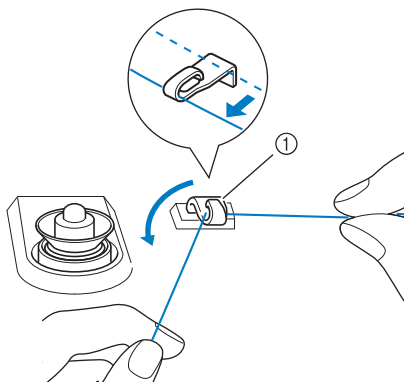


- ① Thread guide

- 6** Pass the thread around the pretension disk making sure that the thread is under the pretension disk.

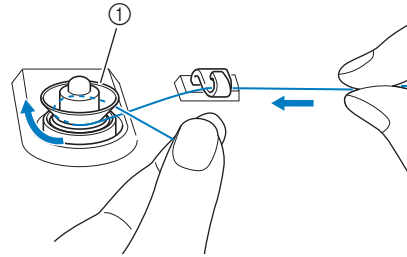


- ① Pretension disk
→ Make sure that the thread passes under the pretension disk.

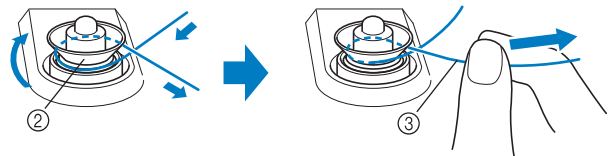


- ② Pretension disk
- ③ Pull it in as far as possible.
→ Check to make sure thread is securely set between pretension disks.

- 7** Wind the thread clockwise around the bobbin 5-6 times.

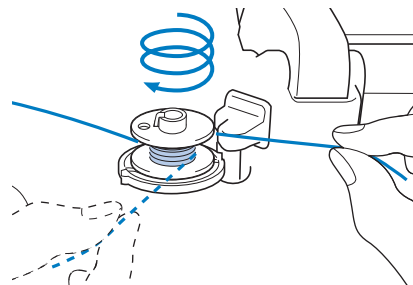

- 8** Pass the end of the thread through the guide slit in the bobbin winder seat, and pull the thread to the right to cut the thread with the cutter.

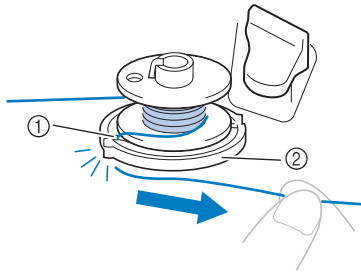


- ① Guide slit (with built-in cutter)
- ② Bobbin winder seat

⚠ CAUTION

- Be sure to follow the process described. If the thread is not cut with the cutter, and the bobbin is wound, when the thread runs low it may tangle around the bobbin and cause the needle to break.


- 9** Set the bobbin winding switch to the left, until it clicks into place.

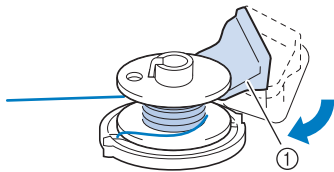

- ① Bobbin winding switch

Memo

- Sliding the bobbin winding switch to the left switches the machine into bobbin winding mode.
- Use the bobbin winding slider to adjust the amount of thread wound onto the bobbin to one of five levels.

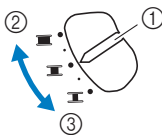


- ① Bobbin winding slider
- ② More
- ③ Less

→ The bobbin winding window appears.


Note

- When winding transparent nylon thread on the bobbin, stop bobbin winding when the bobbin is 1/2 to 2/3 full. If the bobbin was fully wound with transparent nylon thread, it may not be wound neatly.

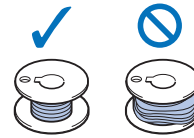

- 10** Press .

→ Bobbin winding starts. The bobbin stops rotating when bobbin winding is completed. The bobbin winding switch will automatically return to its original position.

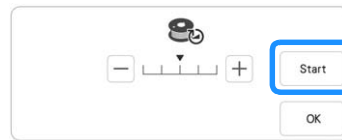

Note

- changes to while the bobbin is winding.
- Stay near the machine while winding the bobbin to make sure the bobbin thread is being wound correctly. If the bobbin thread is wound incorrectly, press immediately to stop the bobbin winding.
- The sound of winding the bobbin with stiff thread, such as nylon thread for quilting, may be different from the one produced when winding normal thread; however, this is not a sign of a malfunction.

Memo


- You can change the winding speed by pressing **-** (to decrease) or **+** (to increase) in the bobbin winding window.



- Press **OK** to minimize the bobbin winding window. Then, you can perform other operations, such as selecting a stitch or adjusting the thread tension, while the bobbin is being wound.
- Press **Ⓢ** (in top right of the LCD screen) to display the bobbin winding window again.



11 Cut the thread with cutter and remove the bobbin.

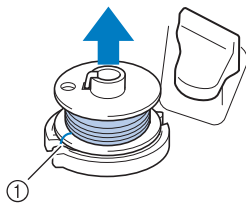


① Cutter

Memo

- When removing the bobbin, do not pull on the bobbin winder seat. Doing so could loosen or remove the bobbin winder seat, and could result in damage to the machine.


CAUTION

- Setting the bobbin improperly may cause the thread tension to loosen, breaking the needle and possibly resulting in injury.

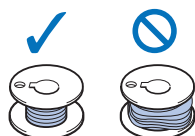


Using the Spool Pin

You can use the main spool pin to wind the bobbin before sewing. You cannot use this spool pin to wind the bobbin while sewing.

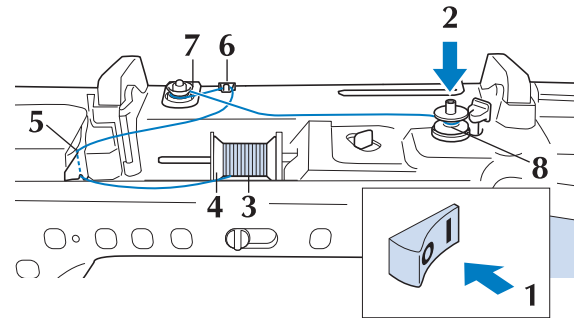


1 Turn the main power to ON and open the top cover.

2 Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.

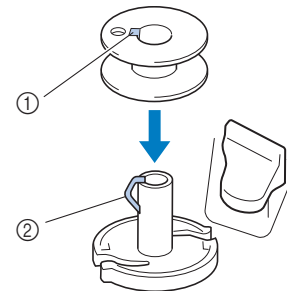

- ① Groove in the bobbin
- ② Spring on the shaft


3 Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

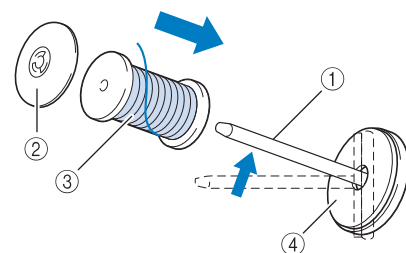

- ① Spool pin
- ② Spool cap
- ③ Thread spool
- ④ Spool felt


4 Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.

5 While holding the thread with both hands, pull the thread up from under the thread guide plate.

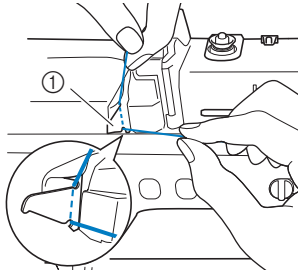


① Thread guide plate

6 Pass the thread through the thread guide.

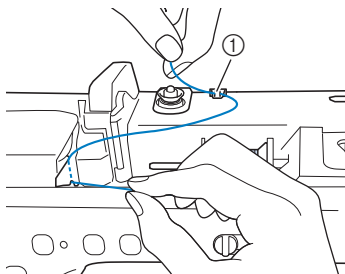

① Thread guide

7 Pass the thread around the pretension disk making sure that the thread is under the pretension disk.

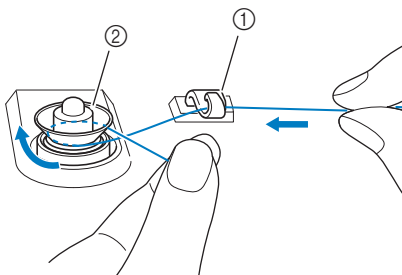


① Thread guide
② Pretension disk

8 Follow steps 7 through 11 on page 53 through 55.

Using the Spool Stand

To wind thread on the bobbin while the spool stand is installed, pass the thread from the spool through the thread guide on the telescopic thread guide, and then wind the bobbin according to steps 5 through

11 of “Using the Supplemental Spool Pin” on page 53 to page 55.

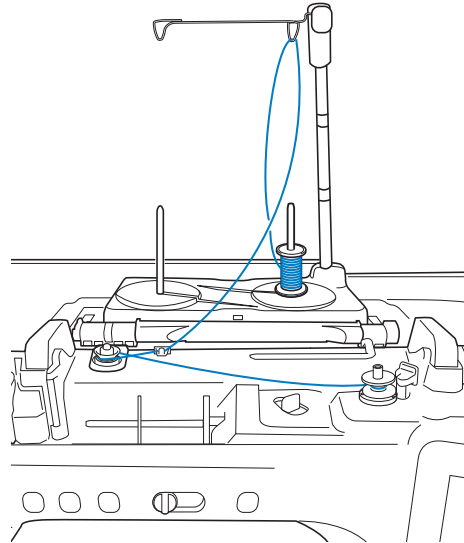

Memo

- Refer to page 25 to assemble the spool stand.
- Refer to page 66 to thread the machine using the spool stand.


CAUTION

- When winding thread on the bobbin, do not cross the bobbin winding thread with the upper thread in the thread guides.

Untangling Thread from Beneath the Bobbin Winder Seat

If the bobbin winding starts when the thread is not passed through the pretension disk correctly, the thread may become tangled beneath the bobbin winder seat.

Wind off the thread according to the following procedure.

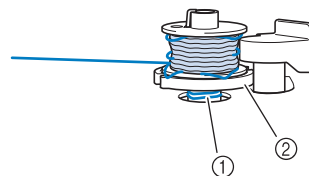

① Thread
② Bobbin winder seat


CAUTION

- Do not remove the bobbin winder seat even if the thread becomes tangled under the bobbin winder seat. It may result in injuries.

- 1** If the thread becomes tangled under the bobbin winder seat, press **Stop** once to stop the bobbin winding.




- 2** Cut the thread with scissors near the pretension disk.

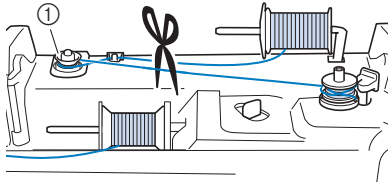


① Pretension disk

- 3** Push the bobbin winder switch to the right, and then raise the bobbin at least 100 mm (4 inches) from the shaft.

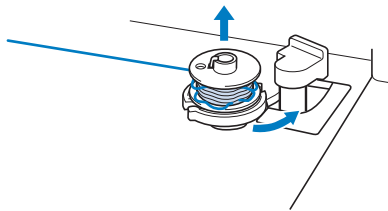

- 4** Cut the thread near the bobbin and hold the thread end of the spool with your left hand. Unwind the thread clockwise near the bobbin winder seat with your right hand as shown below.

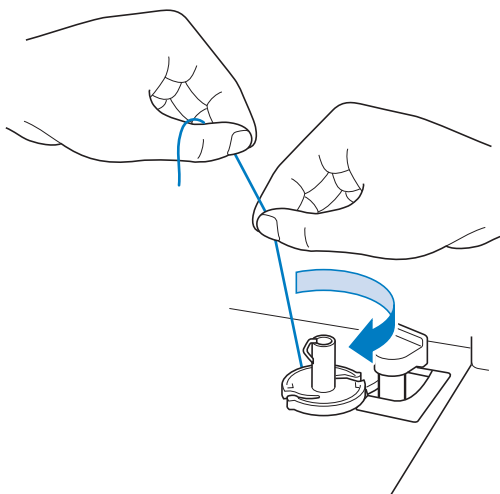

- 5** Wind the bobbin again.




Note


- Make sure that the thread passes through the pretension disk correctly (page 53).


Setting the Bobbin

⚠ CAUTION


- Use a bobbin thread that has been correctly wound. Otherwise, the needle may break or the thread tension will be incorrect.

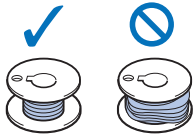


- The included bobbin was designed specifically for this machine. If bobbins from other models are used, the machine will not operate correctly. Use the included bobbin or bobbins of the same type (part code: SA156, (SFB: XA5539-151 / 115J05E0001)). SA156 is Class 15 type bobbin.
- Before inserting or changing the bobbin, be sure to press  in the LCD to lock all keys and buttons, otherwise injuries may occur if the "Start/Stop" button or any other button is pressed and the machine starts sewing.

- 1 Press  to lock all keys and buttons and raise the presser foot.

* If the message "OK to automatically lower the presser foot?" appears on the LCD screen, press

 to continue.

- 2 Slide the bobbin cover latch to the right.

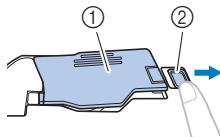


① Bobbin cover

② Latch


→ The bobbin cover opens.

- 3 Remove the bobbin cover.


- 4 Hold the bobbin with your right hand and hold the end of the thread with your left hand.

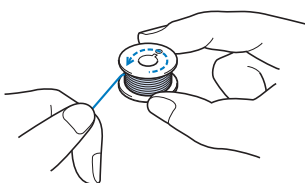


- 5 Set the bobbin in the bobbin case so that the thread unwinds to the left.

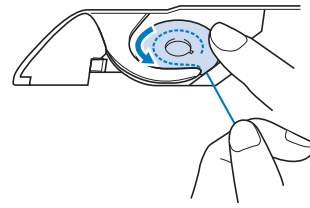

- 6 Hold the bobbin lightly with your right hand, and then guide the thread with your left hand.

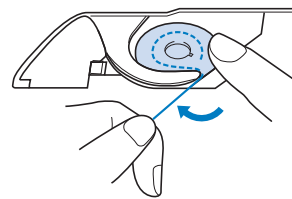

- 7 Pass the thread through the guide, and then pull the thread out toward the front.

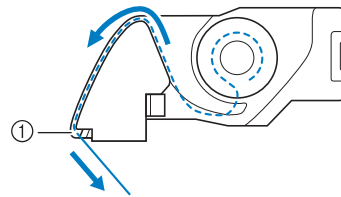


① Cutter

→ The cutter cuts the thread.



Note

- If the thread is not correctly inserted through the tension spring of the bobbin case, it may cause incorrect thread tension. (page 87)

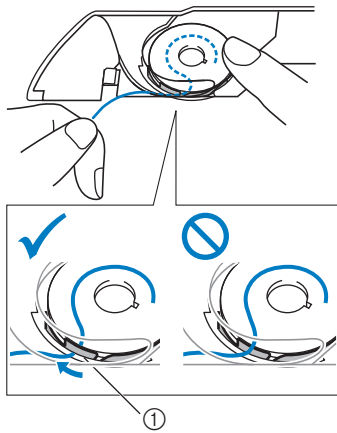

① Tension spring

⚠ CAUTION

- Be sure to hold down the bobbin with your finger and unwind the bobbin thread correctly. Otherwise, the thread may break or the thread tension will be incorrect.

- 8** Insert the tab in the lower-left corner of the bobbin cover (1), and then lightly press down on the right side to close the cover (2).



- 9** Press  to unlock all keys and buttons.

Pulling Up the Bobbin Thread

There may be some sewing applications where you want to pull up the bobbin thread; for example, when making gathers, darts, or doing free motion quilting or embroidery.




Memo


- You can pull up the bobbin thread after threading the upper thread (“UPPER THREADING” on page 61).

- 1** Follow steps ① to ④ in “Setting the Bobbin” on page 58 for installing the bobbin into the bobbin case.
- 2** Guide the bobbin thread through the groove, following the arrow in the illustration.

- * Do not cut the thread with the cutter.
- * Do not replace the bobbin cover.

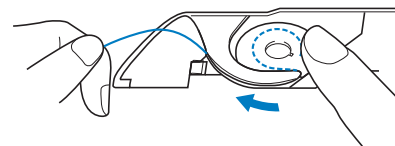


- 3** While holding the upper thread, press the “Needle Position” button to lower the needle.

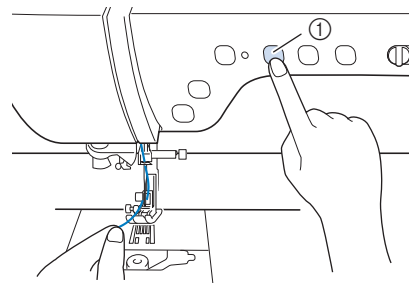


① “Needle Position” button

- 4** Press the “Needle Position” button to raise the needle.
- 5** Gently pull the upper thread. A loop of the bobbin thread will come out of the hole in the needle plate.

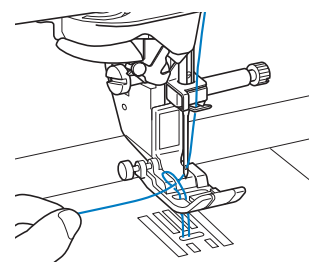


- 6** Pull up the bobbin thread, pass it under the presser foot and pull it about 10 cm (approx. 3-4 inches) toward the back of the machine, making it even with the upper thread.

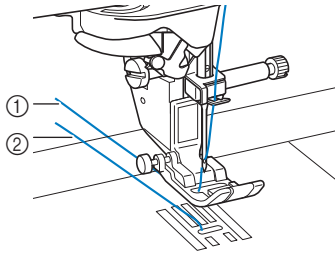

- ① Upper thread
- ② Bobbin thread

 - 7** Replace the bobbin cover.



UPPER THREADING


Upper Threading

⚠ CAUTION

- Be sure to thread the machine properly. Improper threading can cause the thread to tangle and break the needle, leading to injury.
- When using the walking foot, the side cutter or accessories not included with this machine, attach the accessory to the machine after threading the machine.


📖 Memo

- The automatic threading function can be used with home sewing machine needle sizes 75/11 through 100/16.
- When threads such as transparent nylon monofilament or specialty threads are used, it is not recommended to use the needle threader.
- The automatic threading function cannot be used with the wing needle or the twin needle.

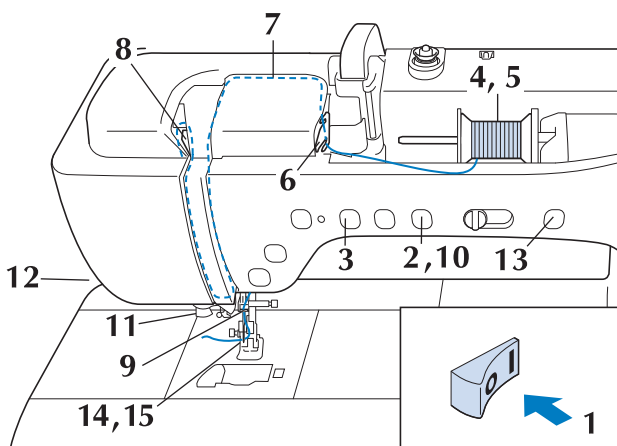


1 Turn the main power to ON.

2 Press the “Presser Foot Lifter” button to raise the presser foot.

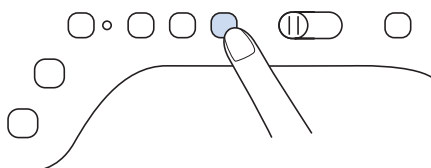

→ The upper thread shutter opens so the machine can be threaded.

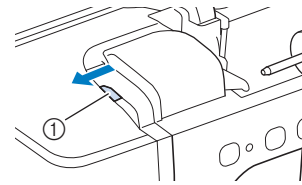


① Upper thread shutter

📖 Memo

- This machine is equipped with an upper thread shutter, allowing you to check that the upper threading is performed correctly.


3 Press the “Needle Position” button to raise the needle.

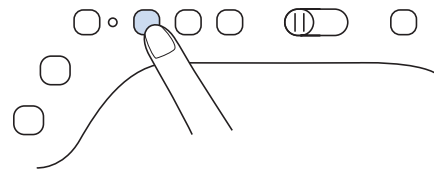

💡 Note

- If you try to thread the needle automatically without raising the needle, the thread may not thread correctly.

4 Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

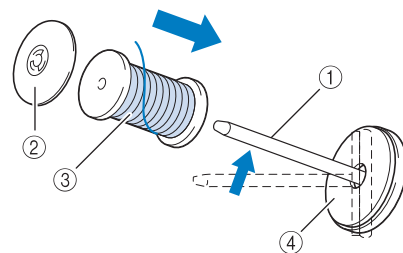

- ① Spool pin
- ② Spool cap
- ③ Thread spool
- ④ Spool felt


- 5 Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.

⚠ CAUTION

- If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large or medium) or the thread spool insert (mini king thread spool) that is closest in size to the thread spool. If a spool cap smaller than the thread spool is used, the thread may become caught in the slit on the end of the spool and cause the needle to break.


📖 Memo

- When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.

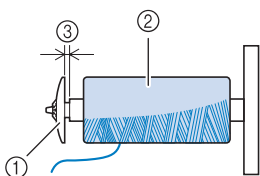


- ① Spool cap (small)
- ② Thread spool (cross-wound thread)
- ③ Space

- If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high is inserted onto the spool pin, use the thread spool insert (mini king thread spool).

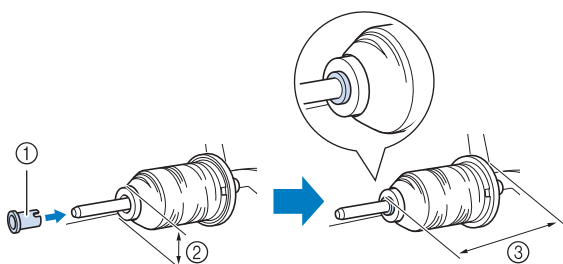


- ① Thread spool insert (mini king thread spool)
- ② 12 mm (1/2 inch)
- ③ 75 mm (3 inches)

- 6 While holding the thread with both hands, pull the thread up from under the thread guide plate.

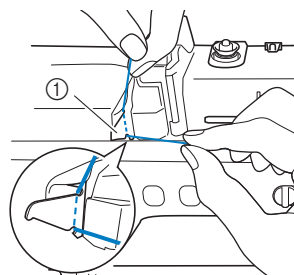


- ① Thread guide plate

- 7 While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

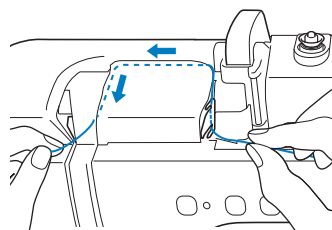


- 8 Guide the thread down, up, then down through the groove, as shown in the illustration.

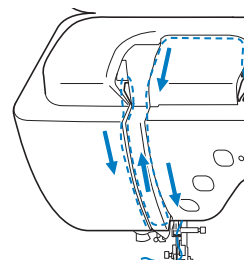


📖 Memo

- Look in the upper groove area to check if the thread catches on the thread take-up lever visible inside the upper groove area.

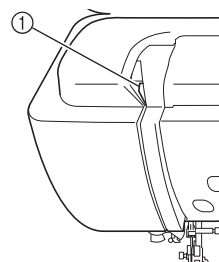


- ① Look in the upper groove area

- 9** Pass the thread through the needle bar thread guide (marked "6") by holding the thread with both hands and guiding it as shown in the illustration.

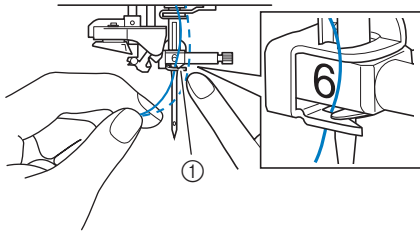


① Needle bar thread guide

- 10** Press the "Presser Foot Lifter" button to lower presser foot.

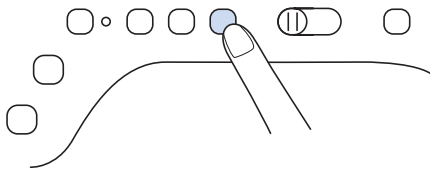


- 11** Pass the thread through the thread guide disks (marked "7"). Make sure that the thread passes through the groove in the thread guide.

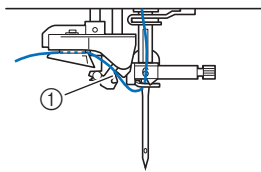

① Groove in thread guide

- 12** Pull the thread up through the thread cutter to cut the thread, as shown in the illustration.

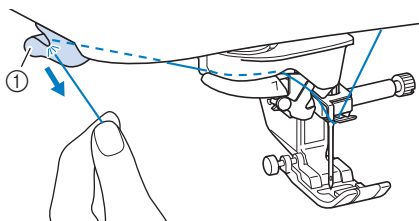


① Thread cutter




Note

- When using thread that quickly winds off the spool, such as metallic thread, it may be difficult to thread the needle if the thread is cut. Therefore, instead of using the thread cutter, pull out about 8 cm (approx. 3 inches) of thread after passing it through the thread guide disks (marked "7").

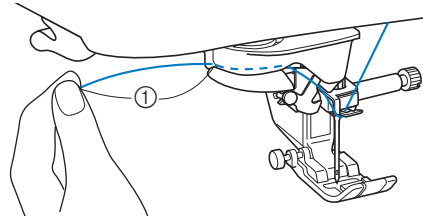

① 8 cm (approx. 3 inches) or more

- 13** Press the "Automatic Threading" button to have the machine automatically thread the needle.

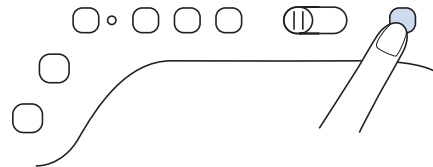

→ The thread passes through the eye of the needle.




Memo

- When the "Automatic Threading" button is pressed, the presser foot will be automatically lowered. After threading is finished, the presser foot moves back to the position before the "Automatic Threading" button was pressed.

- 14** Carefully pull the end of the thread that was passed through the eye of the needle.

- * If a loop was formed when the thread passed through the eye of the needle, carefully pull the loop of thread through the eye to the back of the needle.

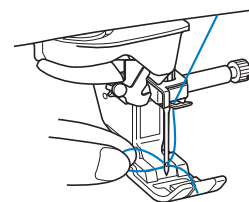


Note

- Pulling the loop of thread gently will avoid needle breakage.

- 15** Pull out about 10-15 cm (approx. 4-6 inches) of the thread, and then pass it under the presser foot toward the rear of the machine.

→ Raise the presser foot lever if the presser foot is lowered.

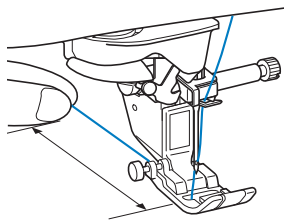

① About 10-15 cm (approx. 4-6 inches)




Memo

- If the needle could not be threaded or the thread was not passed through the needle bar thread guides, perform the procedure again starting from step ③. Then, pass the thread through the eye of the needle after step ⑨.




Note


- Some needles cannot be threaded with the needle threader. In this case, instead of using the needle threader after passing the thread through the needle bar thread guide (marked “6”), manually pass the thread through the eye of the needle from the front.

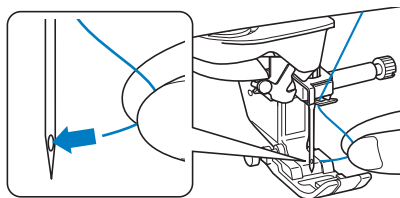


Using the Twin Needle Mode

The twin needle can only be used for stitch patterns that show  after being selected. Before you select a stitch pattern, make sure the stitch can be sewn in the twin needle mode (refer to the “STITCH SETTING CHART” on page 221).


⚠ CAUTION

- Twin needle (part code XE4963-001) is recommended for this machine. Contact your authorized Brother dealer for replacement needles (size 2.0/11 is recommended).
- Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.
- Do not sew with bent needles. The needle could break and cause injury.
- When using the twin needle, it is recommended to use presser foot “J”.
- When the twin needle is used, bunched stitches may occur depending on the types of fabric and thread that are used. Use monogramming foot “N” for decorative stitches.
- Before changing the needle or threading the machine, be sure to press  on the LCD Screen to lock all keys and buttons, otherwise injuries may occur if the “Start/Stop” button or any other button is pressed and the machine starts sewing.


- 1** Press  to lock all keys and buttons and then install the twin needle (“CHANGING THE NEEDLE” on page 69).

* If the message “OK to automatically lower the presser foot?” appears on the LCD screen, press


to continue.

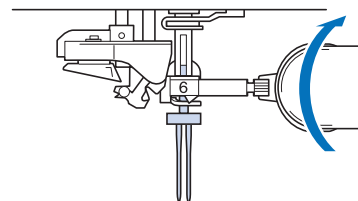


- 2** Thread the machine for the first needle according to the procedure for threading a single needle (“Upper Threading” on page 61).

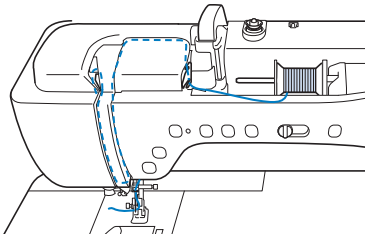

- 3** Pass the thread through the needle bar thread guide on the needle bar, then thread the needle on the left side manually.

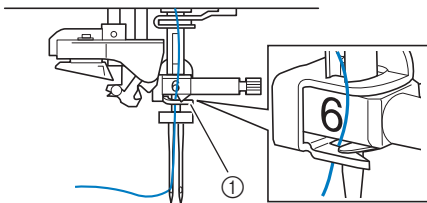


① Needle bar thread guide

 **Note**


- The “Automatic Threading” button cannot be used. Manually thread the twin needle from front to back. Using the “Automatic Threading” button may result in damage to the machine.

- 4** Pull up the supplemental spool pin and set it in the up position.

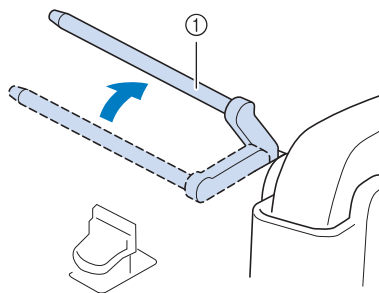

① Supplemental spool pin


- 5** Place the additional spool of thread on the supplemental spool pin, so that the thread unwinds from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.

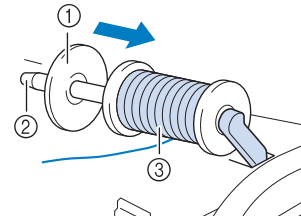

- ① Spool cap
- ② Spool pin
- ③ Thread spool


- 6** Hold the thread from the spool with both hands, and place the thread in the thread guide.

- * Do not place the thread in the pretension disks.

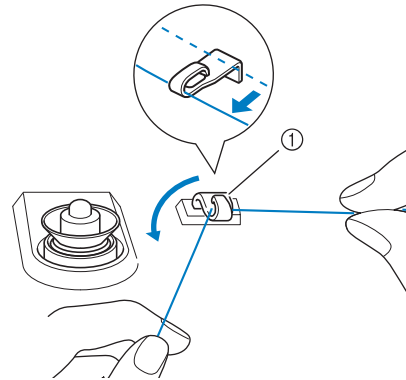


① Thread guide

- 7** While holding the thread from the spool, pull the thread through the lower notch in the thread guide plate, then through the upper notch. Hold the end of the thread with your left hand, and then guide the thread through the groove, following the arrows in the illustration.

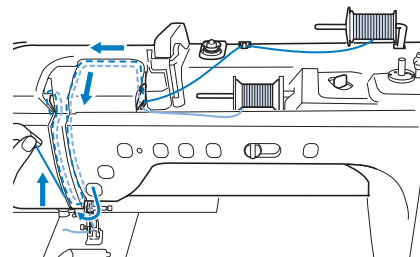

8 Continue threading; however, do not pass the thread in the needle bar thread guide “6” on the needle bar. Thread the needle on the right side.

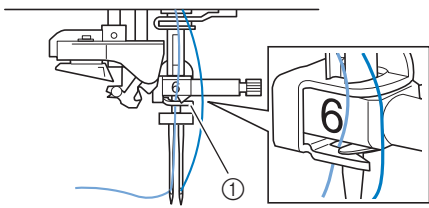

① Needle bar thread guide

9 Press to unlock all keys and buttons.

10 Select a stitch pattern. (Example:)

- * Refer to “Sewing a Stitch” on page 77 for selecting the stitch.
- * Refer to the “STITCH SETTING CHART” on page 221 for the proper stitch to use with presser foot “J”.

→ The selected stitch is displayed.

11 Press , and then press to select the twin needle mode.



→ Twin needle mode is set.



Note


- If the key is light gray after selecting the stitch, the selected stitch cannot be sewn in the twin needle mode.

⚠ CAUTION

- Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.

12 Start sewing.

Sample of Twin Needle Sewing

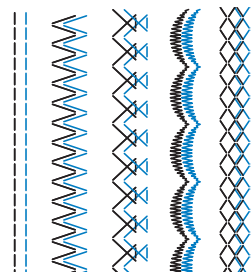

Memo

- To change direction when sewing with the twin needle, raise the needle from the fabric, raise the presser foot lever, and then turn the fabric.

Using the Spool Stand

The included spool stand is useful when using thread on spools with a large diameter (cross-wound thread). This spool stand can hold two spools of thread.

 


Memo


- Refer to page 25 to assemble the spool stand.
- Refer to page 56 to wind the bobbin when using the spool stand.

Using the Spool Stand

- Be sure to use a spool cap that is slightly larger than the spool. If the spool cap that is used is smaller or much larger than the spool, the thread may catch and sewing performance may suffer.




- When using thread on a thin spool, place the included spool felt on the spool pin, place the thread spool on the spool pin so that the center of the spool is aligned with the hole at the center of the spool felt, and then insert the spool cap onto the spool pin.

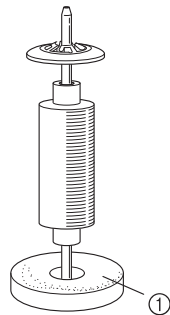


① Spool felt

- When using thread on a cone spool, use the spool holder. When using cone shaped thread spool with other than cotton thread, it is not necessary to use spool caps.

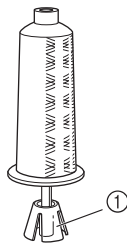

① Spool holder


- Depending on the size of spool or the amount of thread remaining, choose the appropriate sized spool cap (large or medium). Spool cap (small) cannot be used with the spool cap base.

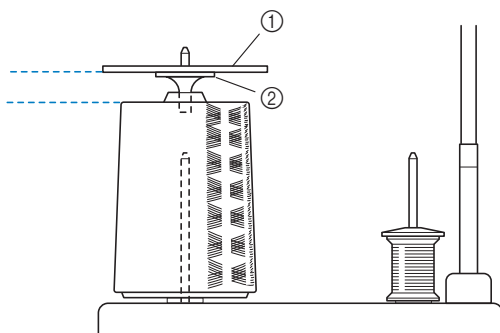


① Spool cap

② Spool cap base

1 Attach the spool stand to the machine.

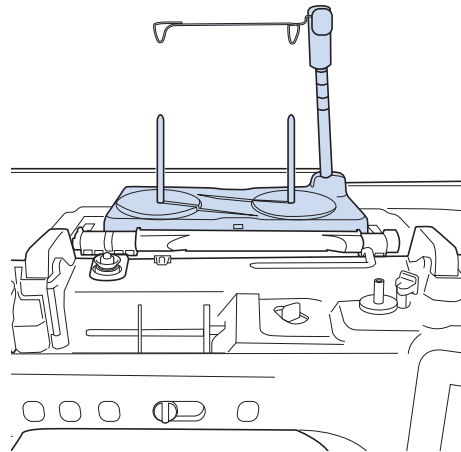

2 Place the spool of thread on the spool pin so that the thread feeds off the spool clockwise. Firmly insert the spool cap onto the spool pin.

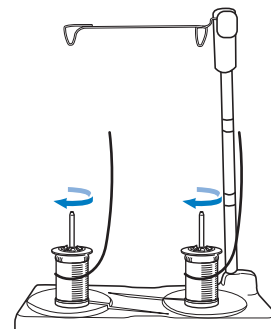


Note

- When using 2 spools of thread, make sure that both spools are feeding in the same direction.
- Make sure that the spools do not touch each other, otherwise the thread will not feed off smoothly, the needle may break, or the thread may break or become tangled. In addition, make sure that the spools do not touch the telescopic thread guide at the center.
- Make sure that the thread is not caught under the spool.

3 Pull the thread off the spool. Pass the thread from the back to the front through the thread guides at the top.

When using thread that quickly feeds off the spool, such as metallic thread, use the enclosed ring to prevent the thread from becoming entangled.


Threading sequence: Pull the thread from the spool, place the thread through the ring from the bottom up (1), into the thread guide (2) and through the ring from the top down (3). When using the ring, do not use the spool cap base.

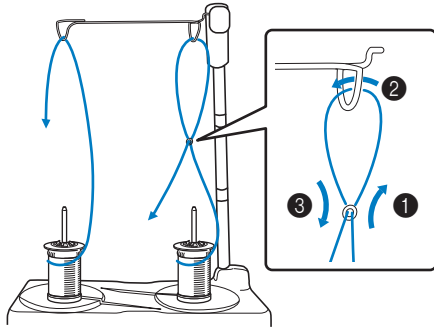

Note

- Guide the thread so that it does not become entangled with the other thread.
- After feeding the thread as instructed, wind any excess thread back onto the spool, otherwise the excess thread will become tangled.

4 Pass the thread through the machine's thread guide from the right to the left.

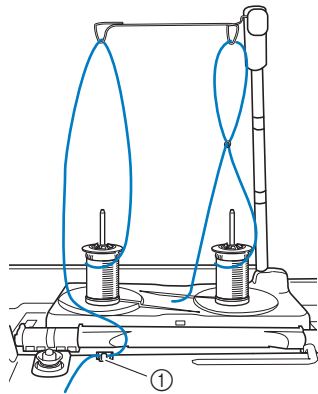

1 Thread guide


5 Thread the machine according to the steps 6 to 15 of "Upper Threading" on page 61.

Using Threads that Unwind Quickly

Using the Spool Net

If using transparent nylon monofilament thread, metallic thread, or other strong thread, place the included spool net over the spool before using it. When using specialty threads, threading must be done manually.

If the spool net is too long, fold it once to match it to the spool size before placing it over the spool.

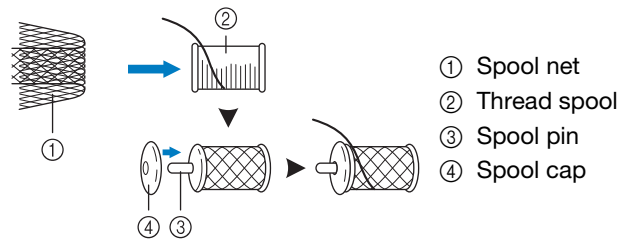



Memo

- When threading the spool with the spool net on, make sure that 5-6 cm (approx. 2 - 2-1/2 inches) of thread are pulled out.
- It may be necessary to adjust the thread tension when using the spool net.

CHANGING THE NEEDLE

⚠ CAUTION


- Always press  on the screen to lock all keys and buttons before changing the needle. If  is not pressed and the “Start/Stop” button or another operation button is pressed accidentally, the machine will start and injury may result.
- Use only home sewing machine needles made for home use. Other needles may bend or break and may cause injury.
- Never sew with a bent needle. A bent needle will easily break and may cause injury.

2




Memo

- To check the needle correctly, place the flat side of the needle on a flat surface. Check the needle from the top and the sides. Throw away any bent needles.

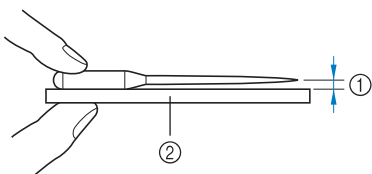

- ① Parallel space
- ② Level surface (bobbin cover, glass, etc.)

1 Press the “Needle Position” button to raise the needle.

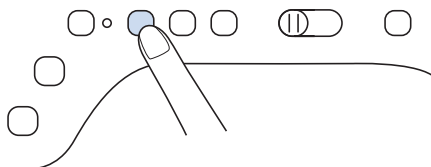

2 Press  to lock all keys and buttons.

- * If the message “OK to automatically lower the presser foot?” appears on the LCD screen, press


to continue.



Note


- Before replacing the needle, cover the hole in the needle plate with fabric or paper to prevent the needle from falling into the machine.

3 Use the screwdriver to turn the needle clamp screw toward the front of the machine and loosen the screw. Remove the needle.

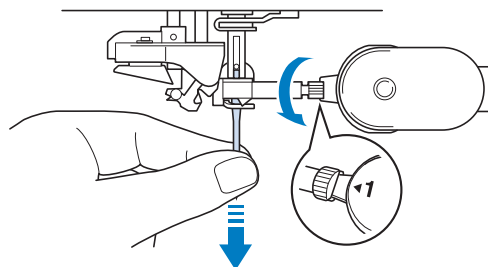


Note

- Do not apply pressure to the needle clamp screw. Doing so may damage the needle or machine.

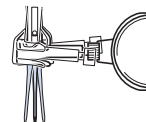

- 4** With the flat side of the needle facing the back, insert the new needle all the way to the top of the needle stopper (viewing window) in the needle clamp. Use a screwdriver to securely tighten the needle clamp screw.

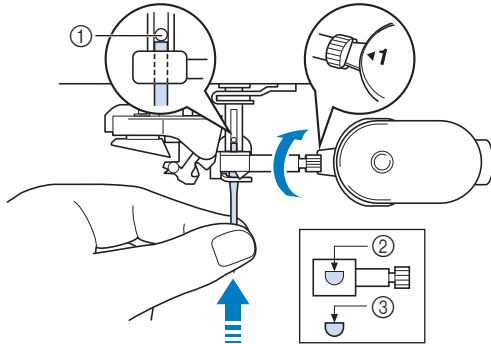

- ① Needle stopper
- ② Hole for setting the needle
- ③ Flat side of needle

⚠ CAUTION

- Be sure to push in the needle until it touches the stopper, and securely tighten the needle clamp screw with a screwdriver. If the needle is not completely inserted or the needle clamp screw is loose, the needle may break or the machine may be damaged.

- 5** Press  to unlock all keys and buttons.

Memo

- The automatic threading function can be used with home sewing machine needle sizes 75/11 through 100/16.
- When threads such as transparent nylon monofilament or speciality threads are used, it is not recommended to use the needle threader.

Fabric/Thread/Needle Combinations

- **Needles that can be used with this machine: Home sewing machine needles (size 65/9 - 100/16)**
* The larger the number, the larger the needle. As the numbers decrease, the needles get finer.
- **Thread that can be used with this machine: 30 - 90 weight**
* Never use thread of 20 weight or lower. It may cause machine to malfunction.
* The smaller the number, the heavier the thread. As the numbers increase, the thread gets finer.
- **The machine needle and thread that should be used depends on the type and thickness of the fabric. Refer to the following table when choosing the thread and needle appropriate for the fabric that you wish to sew.**
 - The combinations shown in the table provide a general guideline. Be sure to sew trial stitches on the actual number of layers and type of fabric to be used in your project.
 - The machine needles are consumables. For safety and best results, we recommend replacing the needle regularly. For details on when to replace the needle, refer to "CHANGING THE NEEDLE" on page 69.
- **In principle, use a fine needle and thread with lightweight fabrics, and a larger needle and heavier thread with heavyweight fabrics.**
- **Select a stitch appropriate for the fabric, and then adjust the stitch length. When sewing lightweight fabrics, make the stitch length finer (shorter). When sewing heavyweight fabrics, make the stitch length coarser (longer). (page 86)**
When sewing stretch fabrics, refer to "Sewing Stretch Fabrics" on page 84.

Fabric Type/Application		Thread		Size of needle	Stitch length mm (inch)
		Type	Weight		
Lightweight fabrics	Lawn, georgette, challis, organdy, crepe, chiffon, voile, gauze, tulle, lining, etc.	Polyester thread	60 - 90	65/9 - 75/11	Fine stitches 1.8-2.5 (1/16-3/32)
		Cotton thread, Silk thread	50 - 80		
Medium weight fabrics	Broadcloth, taffeta, gabardine, flannel, seersucker, double gauze, linen, terry cloth, waffle weave, sheeting, poplin, cotton twill, satin, quilting cotton, etc.	Polyester thread	60 - 90	75/11 - 90/14	Regular stitches 2.0-3.0 (1/16-1/8)
		Cotton thread, Silk thread	50 - 60		
Heavyweight fabrics	Denim (12 ounces or more), canvas, etc.	Polyester thread, Cotton thread	30	100/16	Coarse stitches 2.5-4.0 (3/32-3/16)
		Polyester thread	60	90/14 - 100/16	
	Cotton thread, Silk thread	30 - 50			
Stretch fabrics (knit fabrics, etc.)	Jersey, tricot, T-shirt fabric, fleece, interlock, etc.	Polyester thread, Cotton thread, Silk thread	50	Ball point needle 75/11 - 90/14	Setting appropriate for the fabric thickness
For top-stitching		Polyester thread, Cotton thread	30	90/14 - 100/16	Setting appropriate for the fabric thickness
			50 - 60	75/11 - 90/14	

■ Transparent Nylon thread

Use a home sewing machine topstitching needle, regardless of the fabric or thread.

■ Embroidery Needles



Use a 75/11 home sewing machine needle for embroidery.

⚠ CAUTION

- The appropriate fabric, thread and needle combinations are shown in the preceding table. If the combination of the fabric, thread and needle is not correct, particularly when sewing heavy fabrics (such as denim) with thin needles (such as 65/9 to 75/11), the needle may bend or break. In addition, the stitching may be uneven or puckered or there may be skipped stitches.


CHANGING THE PRESSER FOOT


 
⚠ CAUTION

- Always press  on the screen to lock all keys and buttons before changing the presser foot. If  is not pressed and the “Start/Stop” button or another button is pressed, the machine will start and may cause injury.
- Always use the correct presser foot for the selected stitch pattern. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, and may cause injury.
- Use presser feet made for this machine.


Removing the Presser Foot

- 1 Press the “Needle Position” button to raise the needle.

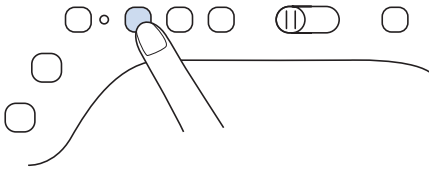


- 2 Press  to lock all keys and buttons.
 - * If the message “OK to automatically lower the presser foot?” appears on the LCD screen, press  to continue.

- 3 Raise the presser foot lever.

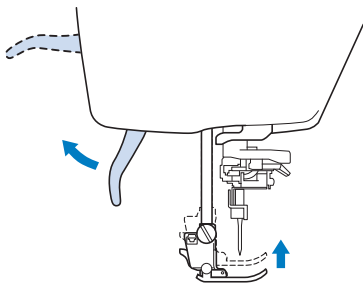

- 4 Press the black button on the presser foot holder and remove the presser foot.

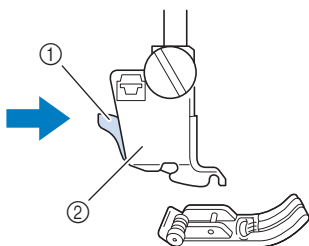


- ① Black button
- ② Presser foot holder

Attaching the Presser Foot


⚠ CAUTION

- Make sure that the presser foot is installed in the correct direction, otherwise the needle may strike the presser foot, breaking the needle and causing injuries.

- 1 Place the new presser foot under the holder, aligning the foot pin with the notch in the holder. Lower the presser foot lever so that the presser foot pin snaps into the notch in the holder.

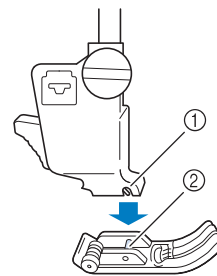

- ① Notch
- ② Pin

- 2 Press  to unlock all keys and buttons.
- 3 Raise the presser foot lever.

Attaching the Presser Foot with the Included Adapter

Some presser feet require using the included adapter and small screw, for example, the echo quilting foot "E", optional walking foot and so on. The following procedure shows how to attach the walking foot as an example.



Attaching the Walking Foot

The walking foot holds the fabric between the presser foot and the feed dogs to feed the fabric. This enables you to have better fabric control when sewing difficult fabrics (such as quilted fabrics or velvet) or fabrics that slip easily (such as vinyl, leather, or synthetic leather).



Note

- Thread the needle manually when using the walking foot, or only attach the walking foot after threading the needle using the "Automatic Threading" button.
- When sewing with the walking foot, sew at medium to low speeds.




Memo

- The walking foot can only be used with straight or zigzag stitch patterns. Reverse stitches cannot be sewn with the walking foot. Only select straight or zigzag stitch patterns with reinforcement stitches (page 79).


1 Follow the steps in "Removing the Presser Foot" on page 72.

2 Loosen the screw of the presser foot holder to remove the presser foot holder.

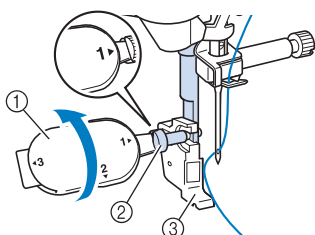


- ① Multi- purpose screwdriver
- ② Presser foot holder screw
- ③ Presser foot holder


3 Remove the screw of the presser foot completely from the presser foot shaft.

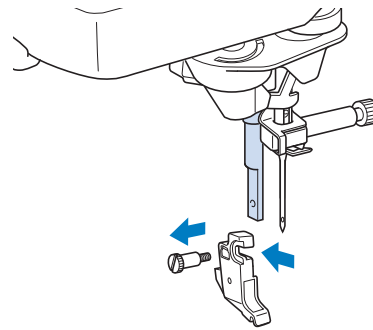


4 Set the adapter on the presser foot bar, aligning the flat side of the adapter opening with the flat side of the presser foot bar. Push it up as far as possible, and then tighten the screw securely with the screwdriver.

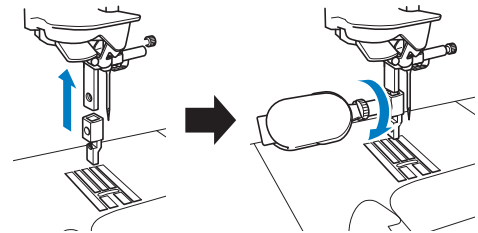

5 Turn the supplied small screw 2 or 3 times with your hand.

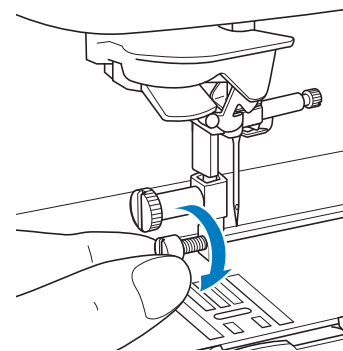


- 6** Set the operation lever of the walking foot so that the needle clamp screw is set in the fork. Position the shank of the walking foot on the presser foot bar.

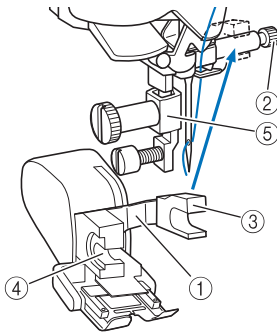

- ① Operation lever
- ② Needle clamp screw
- ③ Fork
- ④ Walking foot shank
- ⑤ Presser foot bar

- 7** Lower the presser foot lever. Insert the screw, and tighten the screw securely with the screwdriver.

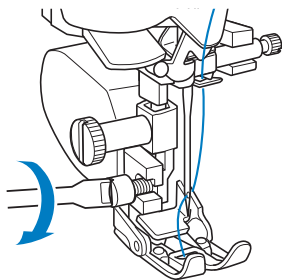

⚠ CAUTION

- Use the included screwdriver to tighten the screw securely. If the screw is loose, the needle may strike the presser foot and cause injury.
- Be sure to rotate the handwheel toward you (counterclockwise) to check that the needle does not strike the presser foot. If the needle strikes the presser foot, injury may result.

Using the Dual Feed Foot

The dual feed foot enables you to have best fabric control when sewing difficult fabrics that slip easily, such as quilted fabrics or fabrics that tend to stick to the bottom of a presser foot, such as vinyl, leather or synthetic leather.



Note

- When sewing with the dual feed foot, sew at medium to low speeds.




Memo

- When selecting stitches to be used with the dual feed foot, only the stitches that can be used will be activated on the display.
- When sewing fabric that easily sticks together, a more attractive finish can be achieved by basting the beginning of sewing.

■ Attaching the Dual Feed Foot


- 1** Follow the steps in “Removing the Presser Foot” on page 72.
- 2** Loosen the screw of the presser foot holder to remove the presser foot holder.

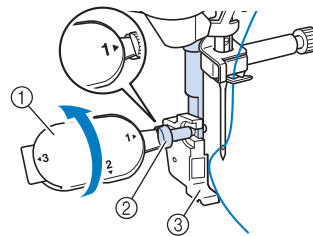


- ① Multi- purpose screwdriver
- ② Presser foot holder screw
- ③ Presser foot holder

- 3** Position the dual feed foot to the presser foot bar by aligning the notch of the dual feed foot to the large screw.

Side view

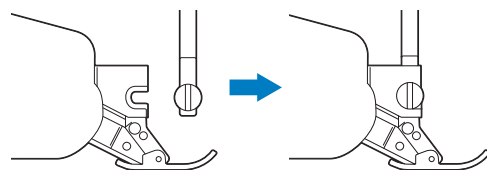


- 4** Hold the dual feed foot in place with your right hand, then using the included multi-purpose screwdriver, securely tighten the large screw.

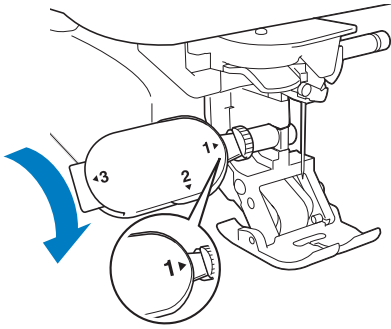


⚠ CAUTION

- Use the included screwdriver to firmly tighten the screw. If the screw is loose, the needle may strike the presser foot and possibly cause injury.


- 5** Plug the connector of the dual feed foot into the jack on the back of your machine.

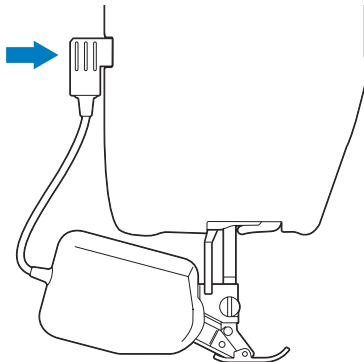

- 6** Press  to unlock all keys and buttons.
→ All keys and operation buttons are unlocked, and the previous screen is displayed.


■ Attaching/Detaching Toe

Attach the toe by aligning the pins with the notches and snap it into place.

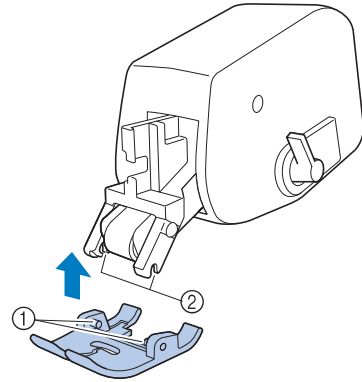


- ① Pins
- ② Notches

If you push down on the front and back part of the dual feed foot, the toe of the dual feed foot will snap off.

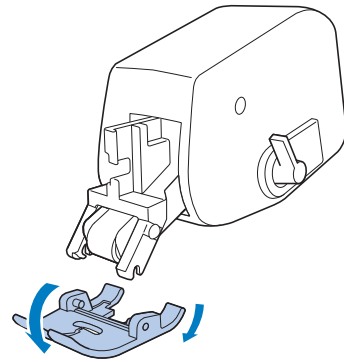


■ Using the Dual Feed Position Lever

When the feed position lever is up, the black roller belt on the dual feed is not engaged.

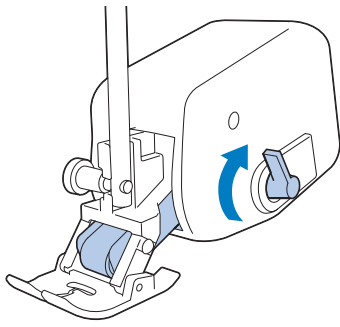

When the feed position lever is down, the black roller belt on the dual feed is engaged.

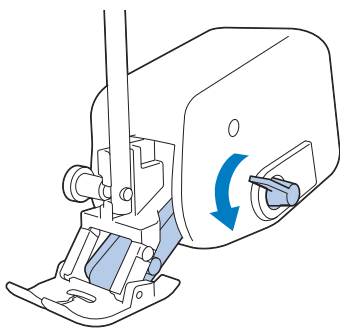

Note

- Do not operate the lever while sewing.

■ Adjusting the Amount of Fabric Feeding of the Dual Feed Foot

The dual feed mechanism pulls the top fabric according to the set stitch length. With troublesome fabrics, fine tune the set length, by changing the dual feed feed adjustment in the settings screen.



Note

- As a default, some keys mentioned in the following procedures appear in light gray and are not available. To enable the keys for specifying the settings, attach the dual feed foot to the machine. The keys are enabled after the dual feed foot is detected.

1 Press

→ The settings screen appears.


2 Press

→ The Sewing settings screen appears.

3 Display page 2 of the Sewing settings screen.

4 Touch the number to select the feeding of the top fabric.

- * Select "00" for sewing in most cases.
- * If the feed amount for the top fabric is too little, causing the fabric to be longer than the bottom fabric, touch a higher number to increase the feed amount for the top fabric.
- * If the feed amount for the top fabric is too much, causing the fabric to be shorter than the bottom fabric, touch a lower number to decrease the feed amount for the top fabric.

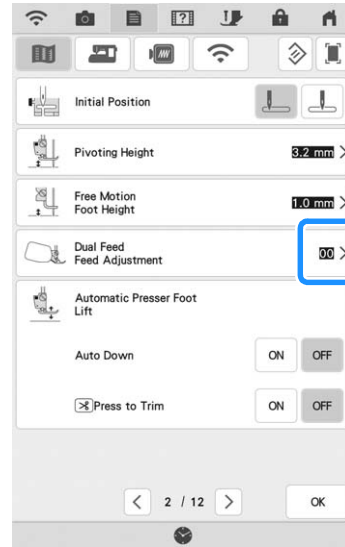

5 Press to return to the original screen.

SEWING


⚠ CAUTION


- To avoid injury, pay special attention to the needle while the machine is in operation. Keep your hands away from moving parts while the machine is in operation.
- Do not stretch or pull the fabric during sewing. Doing so may lead to injury.
- Do not use bent or broken needles. Doing so may lead to injury.
- Do not attempt to sew over basting pins or other objects during sewing. Otherwise, the needle may break and cause injury.
- If stitches become bunched, lengthen the stitch length setting before continuing sewing. Otherwise, the needle may break and cause injury.

2

Sewing Basics

Sewing a Stitch

- 1 Turn the main power to ON and press  to display the utility stitches, and push the “Needle Position” button to raise the needle.
- 2 Select the category, and then press the key of the stitch you want to sew.

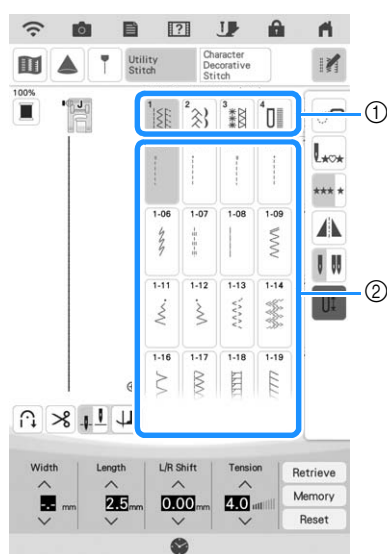

- ① Category
② Key of the stitch


→ The symbol of the correct presser foot will be displayed in the upper left corner of the LCD screen.

- 3 Install the presser foot (“CHANGING THE PRESSER FOOT” on page 72).

⚠ CAUTION

- Always use the correct presser foot. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, possibly resulting in injury. Refer to “STITCH SETTING CHART” on page 221 for presser foot recommendations.

- 4 Set the fabric under the presser foot. Hold the fabric and thread in your left hand, and push the “Needle Position” button to set the needle in the sewing start position.

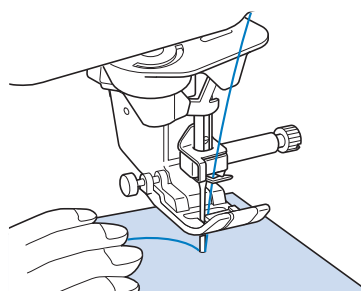

Memo


- The black button on the left side of presser foot “J” should be pressed only if the fabric does not feed or when sewing thick seams (page 83). Normally, you can sew without pressing the black button.

- 5 Lower the presser foot.

* You do not have to pull up the bobbin thread.

6 Adjust the sewing speed with the speed control slide.


* You can use this slide to adjust sewing speed during sewing.

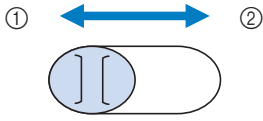

- ① Slow
- ② Fast

7 Press the “Start/Stop” button to start sewing.


* Guide the fabric lightly by hand.

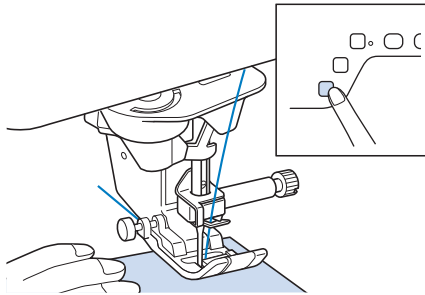


Memo

• When the foot controller is being used, you cannot start sewing by pressing the “Start/Stop” button.

8 Press the “Start/Stop” button again to stop sewing.

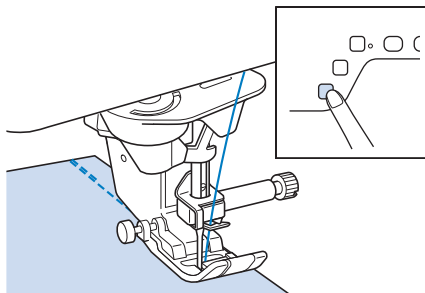

9 Press the “Thread Cutter” button to trim the upper and lower threads.

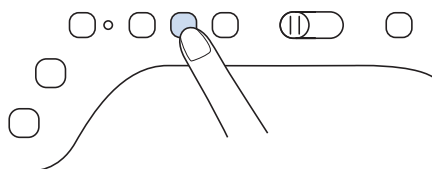


→ The needle will return to the up position automatically.

⚠ CAUTION

- Do not press the “Thread Cutter” button after the threads have been cut. Doing so could tangle the thread or break the needle and damage the machine.
- Do not press the “Thread Cutter” button when there is no fabric set in the machine or during machine operation. The thread may tangle, possibly resulting in damage.

Note

• When cutting thread thicker than #30, nylon monofilament thread, or other decorative threads, use the thread cutter on the side of the machine.

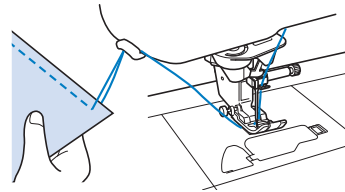

10 When the needle has stopped moving, raise the presser foot and remove the fabric.

Memo

• This machine is equipped with a bobbin thread sensor that warns you when the bobbin thread is almost empty. When the bobbin thread is nearly empty, the machine automatically stops. However, if the “Start/Stop” button is pressed, a few stitches can be sewn. When the warning displays, re-thread the machine immediately.

■ Using the Foot Controller

You can also use the foot controller to start and stop sewing.


⚠ CAUTION

- Do not allow fabric pieces and dust to collect in the foot controller. Doing so could cause a fire or an electric shock.

Memo

- When the foot controller is being used, you cannot start sewing by pressing the “Start/Stop” button.
- The foot controller cannot be used when embroidering.
- The foot controller can be used for sewing utility and decorative stitches when the embroidery unit is attached.


1 Insert the foot controller plug into its jack on the machine.

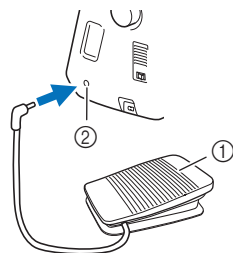

- ① Foot controller
- ② Foot controller jack

2 Slowly depress the foot controller to start sewing.

Pressing down on the foot controller increases the sewing speed; releasing the pressure on the foot controller decreases the sewing speed.

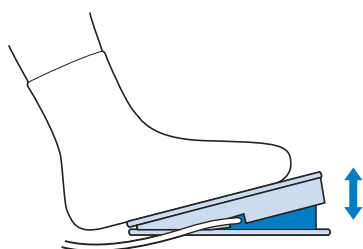


Memo

- The speed that is set using the sewing speed controller is the foot controller's maximum sewing speed.

3 Release the foot controller to stop the machine.


Sewing Reinforcement Stitches

Reverse/reinforcement stitches are generally necessary at the beginning and end of sewing. You can use the "Reverse Stitch" button to sew reverse/reinforcement stitches. When you keep pressing "Reinforcement Stitch" button, the machine will sew reinforcement stitch at that point 3 to 5 stitches, and then stop. (page 15)

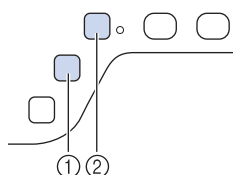

- ① "Reverse Stitch" button
- ② "Reinforcement Stitch" button

If the automatic reinforcement stitch is selected on the screen, reverse stitches (or reinforcement stitches) will be sewn automatically at the beginning of sewing when the "Start/Stop" button is pressed. Press "Reverse Stitch" button or "Reinforcement Stitch" button to sew reverse stitches (or reinforcement stitches) automatically at the end of sewing (Refer to the next procedure "Automatic Reinforcement Stitching".).

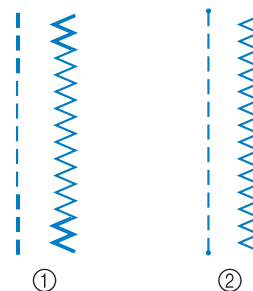

- ① Reverse stitch
- ② Reinforcement stitch

The operation performed when the button is pressed differs depending on the selected stitch pattern. (Refer to "STITCH SETTING CHART" on page 221.)


Memo


- When you press the "Reinforcement Stitch" button while sewing character/decorative stitch pattern, you can end sewing with a full stitch instead of at a mid-point.
- The green light on the right of the "Reinforcement Stitch" button lights up while the machine is sewing a full motif, and it automatically turns off when the sewing is stopped.

Automatic Reinforcement Stitching


After selecting a stitch motif, turn on the automatic reinforcement stitching function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch motif) at the beginning and end of sewing.

- 1 Select a stitch pattern.
- 2 Press  to set the automatic reinforcement stitching function.

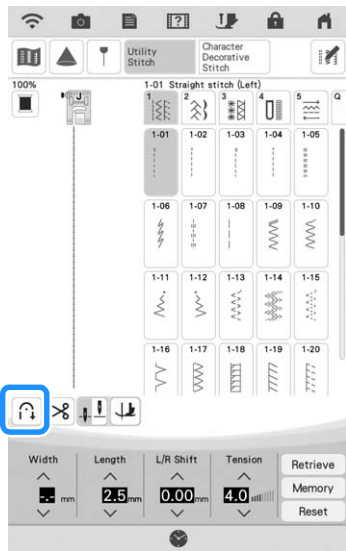


→ The key will display as .

 **Memo**

- Some stitches, such as buttonholes and bar tacks, require reinforcement stitches at the beginning of sewing. If you select one of these stitches, the machine will automatically turn on this function (the key appears as  when the stitch is selected).

- 3 Set the needle into the fabric, and then press the "Start/Stop" button.

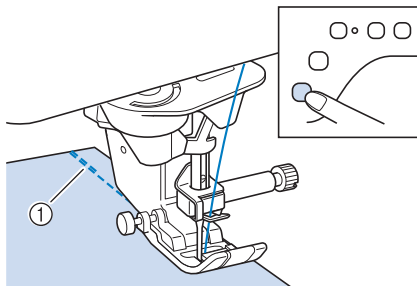


- 1 Reverse stitches (or reinforcement stitches)
→ The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.

 **Memo**

- Pressing the "Start/Stop" button while the machine is sewing pauses or restarts sewing.

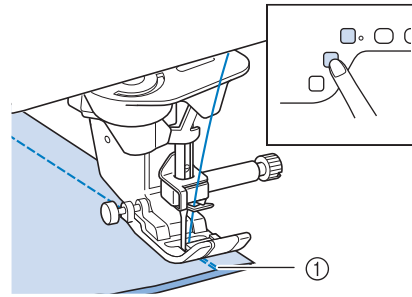

- 4 When the end of stitching has been reached, press the "Reverse Stitch" button or the "Reinforcement Stitch" button.









- 1 Reverse stitches (or reinforcement stitches)
→ The machine will sew reverse stitches (or reinforcement stitches) and stop.







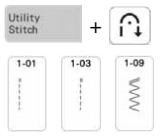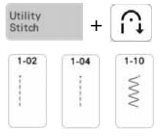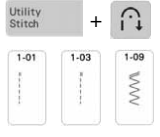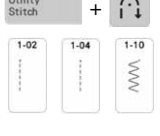

Memo

- To turn off the automatic reinforcement stitching function, press  again, so it appears as .

The operation performed when the button is pressed differs depending on the selected stitch pattern. Refer to the following table for details on the operation that is performed when the button is pressed.


	"Reverse Stitch" button 	"Reinforcement Stitch" button 
	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.	Machine starts sewing the stitches and sews 3 – 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.*	Machine starts sewing the stitches and sews 3 – 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
	Machine sews reverse stitches at the beginning and end of sewing.	Machine sews reverse stitches at the beginning and reinforcement stitches at the end of sewing.
	Machine sews reinforcement stitches at the beginning and reverse stitches at the end of sewing.*	Machine sews reinforcement stitches at the beginning and end of sewing.

	“Reverse Stitch” button 	“Reinforcement Stitch” button 
 + 	Machine starts sewing and then sews reinforcement stitches while holding the “Reverse Stitch” button.	Machine starts sewing at the beginning, then completes the stitch pattern and sews reinforcement stitches at the end of sewing.
 + 	Machine sews reinforcement stitches at the beginning and sews reinforcement stitches when the “Reverse Stitch” button is pressed.	Machine sews reinforcement stitches at the beginning, then completes the stitch pattern and sews reinforcement stitches at the end of sewing.

* If “Reinforcement Priority” of the settings screen is set to “ON” (page 30), reinforcement stitches are sewn instead of reverse stitches.

Automatic Presser Foot Lowering Function and Thread Cutting Function

By setting the machine to automatically raise and lower the presser foot, sewing operations can be performed more smoothly.

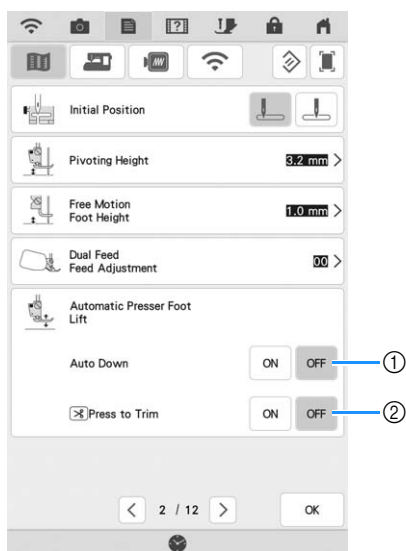


No.	Key Name	Explanation
①	Auto Down	When “Auto Down” in the machine settings screen is set to “ON”, pressing the “Start/Stop” button or depressing the foot controller automatically lowers the presser foot (if it is raised) before starting to sew.

No.	Key Name	Explanation
②	Press to Trim	When “Press to Trim” in the machine settings screen is set to “ON”, pressing the “Thread Cutter” button automatically lowers the presser foot (if it is raised) before cutting the thread. The presser foot will be raised after the thread is cut.


Sewing Curves

Sew slowly while keeping the seam parallel with the fabric edge as you guide the fabric around the curve.

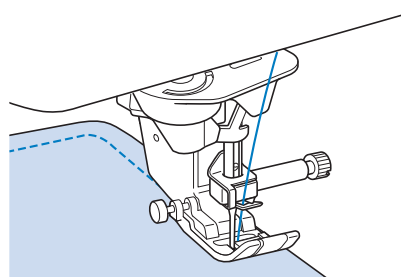

Changing Sewing Direction


Stop the machine. Leave the needle in the fabric, and press the “Presser Foot Lifter” button to raise the presser foot. Using the needle as a pivot, turn the fabric so that you can sew in the new direction. Press the “Presser Foot Lifter” button to lower the presser foot and start sewing.

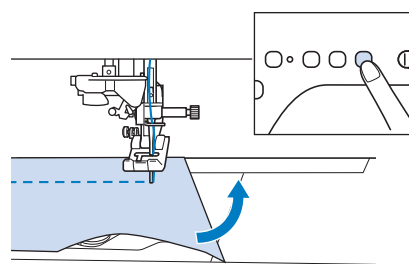

The pivot setting is useful when changing the sewing direction. When the machine is stopped at the corner of the fabric, the machine stops with the needle in the fabric and the presser foot is automatically raised so the fabric can easily be rotated (“Pivoting” on page 89).

■ Sewing a Seam Allowance of 0.5 cm or Less


Baste the corner before sewing, and then, after changing the sewing direction at the corner, pull the basting thread toward the back while sewing.

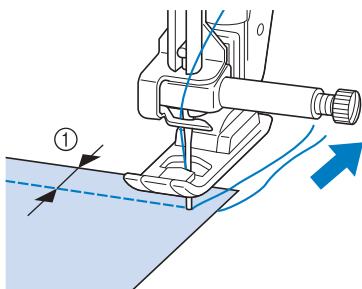

① 5 mm (approx. 3/16 inch)

Sewing Heavyweight Fabrics

The machine can sew fabrics up to 6 mm (approx. 1/4 inch) thick. If the thickness of a seam causes sewing to occur at an angle, help guide the fabric by hand and sew on the downward slope.

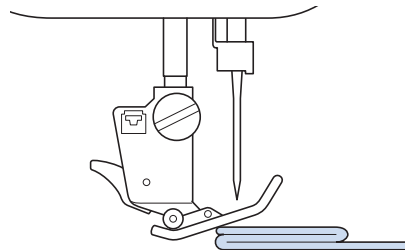


⚠ CAUTION

- Do not forcefully push fabrics more than 6 mm (approx. 1/4 inch) thick through the machine. This may cause the needle to break and cause injury.
- Thicker fabrics require a larger needle. (page 71)

■ If the Fabric Does Not Fit Under the Presser Foot

If the presser foot is in the up position, and you are sewing heavyweight or multiple layers of fabric which do not fit easily under the presser foot, use the presser foot lever to raise the presser foot to its highest position. The fabric will now fit under the presser foot.

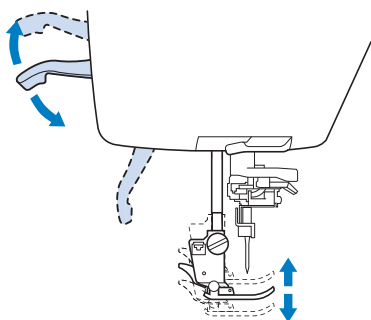

Memo


- You cannot use the presser foot lever after the presser foot has been raised using the “Presser Foot Lifter” button.

■ If the Fabric Does Not Feed


If the fabric does not feed when starting to sew or when sewing thick seams, press the black button on the left side of presser foot “J”.

1 Raise the presser foot.

2 While keeping the black button on the left side of presser foot “J” pressed in, press the “Presser Foot Lifter” button to lower the presser foot.

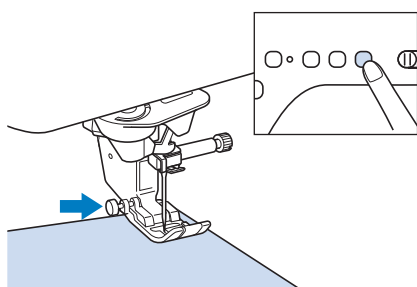

3 Release the black button.

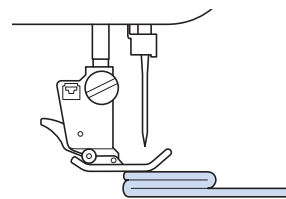

→ The presser foot remains level, enabling the fabric to be fed.

Memo

- Once the trouble spot has been passed, the foot will return to its normal position.
- When “Automatic Fabric Sensor System” (Automatic Presser Foot Pressure) in the machine settings screen is set to “ON”, the thickness of the fabric is automatically detected by the internal sensor so the fabric can be fed smoothly for best sewing results (page 91).

Sewing Hook-and-Loop Fastener Tape

CAUTION


- Adhesive backed hook-and-loop fastener tape is not designed for sewing. When glue adheres to the needle or the bobbin hook race, it may cause malfunction.
- If non-adhesive hook-and-loop fastener tape is sewn with a fine needle (65/9-75/11), the needle may bend or break.

Note

- Before starting to sew, baste the fabric and hook-and-loop fastener tape together.

Make sure that the needle passes through the hook-and-loop fastener tape by rotating the handwheel and lowering the needle into the hook-and-loop fastener tape before sewing. Sew the edge of the hook-and-loop fastener tape at a slow speed.


If the needle does not pass through the hook-and-loop fastener tape, replace the needle size with the needle for thick fabrics (page 71).

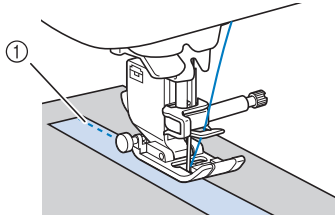

① Edge of the hook-and-loop fastener tape

Sewing Lightweight Fabrics

Place thin paper or tear away embroidery stabilizer under thin fabrics to make sewing easier. Gently tear off the paper or the stabilizer after sewing.

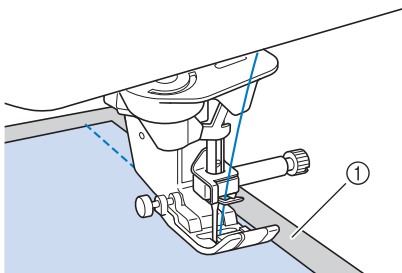

① Thin paper

Sewing Stretch Fabrics


First, baste together the pieces of fabric, and then sew without stretching the fabric.

In addition, a better result can be achieved by using thread for knits or a stretch stitch.



Memo

- For best results when sewing stretch fabrics, decrease the pressure of the presser foot (“Using the Machine Setting Mode Key” on page 29).

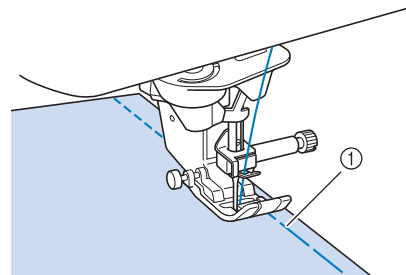

① Basting stitching

STITCH SETTINGS

When you select a stitch, your machine automatically selects the appropriate stitch width, stitch length, and upper thread tension. However, if needed, you can change any of the individual settings.

Note

- Settings for some stitches cannot be changed (refer to “STITCH SETTING CHART” on page 221).
- If you turn off the machine or select another stitch without saving stitch setting changes (“Saving Your Stitch Settings” on page 109), the stitch settings will return to their default settings.

Setting the Stitch Width

Follow the steps below when you want to change the zigzag stitch pattern width.




Memo

- For an alternate method of changing the stitch width using the speed controller, refer to page 128.


Example:

Press to narrow the zigzag stitch pattern width.

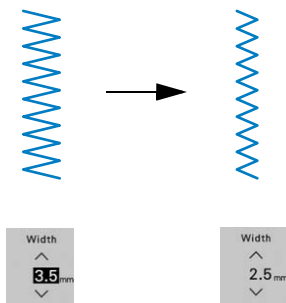

→ The value in the display gets smaller.

Press to widen the zigzag stitch pattern width.

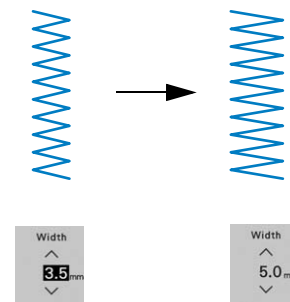

→ The value in the display gets bigger.

Memo

 
- Press to save the stitch settings.
- Press to check changes made to the stitch.
- Press to return the stitch width to the original setting.

Note

- After adjusting the stitch width, slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


Setting the Stitch Length

Follow the steps below when you want to change the stitch pattern length.




Example:

Press to shorten the stitch length.

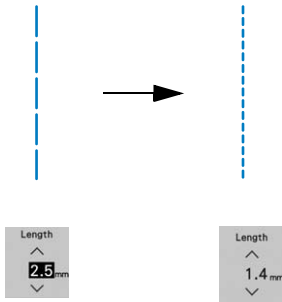

→ The value in the display gets smaller.

Press to lengthen the stitch length.

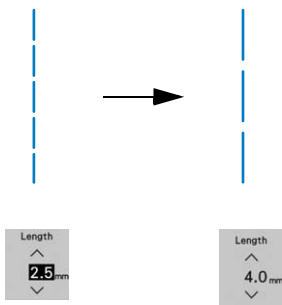

→ The value in the display gets bigger.

Memo

- Press to save the stitch settings.
- Press to check changes made to the stitch.
- Press to return the stitch length to the original setting.

CAUTION

- If the stitches get bunched together, lengthen the stitch length and continue sewing. Do not continue sewing without lengthening the stitch length. Otherwise, the needle may break and cause injury.


Setting the “L/R Shift”

Follow the steps below when you want to change the placement of the zigzag stitch pattern by moving it left and right.




Example:

Press to shift the stitch pattern to the left.

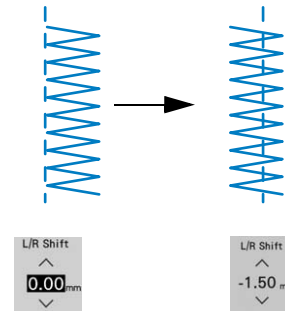

→ The value in the display appears with a minus sign.

Press to shift the stitch pattern to the right side of the left needle position.

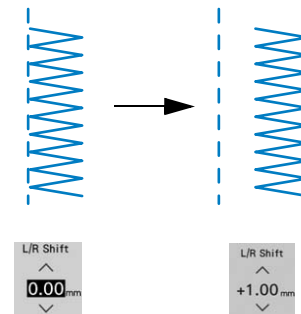

→ The value in the display appears with a plus sign.

Memo

- Press to save the stitch settings.
- Press to check changes made to the stitch.
- Press to return to the original setting.

Note

- After adjusting the “L/R Shift”, slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


Setting the Thread Tension

You may need to change the thread tension, depending on the fabric and thread being used. Follow the steps below to make any necessary changes.



■ Proper Thread Tension

The upper thread and the bobbin thread should cross near the center of the fabric. Only the upper thread should be visible from the right side of the fabric, and only the bobbin thread should be visible from the wrong side of the fabric.

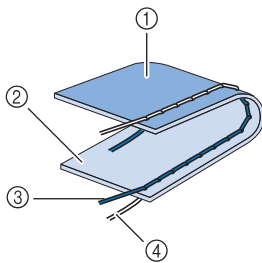

- ① Wrong side
- ② Surface
- ③ Upper thread
- ④ Bobbin thread


■ Upper Thread is Too Tight

If the bobbin thread is visible from the right side of the fabric, the upper thread is too tight.



Note

- If the bobbin thread was incorrectly threaded, the upper thread may be too tight. In this case, refer to “Setting the Bobbin” on page 58 and rethread the bobbin thread.

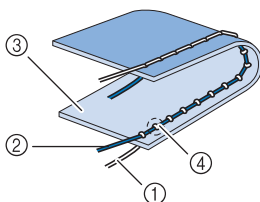


- ① Bobbin thread
- ② Upper thread
- ③ Surface
- ④ Locks appear on surface of fabric

Press , to loosen the upper thread.

Memo

- When you finish sewing, remove the bobbin cover and then make sure that the thread is shown as below. If the thread is not shown as below, the thread is not inserted through the tension-adjusting spring of the bobbin case correctly. Reinsert the thread correctly. For details, refer to page 58.

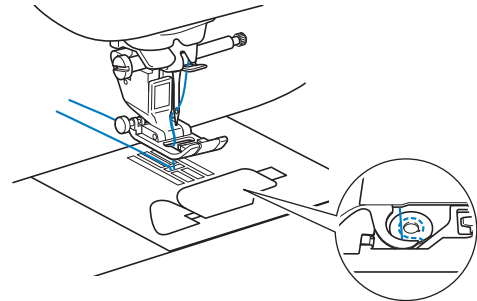


■ Upper Thread is Too Loose

If the upper thread is visible from the wrong side of the fabric, the upper thread is too loose.



Note


- If the upper thread was incorrectly threaded, the upper thread may be too loose. In this case, refer to “Upper Threading” on page 61 and rethread the upper thread.

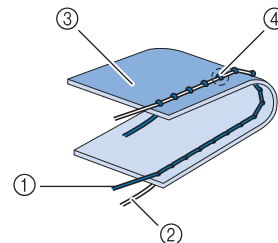

- ① Upper thread
- ② Bobbin thread
- ③ Wrong side
- ④ Locks appear on wrong side of fabric

Press , to tighten the upper thread.

Memo


- Press  to return the thread tension to the original setting.


USEFUL FUNCTIONS



Automatic Thread Cutting

After selecting a stitch pattern, turn on the automatic thread cutting function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch pattern) at the beginning and end of sewing, and trim the threads at the end of sewing. This function is useful when sewing buttonholes and bar tacks.

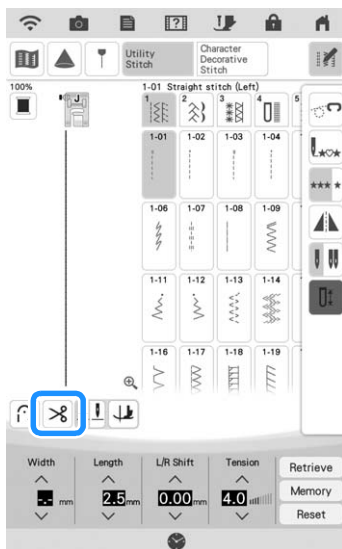

1 Select a stitch pattern.

2 Press  to set the automatic thread cutting function.




→ You get  , and the machine is set for automatic thread cutting function and automatic reverse/reinforcement stitching.

Memo

- To turn off the automatic thread cutting function, press  again, so it appears as .
- This function is set automatically when doing embroidery.

3 Set the fabric in the start position and start sewing.

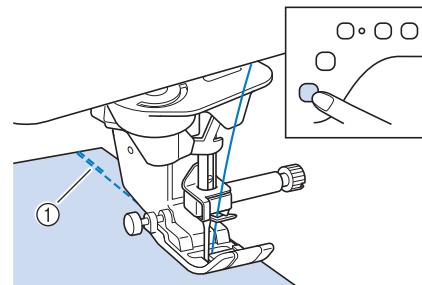

- ① Reverse stitches (or reinforcement stitches)
→ The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.

Memo

- If you press the “Start/Stop” button to pause sewing, press the same button again to continue. The beginning reverse/reinforcement stitches will not be sewn again.

4 Once you have reached the end of the stitching, press “Reverse Stitch” button or “Reinforcement Stitch” button once.

If stitching, such as buttonholes and bar tacking, that includes reinforcement stitching has been selected, this operation is unnecessary.



- ① The point where the “Start/Stop” button was pressed.
- ② The point where the “Reverse Stitch” button or the “Reinforcement Stitch” button was pressed.
- ③ The thread is cut here.

Memo

- The automatic thread cutting function will not be performed if the “Start/Stop” button is pressed while sewing. Press the “Reverse Stitch” button or the “Reinforcement Stitch” button at the end of the stitching.


Pivoting


If the pivot function is selected, the machine stops with the needle lowered (in the fabric) and the presser foot is automatically raised to an appropriate height when the “Start/Stop” button is pressed. When the “Start/Stop” button is pressed again, the presser foot is automatically lowered and sewing continues. This function is useful for stopping the machine to rotate the fabric.

⚠ CAUTION


- When the pivot setting is selected, the machine starts when the “Start/Stop” button is pressed or the foot controller is pressed down even if the presser foot has been raised. Be sure to keep your hands and other items away from the needle, otherwise injuries may occur.

📖 Memo

- When the pivot setting is selected, the height of the presser foot when sewing is stopped can be changed according to the type of fabric being sewn. Press  to display “Pivoting Height” of the settings screen. Touch the number to select the height. To raise the presser foot further, increase the setting. (Normally, 3.2 mm is set.)

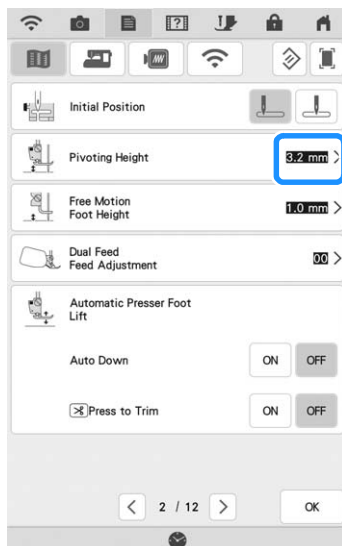


💡 Note

- The pivot function can only be used with stitches where presser foot “J”, “N” or “X” (Couching foot) is indicated in the upper-left corner of the screen. If any other stitch is selected,  appears as light gray and is not available.
- If the pivot function is selected, “Presser Foot Height” in the settings screen is not available and the setting cannot be changed.




1 Select a stitch.

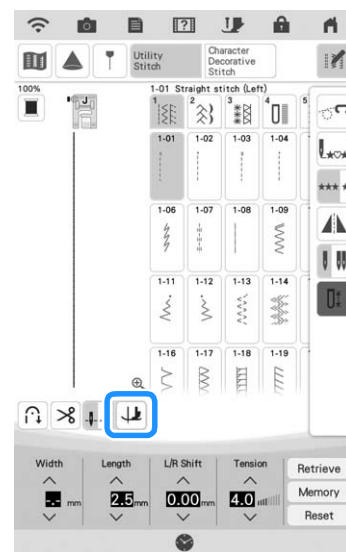
2 Press to select the pivot setting.




→ The key appears as .

💡 Note

- To use the pivot function, the needle position should be set to .
- When the needle position is set to , auto up key appears instead of pivot key. The auto up key is set to , the presser foot and needle are raised automatically if the machine is stopped.

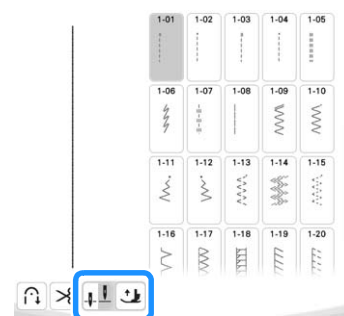


- 3** Place the fabric under the presser foot with the needle at the starting point of the stitching, and then press the “Start/Stop” button. The machine will begin sewing.

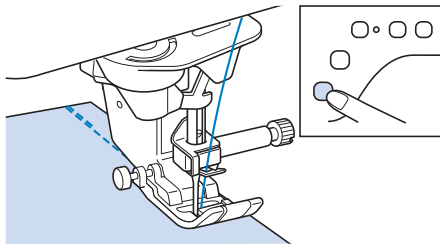

Memo


- If you press the “Start/Stop” button to pause sewing, press it again to continue, reverse stitches (or reinforcement stitches) will not be sewn.

- 4** Press the “Start/Stop” button to stop the machine at the point where the sewing direction changes.

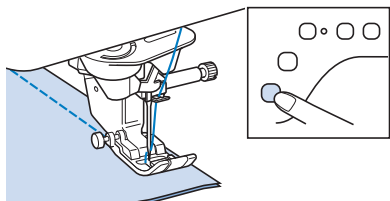

→ The machine stops with the needle in the fabric, and the presser foot is raised.

- 5** Rotate the fabric, and then press the “Start/Stop” button.

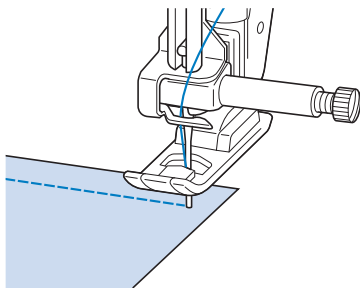


→ The presser foot is automatically lowered, and sewing continues.

Using the Knee Lifter

Using the knee lifter, you can raise and lower the presser foot with your knee, leaving both hands free to handle the fabric.


- 1** Change the operating position of the knee lifter handle before inserting into the machine. Slide up the knee lifter handle slightly and rotate it while releasing pressure so handle will click into position.

* The knee lifter can be adjusted to three different angles.

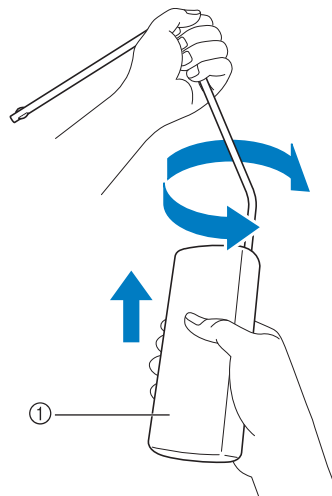


① Knee lifter handle

→ Rotate knee lifter handle till it clicks into the selected position that is most comfortable for you.

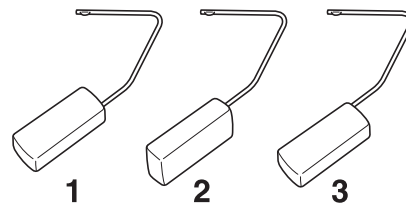

- 2** Align the tabs on the knee lifter with the notches in the knee lifter slot on the front of the machine. Insert the knee lifter bar as far as possible.

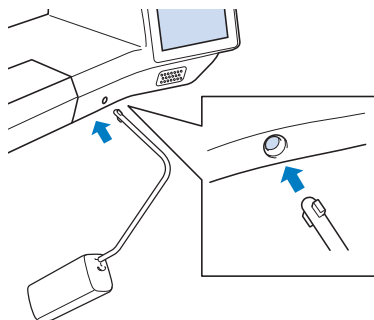

CAUTION


- Only change position of the knee lifter handle when knee lifter is not on the machine, otherwise the knee lifter may damage the mounting slot on front of the machine.



Note

- If the knee lifter bar is not pushed into the mounting slot as far as possible, it may come out during use.

- 3** Use your knee to move the knee lifter bar to the right in order to raise the presser foot. Release the knee lifter to lower the presser foot.

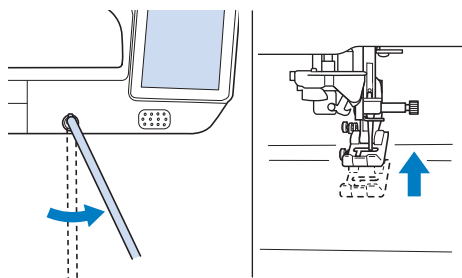

CAUTION

- Be sure to keep your knee away from the knee lifter during sewing. If the knee lifter is pushed during machine operation, the needle may break or the thread tension may loosen.





Memo

- When the presser foot is in the up position, move the knee lifter to the far right and then release to return the presser foot to the down position.

Automatic Fabric Sensor System (Automatic Presser Foot Pressure)


The thickness of the fabric is automatically detected and the presser foot pressure is automatically adjusted with an internal sensor while sewing, to insure that your fabric is fed smoothly. The fabric sensor system works continuously while sewing. This function is useful for sewing over thick seams (page 82), or quilting (page 126).

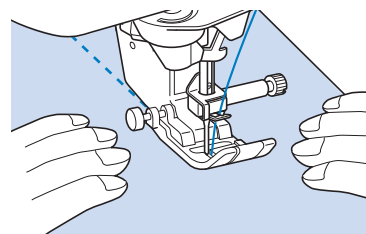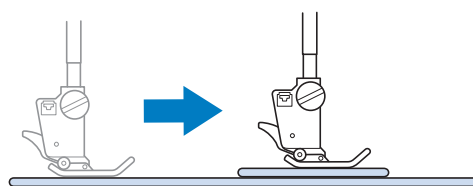

- 1** Press .

→ The settings screen appears.

- 2** Set “Automatic Fabric Sensor System” to “ON”.

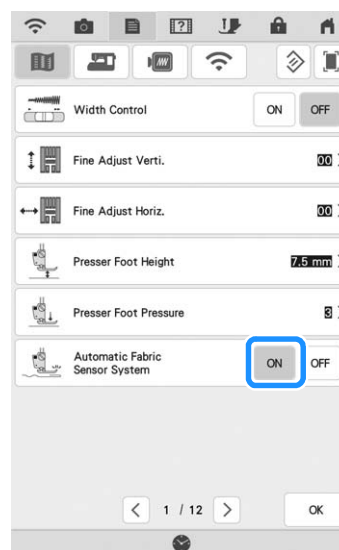


- 3** Press  to return to the original screen.

Needle Position - Stitch Placement


When the "Needle Position - Stitch Placement" is "ON", the needle will be partially lowered for precise stitch placement and then completely lowered when you press the "Needle Position" button. Each press of the "Needle Position" button changes the needle to the next position. When the "Needle Position - Stitch Placement" is "OFF", each press of the "Needle Position" button simply raises and then lowers the needle.

"Needle Position - Stitch Placement" is "ON"

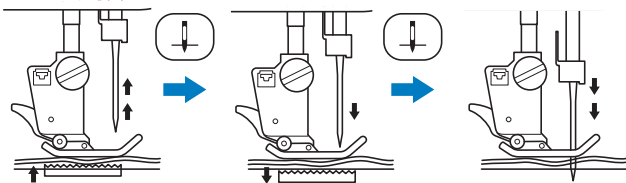


* When the needle is nearly lowered by pressing the "Needle Position" button, the feed dogs are lowered. At this time, the fabric can be shifted to finely adjust the needle drop position.

"Needle Position - Stitch Placement" is "OFF"

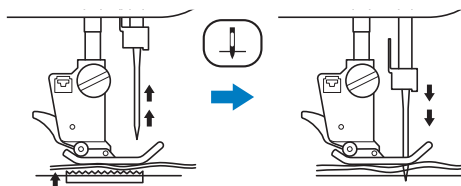

1 Press .

2 Set "Needle Position - Stitch Placement" to "ON" or "OFF".

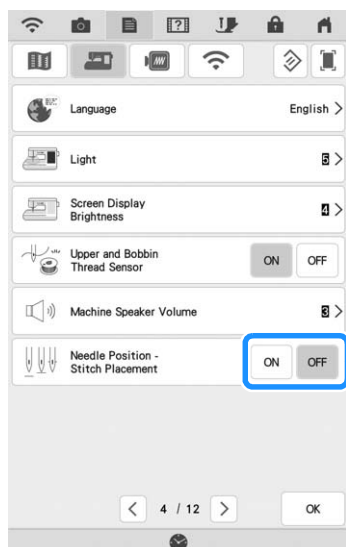

3 Press  to return to the original screen.


Checking the Needle Location in the Screen


You can check the stitch image with actual fabric image on the screen.

1 Select a stitch.

2 Press .


→ An image of the selected stitch and the actual fabric image are displayed.

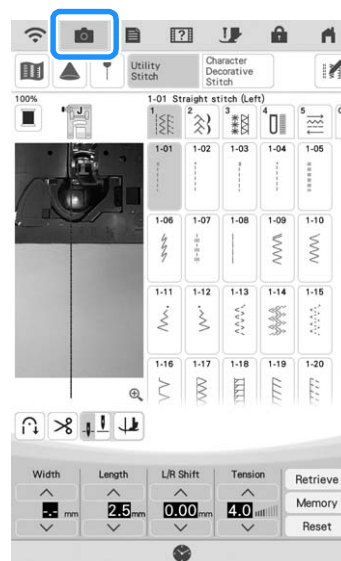


* Press  to change the thread color displayed on the screen. You can select from four different colors.

3 Press on the fabric image or  on the screen.

→ The camera view window appears.

→ Press  again to turn off the camera view.

■ Using the Camera View Window

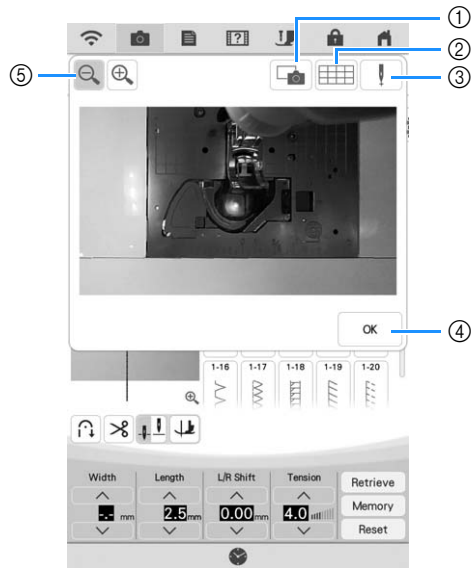

→ The camera view window appears.

- ① CAMERA IMAGE
- ② GRID VIEW
- ③ NEEDLE DROP POSITION
- ④ OK
- ⑤ ZOOM


CAMERA IMAGE

Press this key to save a camera image to the USB media.

Insert the USB media to the machine to save a camera image (Refer to “Saving a Settings Screen Image to USB Media” on page 33). The files for camera images are saved as “.PNG”. A maximum of 100 camera images can be saved in one USB media.

GRID VIEW

Press this key to display a grid.

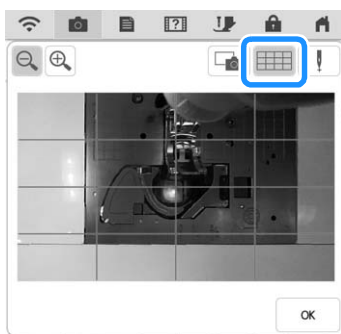


Press to close the screen.

NEEDLE DROP POSITION

Press to show the needle drop position in the screen as “+”.

Lower the presser foot before pressing . Once the needle drop position appears on the screen, you can raise the presser foot and change the needle drop position by moving the fabric.

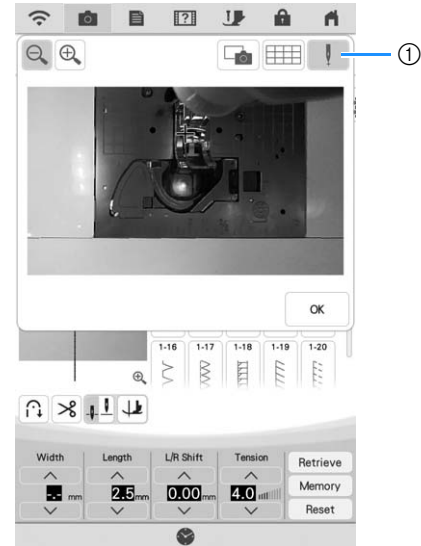

- ① Needle drop position

ZOOM

Press to enlarge the image in the screen.

Press again to return the image to its original display size.



Note

- The camera view window disappears when you start sewing.
- When sewing thick fabrics, the needle drop position indicated in the screen may differ from the actual position.



Specifying the Sewing End Point





 
Note

Using the same material and stitch pattern as your project, sew trial stitches to check the result. The machine's sewing end point may become misaligned in the following cases:

- The end point sticker is loose.
- The fabric was not sewn straight.
- The fabric was pushed too hard during feeding.
- Fabrics difficult to sew, such as heavyweight, quilted, stretchy, or thin fabrics, were used.


- 1 Select a stitch.
- 2 Press , make sure that "Temporary Stop" in the machine settings screen is set to "OFF", and then press  .

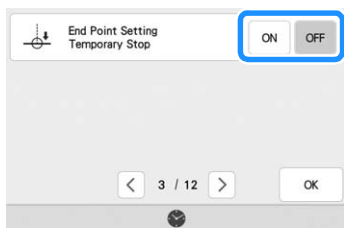

- 3 Press  to set "Guideline" to "ON". Set the "Main" line horizontal position according to the selected pattern. And then press  .




 **Memo**

- If  is selected for [Sub], a grid will be displayed.


- 4 Press  .




- 5 Press  .

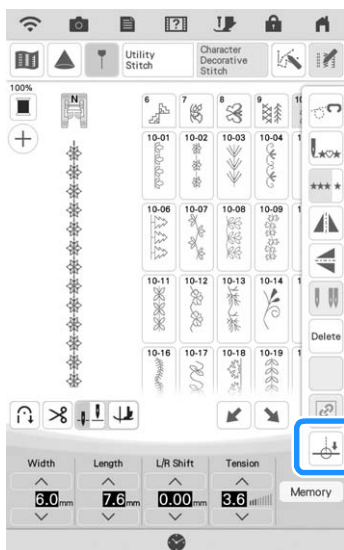





 **Memo**

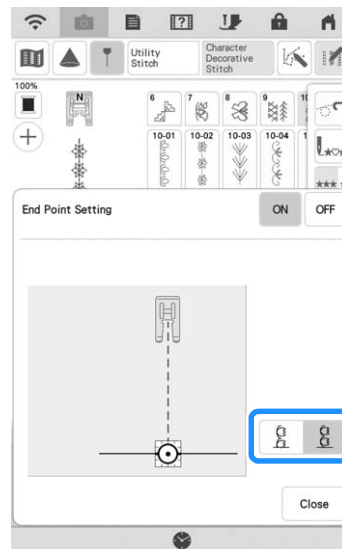
- If  appears in light gray and is not available, the sewing end point cannot be specified with the selected stitch pattern. Select a different stitch pattern.

- 6 Press   to select whether or not sewing is ended with a complete pattern. If necessary, press  after making your selection.




	The length of the stitch pattern is adjusted so that sewing will stop at the specified end point with a complete pattern. If this key appears in light gray and is not available, this function cannot be used. This adjustment may cause the pattern to be sewn slightly stretched vertically.	
	The end of stitching is not adjusted. When the end point is reached, sewing stops immediately, even if the stitch pattern is not complete.	

 **Memo**

- If "End Point Setting" is set to "ON", the pattern cannot be projected by the projector.
- To cancel "End Point Setting", set "End Point Setting" to "OFF", and then press  .

- 7 With a chalk pencil, mark the fabric with lines for sewing the pattern and for the end of stitching.

- 8** Affix an end point sticker, avoiding the sewing area. Attach the end point sticker within 4 cm (approx. 1-1/2 inches) to the left or right of the chalkline where the end point for sewing has been drawn.

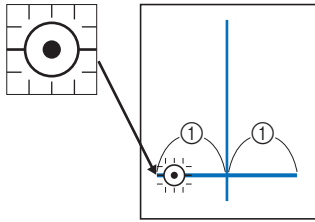


① 4 cm (Approx. 1-1/2 inches)

Memo

- If the end point sticker can be affixed to either left or right of the sewing position, we recommend affixing it to the left side.
- We recommend affixing the end point sticker as close as possible to the sewing position.
- If you cannot affix an end point sticker avoiding the sewing area, refer to “Temporary Stop Setting” on page 95.

Note

- The horizontal guideline at the needle indicates the distance from the stitching line where the end point sticker can be affixed.

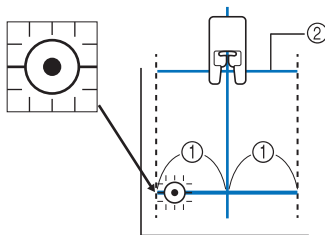

① 4 cm (Approx. 1-1/2 inches)
② Guideline

- 9** Place the fabric in the machine, and then lower the presser foot.

Note

- Before sewing, make sure that the end point sticker has not become detached. In addition, make sure that the end point sticker is not covered with your hand. Otherwise, the machine cannot detect the end point sticker.

 
- 10** Press the "Start/Stop" button to start sewing. When the foot controller is plugged in, press down on the foot controller. Gently guide the fabric to sew the stitching straight.


Note

- While making sure that the guidelines align with the lines drawn with the chalk pencil, sew the stitching straight, not at an angle.
- Do not forcefully feed the fabric. Otherwise, sewing may not stop correctly.

→ The machine stops at the specified end point automatically.

Memo



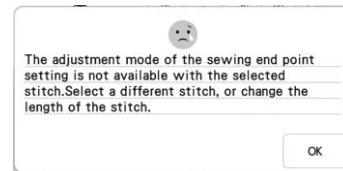- If the stitch pattern could not be adjusted when  was set in step **6**, the following message appears. Cancel “End Point Setting”, and then select a different stitch or change the length of the stitch.



- 11** Peel off the end point sticker.


Temporary Stop Setting

If you cannot affix an end point sticker that avoids the sewing area, you can adjust the machine settings to temporarily stop sewing to allow the sticker to be removed as you approach the end point sticker.

- 1** Select a stitch.
- 2** Press , set “Temporary Stop” in the machine settings screen to “ON”, and then press .



- 3 Perform steps 3 through 6 in “Specifying the Sewing End Point” on page 93.
- 4 With a chalk pencil, mark the fabric with lines for sewing the pattern and for the end of stitching, and then affix an end point sticker.

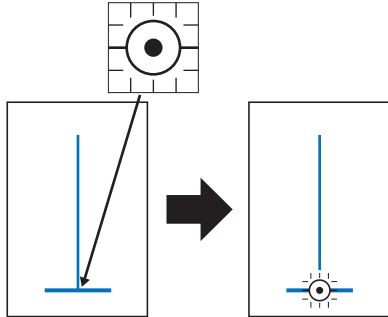

- 5 Perform steps 9 and 10 in “Specifying the Sewing End Point” on page 93.

→ When the needle approaches the mark, the machine stops, and the following message appears.

- 6 Peel off the end point sticker, and then press .



- 7 Press the “Start/Stop” button again. When the foot controller is plugged in, press down on the foot controller.

→ The machine finishes sewing the pattern, then stops.

USING THE PROJECTOR

Convenient Sewing Features by Using the Projector

Operations that can use the projector


- Setting the guideline as a reference for your sewing position.
- Selecting a stitch pattern
- Editing the selected stitch pattern
- Displaying the needle drop point (when embroidering)
- Displaying the edited embroidery pattern (when embroidering)

⚠ CAUTION

- Do not stare directly at the projector light. Otherwise, blindness may result.

About the Dual Purpose Stylus

The included dual purpose stylus has two points. Use the soft point to operate the LCD screen and the hard point to operate the projector.

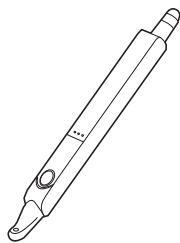

Installing a Battery in the Dual Purpose Stylus

A battery for the dual purpose stylus is not included with your machine. Use a new AAA alkaline battery (LR03).


⚠ WARNING

- Do not disassemble or modify the dual purpose stylus.
- Do not use metallic objects, such as tweezers or a metallic pen, when changing the battery.
- Do not throw the battery into fire or expose to heat.
- Remove battery immediately and stop using the machine if you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.


⚠ CAUTION

- Remove the battery if you do not intend to use the dual purpose stylus for an extended period of time.
- Do not set the positive and negative ends of the battery in the wrong direction.


- 1 Slide the lid with your finger to remove it.

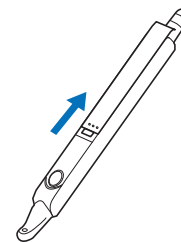

- 2 Install a new AAA alkaline battery (LR03) in the dual purpose stylus with the negative end (-) pointing up.

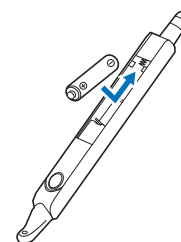


3 Close the lid.

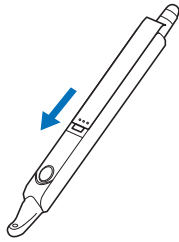

Operating the Projector with the Dual Purpose Stylus

Press the button to light the hard point of the dual purpose stylus. After the built-in camera detects the light, you can operate the projector with the dual purpose stylus.

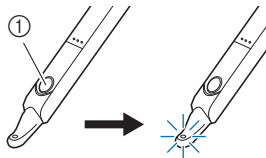

① Button

⚠ IMPORTANT

 
- Do not put your hand, fabric or any object between the built-in camera and the light-emitting part of the dual purpose stylus, otherwise the built-in camera cannot detect the light from the dual purpose stylus.

⚠ CAUTION

- Do not insert any object into the light-emitting part of the dual purpose stylus, otherwise the stylus may be damaged.



Using the Dual Purpose Stylus Holder

Attach the dual purpose stylus holder to keep the dual purpose stylus with the machine. The right side of the holder can be used to hold the dual purpose stylus.




Dual purpose stylus holder

1 Firmly insert the dual purpose stylus holder into the hole.

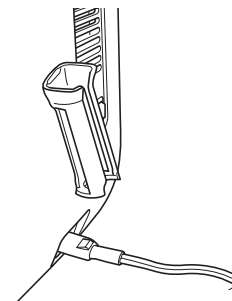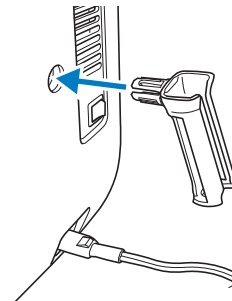


2 With the flat part of the dual purpose stylus facing to the machine, insert it into the dual purpose stylus holder.

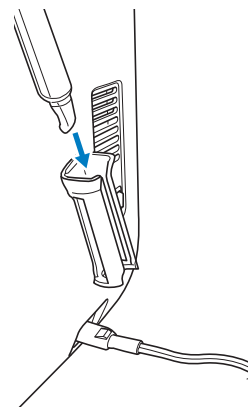

PROJECTOR FUNCTIONS (UTILITY STITCHES AND CHARACTER/DECORATIVE STITCHES)

Projection Area of Projector

When the machine is sewing utility stitches or character/decorative stitches, the projection area of the projector is as shown below.

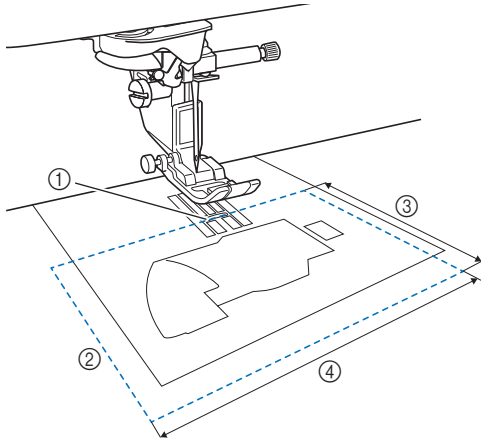


- ① Needle drop point
- ② Projection area
- ③ 7.6 cm (3 inches)
- ④ 12.7 cm (5 inches)

Projecting the Stitch Pattern with the Projector


Using the projector, the selected stitch pattern can be projected onto the fabric.

1 Select a stitch pattern.

2 Press .

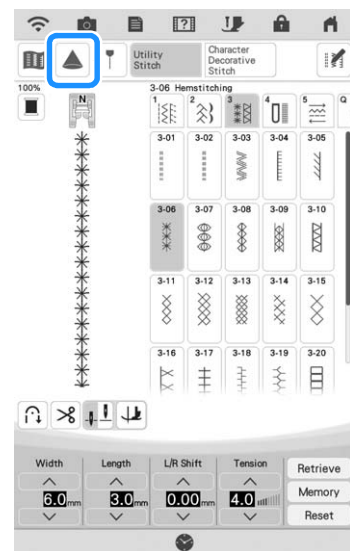

→ The selected stitch pattern and the adjustment keys are projected onto the fabric.

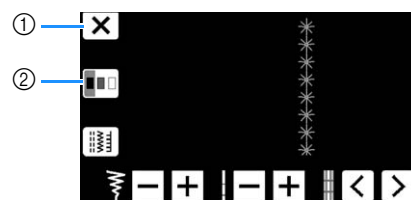

- ① Press with the dual purpose stylus to stop projection.
- ② Each press with the dual purpose stylus changes the "Background Color" setting.


Memo

- The setting can also be changed with "Background Color" in the machine settings screen.



Selecting a Stitch Pattern with the Dual Purpose Stylus


- 1 When the stitch pattern is projected onto the fabric, press  with the dual purpose stylus.

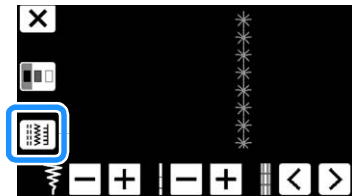




→ A stitch pattern can be selected.



Note

- A stitch pattern cannot be selected from the LCD while a stitch pattern is being projected by the projector. In order to select a stitch pattern from the LCD, press  in the screen.


- 2 Press  with the dual purpose stylus until the desired stitch pattern is displayed, and then press .

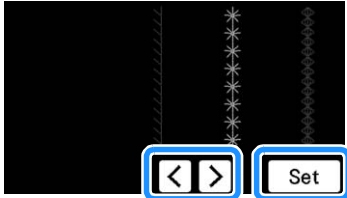

Editing a Stitch Pattern Selected with the Dual Purpose Stylus

The stitch width, stitch length and “L/R Shift” can be changed for the stitch pattern projected by the projector.

- 1 Use the dual purpose stylus to adjust the stitch width, stitch length and sewing position.

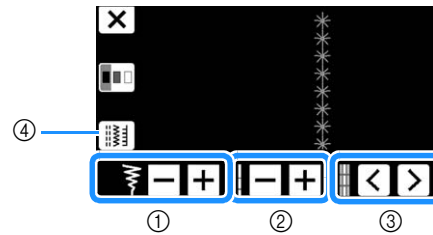

- ① Stitch width setting
- ② Stitch length setting
- ③ “L/R Shift” setting
- ④ Press to select a different stitch pattern.

→ The specified settings are applied to the projected stitch pattern.




Memo

- When the stitch selection screen appears again in the LCD, the settings change to those specified with the dual purpose stylus.
- With twin needle sewing, the stitch width is specified based on the left needle.

Projecting the Guidelines with the Projector

With the guideline function, sewing can easily be done by following the lines and marks projected onto the fabric.


1 Press .

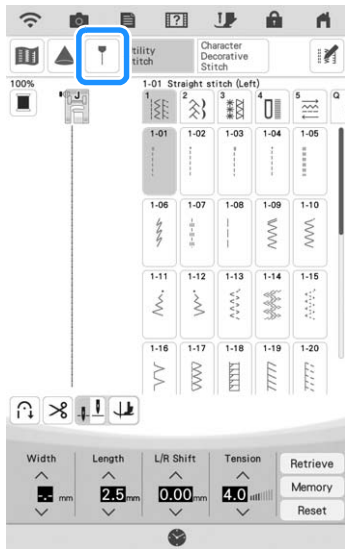

→ The guideline settings screen appears.


2 Specify the guideline settings.

Main guideline

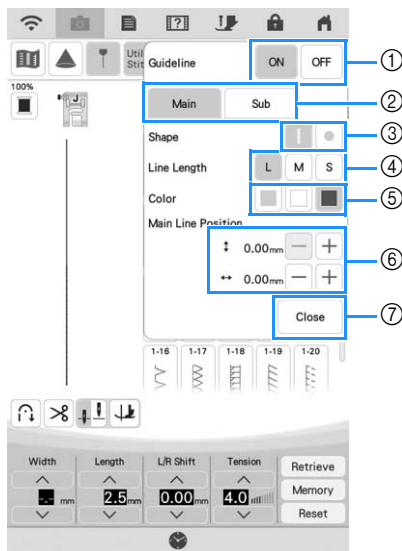



- ① If the guidelines will not be used, select "OFF".
- ② Select the guideline whose settings are to be specified.
- ③ Select a line or a point as the shape of the guideline marker.
- ④ Select the length of the main guideline.
- ⑤ Select the color of the main guideline.
- ⑥ Specify the position of the main guideline.
- ⑦ Press to finish specifying the guideline settings.

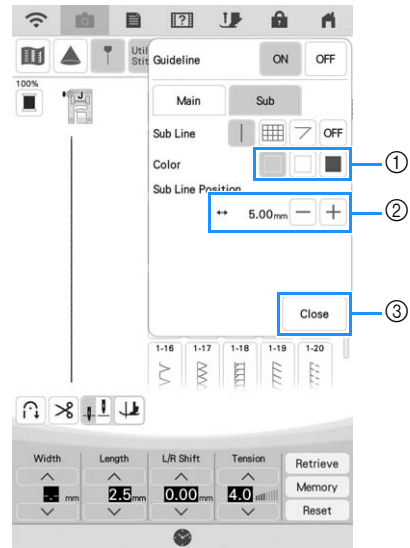Sub guideline 




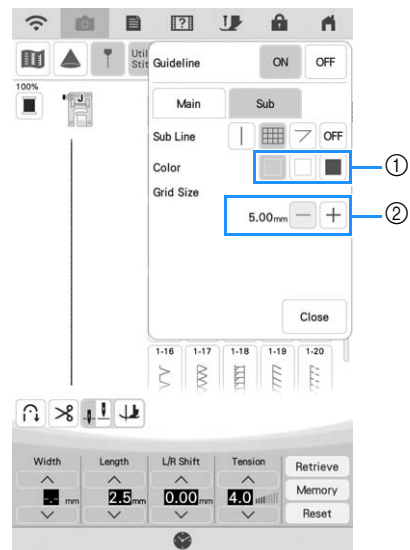
- ① Select the color of the sub guideline.
- ② Specify the position of the sub guideline.

Memo

- When  or  is selected, the position of the sub guideline is based on the position of the main guideline. When the position of the sub guideline is changed, change the position of the main guideline.


③ Press to finish specifying the guideline settings.

Sub guideline 



- ① Select the color of the sub guideline.
- ② Specify the grid size of the sub guideline.

Sub guideline

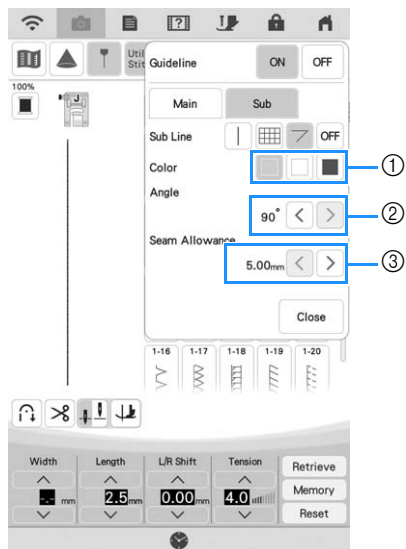

- ① Select the color of the sub guideline.
- ② Specify the angle of the sub guideline.
- ③ Specify the seam allowance of the sub guideline.




Chapter **3**
Utility Stitches

SELECTING UTILITY STITCHES

Utility Stitch LCD Screen

Press a key with your finger to select the stitch pattern, to select a machine function, or to select an operation indicated on the key.

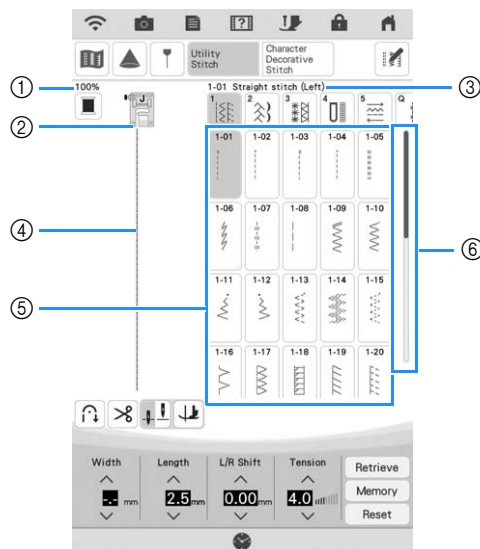


No.	Display	Key Name	Explanation	Page
①	100%	Stitch pattern display size	Shows the approximate size of the stitch pattern selected. 100% : Nearly the same size as the sewn stitch pattern * The actual size of the sewn stitch pattern may differ depending on the type of fabric and thread that is used.	107
②		Presser foot display	Shows the presser foot code. Attach the presser foot indicated in this display before sewing.	72
③	1-01 Straight stitch (Left)	Selected stitch display	Shows the name and code number of the selected stitch.	107
④		Stitch preview	Shows a preview of the selected stitch. When shown at 100%, the stitch appears in the screen at nearly its actual size. Press to display the stitch preview and the camera view together to check how the stitch will be sewn on the actual fabric.	92, 107
⑤		Stitch selection screen	Press the key for the stitch pattern you want to sew. Use to change to different stitch groups.	107
⑥		Scroll bar	Slide the scroll bar to move the pages of stitch selection screen.	106


* All key functions of the LCD are explained in the “Key Functions” table on the following page.






 




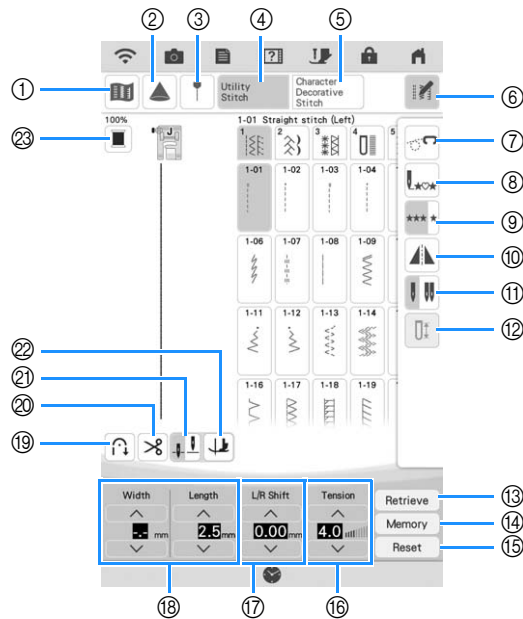




■ Key Functions



Note

- Editing function keys are found after pressing  .




No.	Display	Key Name	Explanation	Page
①		Image key	Press this key to display an enlarged image of the selected stitch pattern.	108
②		Projector key	Press this key to use projector functions.	99
③		Guideline marker key	Press this key to display or set the guideline marker for the sewing line. The guideline marker makes quilt piecing or aligning stitching on the fabric edge easier.	101
④		Utility stitch key	Press this key to select a straight stitch, zigzag stitch, buttonhole, blind hem stitch, or other stitches commonly used in garment construction.	107
⑤		Character/Decorative stitch key	Press this key to select character or decorative stitch patterns.	162
⑥		Edit key	Press this key to display editing function keys on the screen.	170
⑦		Free motion mode key	Press this key to enter free motion sewing mode. The presser foot is raised to an appropriate height and the feed dog is lowered for free motion quilting.	128
⑧		Back to beginning key	When sewing is stopped, press this key to return to the beginning of the stitch.	108
⑨		Single/Repeat sewing key	Press this key to choose single stitches or continuous stitches.	108
⑩		Mirror image key	Press this key to create a mirror image of the selected stitch pattern. If the key display is light gray, a mirror image of the selected stitch pattern cannot be sewn.	107
⑪		Needle mode selection key (single/double)	Press this key to select twin needle sewing mode. The sewing mode changes between single needle mode and twin needle mode each time you press the key. If the key display is light gray, the selected stitch pattern cannot be sewn in the twin needle mode.	64
⑫		Slit length key	Press this key to manually set the buttonhole length when a buttonhole stitch is selected.	149
⑬		Retrieve key	Press this key to retrieve a saved stitch pattern.	109
⑭		Manual memory key	Change the stitch pattern settings (zigzag width and stitch length, thread tension, automatic thread cutting or automatic reinforcement stitching, etc.), then save them by pressing this key. Five sets of settings can be saved for a single stitch pattern.	109
⑮		Reset key	Press this key to return the selected stitch pattern saved settings to the default settings.	85-87

No.	Display	Key Name	Explanation	Page
16		Thread tension key	Shows the automatic thread tension setting of the currently selected stitch pattern. You can use and to change the thread tension settings.	87
17		"L/R Shift" key	Press to shift the stitch pattern to the right or press to shift the stitch pattern to the left. This feature is not available for all stitch patterns. Only those applicable will be shifted. The machine default setting is highlighted.	86
18		Stitch width and stitch length key	Shows the zigzag width and stitch length settings of the currently selected stitch pattern. You can use and to adjust the zigzag width and stitch length settings.	85, 86
19		Automatic reinforcement stitch key	Press this key to use the automatic reinforcement stitching (reverse stitching) setting. If you select this setting before sewing, the machine will automatically sew reinforcement stitches at the beginning and end of sewing (depending on the stitch pattern, the machine may sew reverse stitches).	79
20		Automatic thread cutting key	Press this key to set the automatic thread cutting function. Set the automatic thread cutting function before sewing to have the machine automatically sew reinforcement stitches at the beginning and end of sewing (depending on the stitch pattern, the machine may sew reverse stitches) and trim the threads after sewing.	88
21		Needle position setting key	Press this key to select the needle stop position to be up or down. You can also check the needle mode setting (single or twin). Single needle/down position Single needle/up position Twin needle/down position Twin needle/up position	64, 89
22		Pivot key / Auto Up key	Press this key to select the pivot function. When the pivot function is selected, stopping the machine lowers the needle and slightly raises the presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	89
23		Thread color change key	Press this key to change the thread color displayed on the screen.	108


Stitch Selection Screens

There are seven categories of Utility Stitches.


Straight/Overcasting

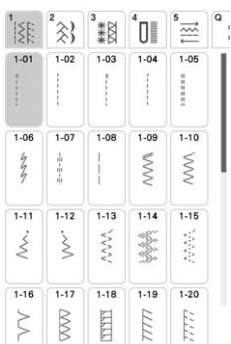


Decorative Stitches

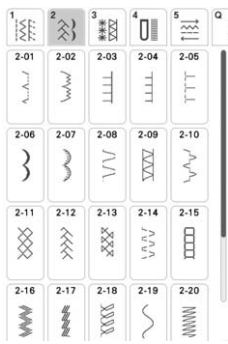


Heirloom Stitches

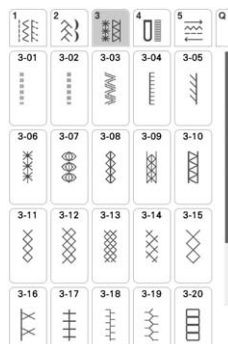


Buttonholes/Bar tacks

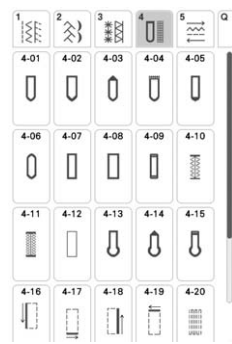


Multi-directional Sewing

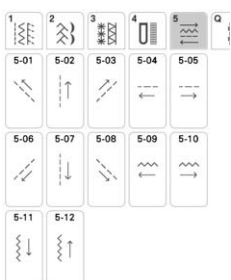


Quilting Stitches

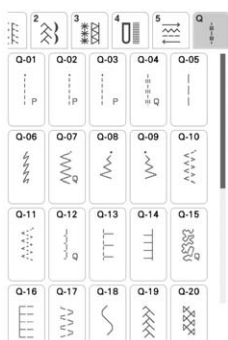

Other stitches

 

Selecting a Stitch

- 1 Turn the main power to ON and press  to display the utility stitches.

→ Either “1-01 Straight stitch (Left)” or “1-03 Straight stitch (Middle)” is selected, depending on the setting selected in the settings screen.

- 2 Use        to select the category you want.

Memo

- Swipe the key of a category or stitch pattern sideways to display hidden categories.


- 3 Press the key of the stitch you want to sew.

Memo


- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.


Using the Mirror Image Key


Depending on the type of utility stitch you select, you may be able to sew a horizontal mirror image of the stitch.

If  is lit when you select a stitch, it will be possible to make a mirror image of the stitch.

Note

- If  is light gray after you select a stitch, you cannot create a horizontal mirror image of the selected stitch due to the type of stitch or type of presser foot recommended (this is true of buttonholes, multi-directional sewing, and others).


Press  to create a horizontal mirror image of the selected stitch.

The key will display as .




■ Returning to the Beginning of the Stitch Pattern


Even if you stopped stitching while sewing, you can return to the beginning of the stitch pattern. This function is useful after trial sewing or when the stitching is sewn incorrectly.


Press  before start sewing, to return to the beginning of the stitch.

- ① Stop stitching
- ② Re-start stitching

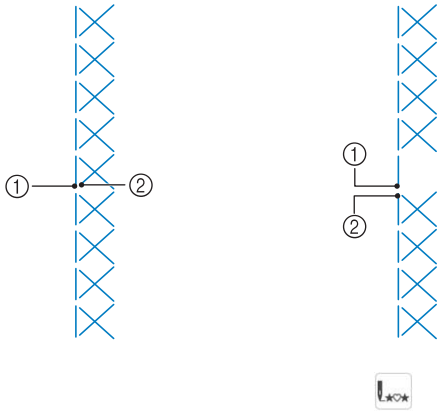

■ Sewing Continuous/Single Stitch Sewing

Press  to select continuous sewing or single stitch sewing.

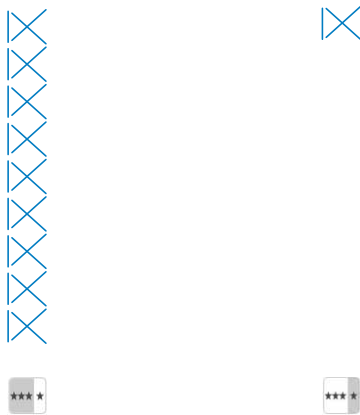



■ Using the Image Key


You can display an image of the selected stitch. You can check and change the colors of the image of the screen.

- 1 Press .

→ An image of the selected stitch is displayed.

- 2 Press  to change the thread color of the stitch on the screen.

* Press  to display an enlarged image of the stitch.

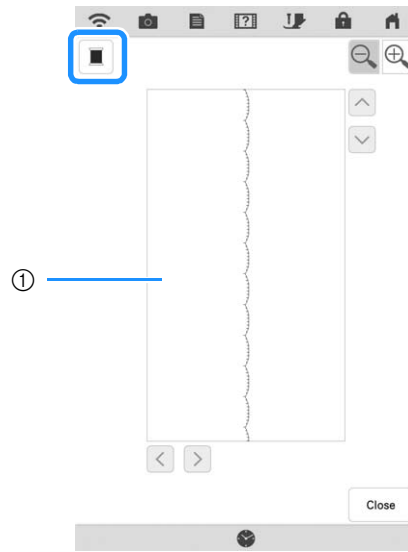


① Stitch screen



Memo

- The color changes every time you press



- 3 Press  to go back to the original screen.


Saving Your Stitch Settings

The settings for the zigzag stitch width, stitch length, thread tension, automatic thread cutting, automatic reinforcement stitching, etc., are preset in the machine for each stitch. However, if you have specific settings that you wish to reuse later for a stitch, you can change the settings so that they can be saved for that stitch. Five sets of settings can be saved for a single stitch.


■ Saving Settings

1 Select a stitch. (Example: 1-13)

2 Specify your preferred settings.

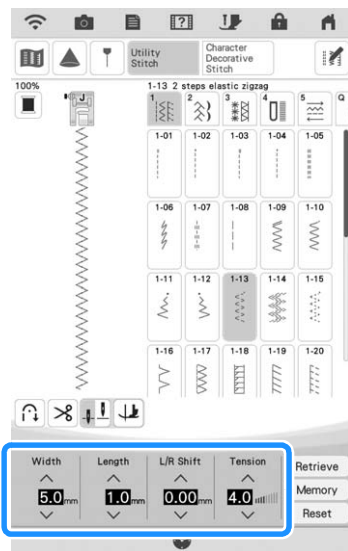

3 Press **Memory**.

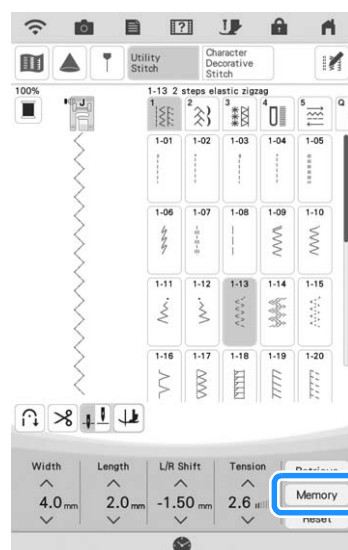

→ The settings are saved and the original screen automatically appears.

Memo

- If you try to save settings when there are already 5 sets of settings saved for a stitch, the message “The pockets are full. Delete a pattern” will appear. Close the message and delete a setting referring to page 109.

■ Retrieving Saved Settings

1 Select a stitch.


Memo

- When a stitch is selected, the last settings retrieved are displayed. The last settings retrieved are retained even if the machine was turned off or a different stitch was selected.

2 Press **Retrieve**.

3 Press the numbered key of the settings to be retrieved.

- * Press **Cancel** to return to the original screen without retrieving settings.

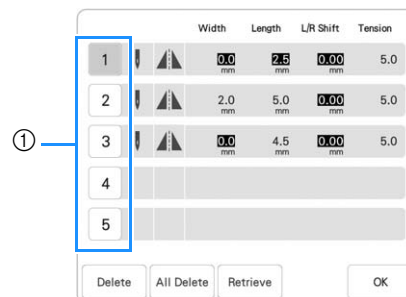

① Numbered keys

4 Press **Retrieve**.









- The selected settings are retrieved, and the original screen automatically appears.


Memo

- To save new settings when there are already 5 sets of settings saved for a stitch, press **Retrieve**. Press the numbered key of the setting to be deleted. Press **Delete**, press **OK** and then **Memory**. The new setting will be saved in place of the recently deleted setting.
- You can delete all the saved settings by pressing **All Delete**.


SEWING THE STITCHES

Straight Stitches

Stitch	Stitch name	Presser foot
1-01	Straight stitch (Left)	
1-02	Straight stitch (Left)	
1-03	Straight stitch (Middle)	
1-04	Straight stitch (Middle)	
1-05	Triple stretch stitch	
1-06	Stem stitch	
1-07	Decorative stitch	
1-08	Basting stitch	

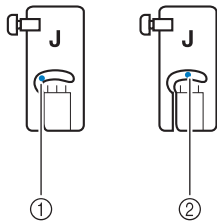

- ① Left needle position
- ② Middle needle position

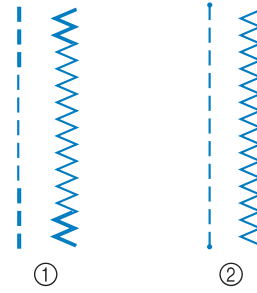


- ① Reverse stitch
- ② Reinforcement stitch



Memo

- If the selected stitch has a double mark “ ” at the top of the key display, you can sew reverse stitches holding the “Reverse Stitch” button (page 79).
- If the selected stitch has a dot mark “ . ” at the top of the key display, you can sew reinforcement stitches holding the “Reinforcement Stitch” button.


1 Select a stitch.

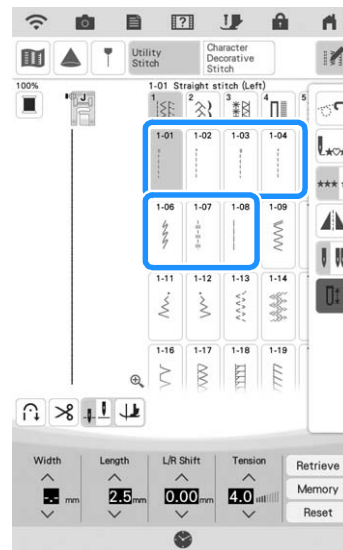

2 Attach presser foot “J”.

* Attach presser foot “N” when you select .

- 3** Hold the thread tail and fabric with your left hand, and push the “Needle Position” button with your right hand to insert the needle into the fabric.

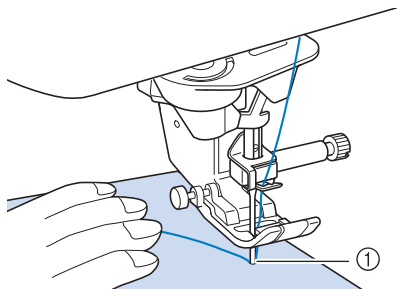


① Sewing start position

- 4** Lower the presser foot, and hold the “Reverse Stitch” button or the “Reinforcement Stitch” button to sew 3-4 stitches.

→ The machine sews reverse stitches or reinforcement stitches.

- 5** Press the “Start/Stop” button to sew forward.

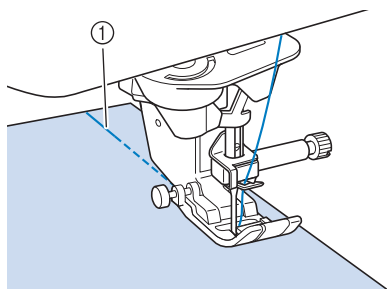


① Reverse stitches or reinforcement stitches

→ The machine will begin sewing slowly.


⚠ CAUTION

- Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.

- 6** When sewing is completed, hold the “Reverse Stitch” button or the “Reinforcement Stitch” button to sew 3-4 reverse stitches or reinforcement stitches at the end of the seam.

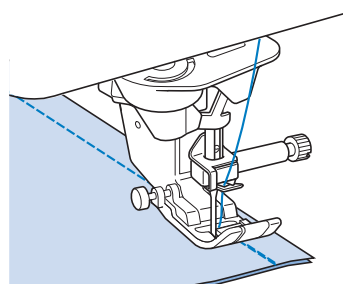

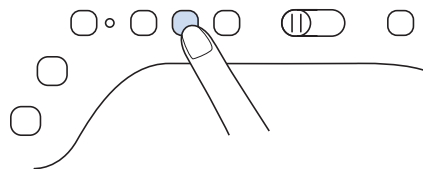

- 7** After sewing, press the “Thread Cutter” button to trim the threads.




📖 Memo

- When the automatic thread cutting and automatic reinforcement stitch keys on the screen are selected, reverse stitches or reinforcement stitches will be sewn automatically at the beginning of sewing when the “Start/Stop” button is pressed. Press the “Reverse Stitch” button or the “Reinforcement Stitch” button to sew reverse stitches or reinforcement stitches and trim the thread automatically at the end of sewing.


Changing the Needle Position (Left or Middle Needle Position Stitches Only)

When you select left or middle needle position stitches, you can use  and  in the L/R Shift display to change the position of the needle. Match the distance from the right edge of the presser foot to the needle with the L/R Shift, then align the edge of the presser foot with the edge of the fabric during sewing for an attractive finish.

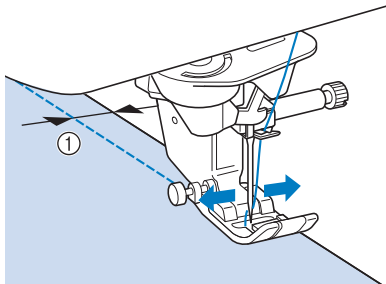

① Stitch width

Example: Left/Middle needle position stitches

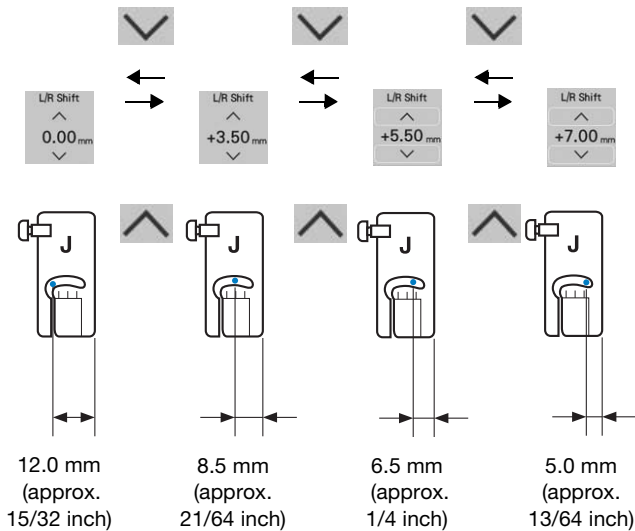


Memo

- Stitch Q-01 will not permit using the L/R Shift function.

Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)


While sewing, align the edge of the fabric with the 16 mm (approx. 5/8 inch) mark on the needle plate or bobbin cover (with mark) depending on the needle position (left or middle (center) needle position stitches only).

For stitches with a left needle position (L/R Shift: 0.00 mm)

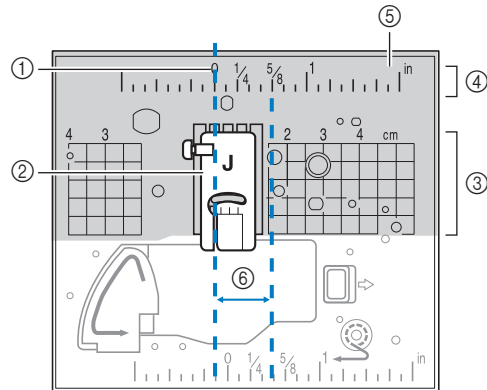

- ① Seam
- ② Presser foot
- ③ Centimeters
- ④ Inches
- ⑤ Needle plate
- ⑥ 16 mm (5/8 inch)



For stitches with a middle (center) needle position (L/R Shift: 3.50 mm)

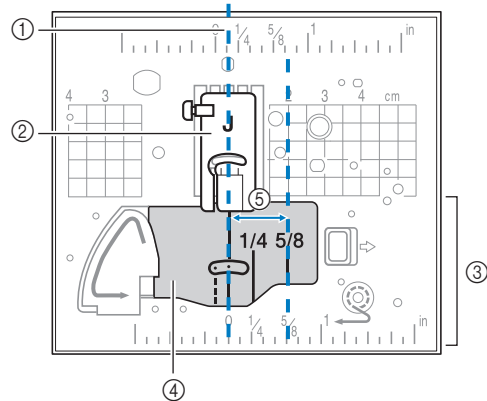

- ① Seam
- ② Presser foot
- ③ Inches
- ④ Bobbin cover (with mark)
- ⑤ 16 mm (5/8 inch)

■ Using the Straight Stitch Needle Plate and the Straight Stitch Foot

The straight stitch needle plate and the straight stitch foot can only be used for straight stitches (middle needle position stitches). Use the straight stitch needle plate and the straight stitch foot when sewing thin fabrics or when sewing small pieces which tend to sink into the hole of the regular needle plate during sewing. The straight stitch foot is perfect to reduce puckering on lightweight fabrics. The small opening on the foot provides support for the fabric as the needle travels through the fabric.

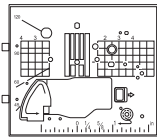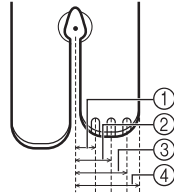


- ① 2.25 mm (1/8 inch)
- ② 4.25 mm (3/16 inch)
- ③ 6.25 mm (1/4 inch)
- ④ 8.5 mm (5/16 inch)

⚠ CAUTION


- Always use the straight stitch foot in combination with the straight stitch needle plate.

- 1 Press the “Needle Position” button to raise the needle, raise the presser foot and turn the main power to OFF. And then unplug the machine.
- 2 Remove the needle and the presser foot (refer to page 69, 72).
- 3 Remove the flat bed attachment or the embroidery unit if either are attached.
- 4 Slide the needle plate lever toward you.

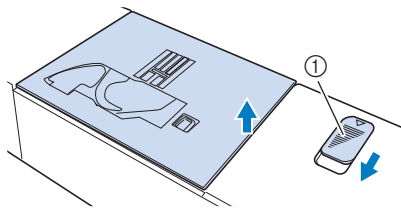


- ① Slide toward you.
- The needle plate opens.

- 5 Slide out the regular needle plate with your right hand to remove it.

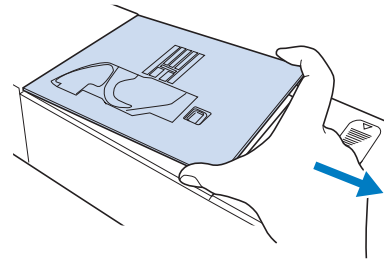


- 6 Insert the tabs on the straight stitch needle plate into the notches in the machine.

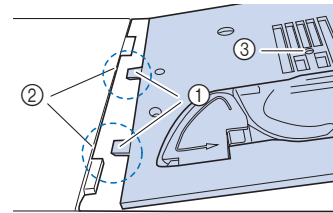


- ① Tabs
- ② Notches
- ③ Round hole

- 7 Press down on the right side of the straight stitch needle plate to secure it.

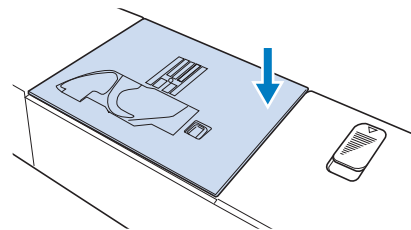

- 8 If necessary, attach the flat bed attachment.
- 9 Insert needle and attach the straight stitch foot. (page 69, 72)

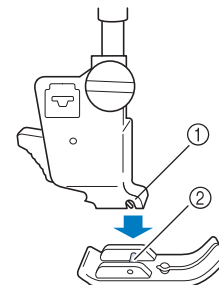

- ① Notch
- ② Pin

10 Select any of the straight stitches.



Note

- Selecting other stitches will cause an error message to be displayed.



Memo

- When using the straight stitch needle plate, many straight stitches become middle needle position stitches. If a straight stitch is selected that is not applicable for use when the straight stitch needle plate is attached, an error message will be displayed to prevent the use of this stitch. You cannot change the needle position using the L/R Shift.

⚠ CAUTION

- Slowly rotate the handwheel toward you (counterclockwise) before sewing and make sure that the needle is not contacting the straight stitch foot and straight stitch needle plate.

11 Start sewing.

- * After sewing, make sure to remove the straight stitch needle plate and the straight stitch foot, and reinstall the regular needle plate and the presser foot "J".




Memo

- To prevent puckering on fine fabrics, use a fine needle, size 75/11, and a short stitch length. For heavier fabrics, use a heavier needle, size 90/14, and longer stitches.

Dart Seam

1 Select  and attach presser foot "J".


2 Sew a reverse stitch at the beginning of the dart and then sew from the wide end to the other end without stretching the fabric.

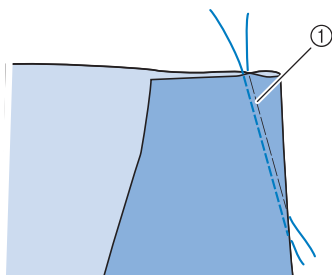


① Basting

3 Cut the thread at the end leaving 50 mm (approx. 1-15/16 inches), and then tie both ends together.


- * Do not sew a reverse stitch at the end.

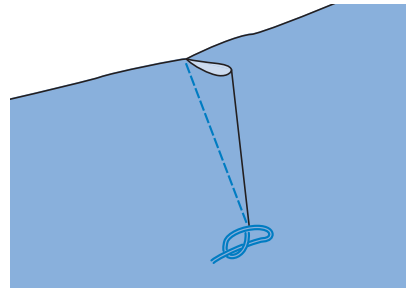

4 Insert the ends of the thread into the dart with a hand sewing needle.

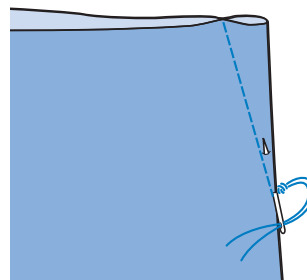


5 Iron the dart to one side so that it is flat.

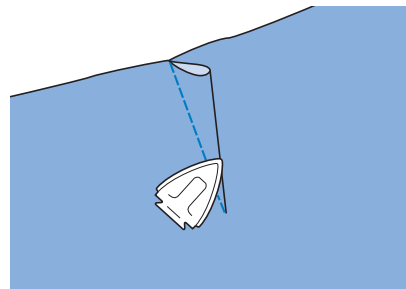


Gathering

Use on waists of skirts, sleeves of shirts, etc.

- 1 Select a straight stitch and attach presser foot "J".

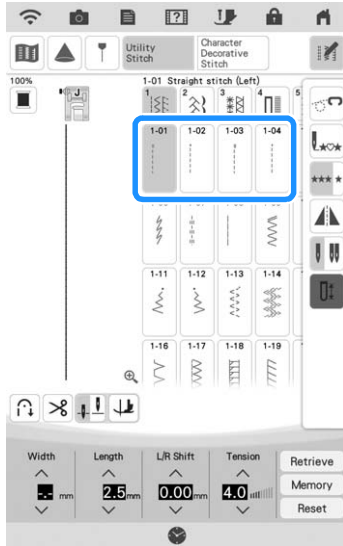


- 2 Set the stitch length to 4.0 mm (approx. 5/32 inch) and the thread tension to approximately 2.0 (weaker tension).
- 3 Pull the bobbin and upper threads out by 50 mm (approx. 2 inches) (page 59).

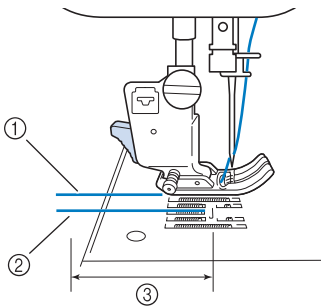


- 1 Upper thread
- 2 Bobbin thread
- 3 About 5 cm (approx. 2 inches)

- 4 Sew two rows of straight stitches parallel to the seam line, then trim excess thread leaving 50 mm (approx. 2 inches).

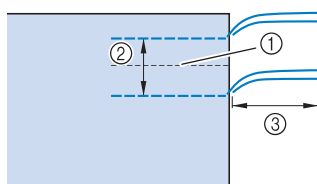


- 1 Seam line
- 2 10 to 15 mm (approx. 3/8 inch to 9/16 inch)
- 3 About 50 mm (approx. 2 inches)

- 5 Pull the bobbin threads to obtain the desired amount of gather, then tie the threads.

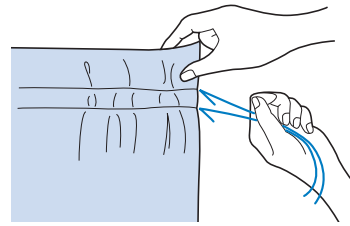


- 6 Smooth the gathers by ironing them.

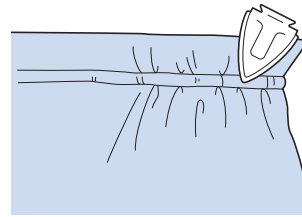


- 7 Sew on the seam line and remove the basting stitch.

Flat Fell Seam

Use for reinforcing seams and finishing edges neatly.


- 1 Select  and attach presser foot "J".
- 2 Sew the seam line, then cut half of the seam allowance from the side on which the flat fell seam will lie.

* When the automatic thread cutting and automatic reinforcement stitching are preset, reverse stitches will be sewn automatically at the beginning of sewing. Press the "Reinforcement Stitch" button to sew a reinforcement stitch and trim the thread automatically at the end of sewing.

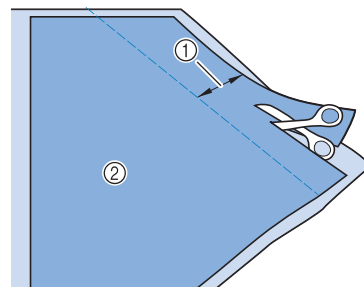


- 1 About 12 mm (approx. 1/2 inch)
- 2 Wrong side

3 Spread the fabric out along the seam.

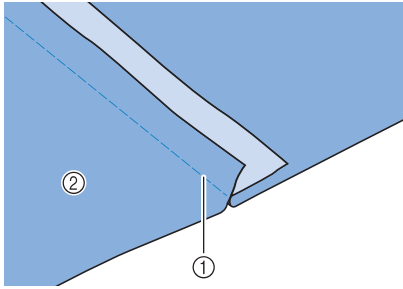


- ① Seam
- ② Wrong side

4 Lay both seam allowances on the side of the shorter seam (cut seam) and iron them.

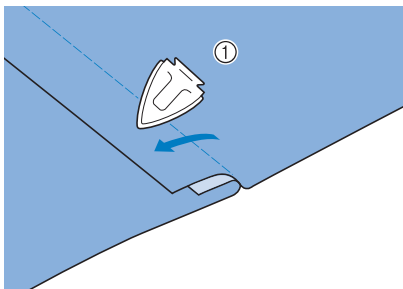


- ① Wrong side

5 Fold the longer seam allowance around the shorter one, and sew the edge of the fold.

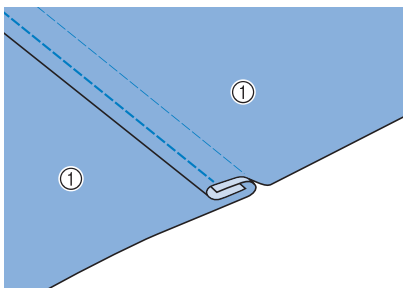

- ① Wrong side


Finished flat fell seam

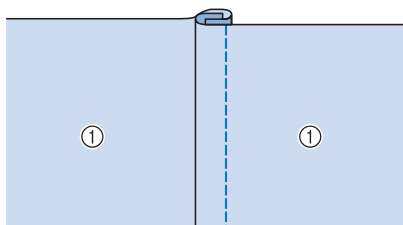

- ① Surface


Pintuck

1 Mark along the folds on the wrong side of the fabric.

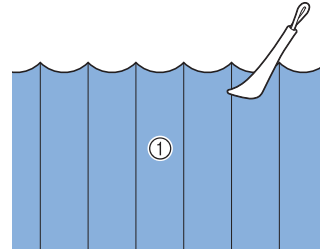

- ① Wrong side

2 Turn the fabric and iron the folded parts only.

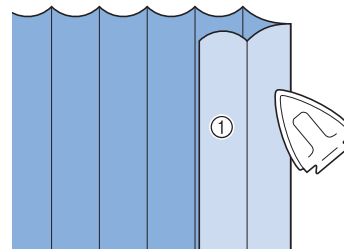


- ① Surface

3 Select  and attach presser foot "I".


4 Sew a straight stitch along the fold.

- * When the automatic thread cutting and automatic reinforcement stitching are preset, reverse stitches will be sewn automatically at the beginning of sewing. Press the "Reinforcement Stitch" button to sew a reinforcement stitch and trim the thread automatically at the end of sewing.

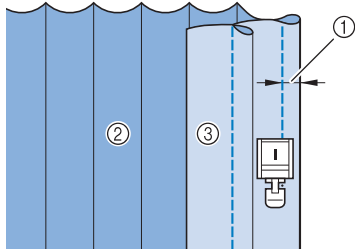

- ① Width for pintuck
- ② Wrong side
- ③ Surface

5 Iron the folds in the same direction.

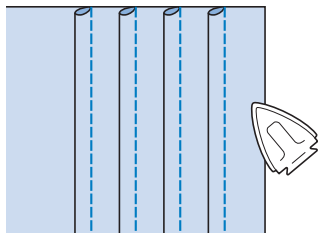





Zigzag Stitches

Zigzag stitches are useful for overcasting, appliqué, patchwork, and many other applications.

Select a stitch, and attach presser foot “J”. If the stitch which you select has a double mark “=” at the top of the key display, you can sew reverse stitches by holding the “Reverse Stitch” button. (page 79)

If the stitch which you select has a dot mark “.” at the top of the key display, you can sew reinforcement stitches by holding the “Reinforcement Stitch” button (page 79).


Stitch	Stitch name	Presser foot
1-09	Zigzag stitch	
1-10	Zigzag stitch	
1-11	Zigzag stitch (Right)	
1-12	Zigzag stitch (Left)	

1 Select a stitch.

2 Attach presser foot “J”.

Overcasting (Using a Zigzag Stitch)

Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.

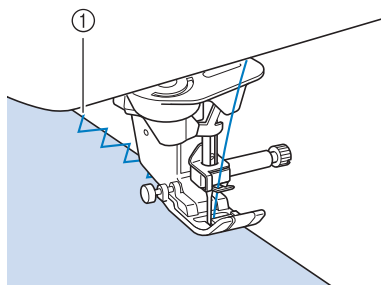


① Needle drop position

Appliqué (Using a Zigzag Stitch)


Attach the appliqué material using a temporary spray adhesive or basting, and then sew it.

- * Sew a zigzag stitch while positioning the right-hand side needle drop point just outside the edge of the fabric.

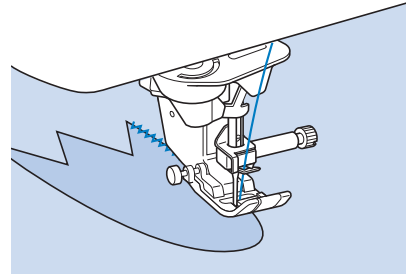


Patchwork (for Crazy Quilting)

Turn back the desired width of fabric and position it over the lower fabric, then sew so that the stitch bridges both pieces of fabric.

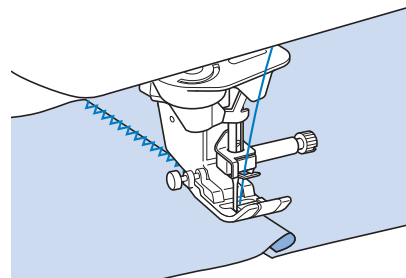


Sewing Curves (Using a Zigzag Stitch)

Shorten the stitch length setting to obtain a fine stitch. Sew slowly, keeping the seams parallel with the fabric edge as you guide the fabric around the curve.

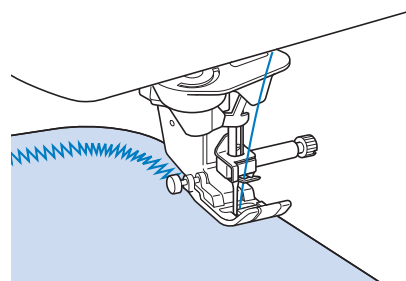

■ Cord Guide Bobbin Cover (Using a Zigzag Stitch)


- 1 Remove the bobbin cover from the machine (page 58).
- 2 Thread the gimp thread through the hole in the cord guide bobbin cover from bottom to top. Position the thread in the notch at the back of the cord guide bobbin cover.

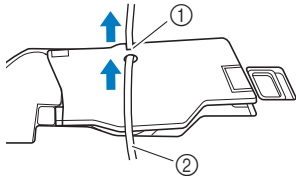


- ① Notch
- ② Gimp thread

- 3 Snap the cord guide bobbin cover into place, making sure that the gimp thread can be fed freely.

* Make sure there are no restrictions when feeding the thread.

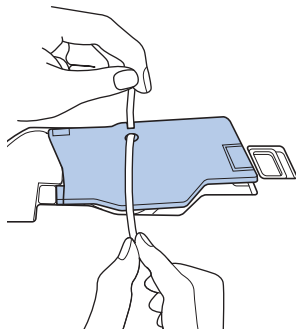


- 4 Set the zigzag width from 2.0-2.5 mm (approx. 1/16 - 3/32 inch).
- 5 Attach presser foot "N".
- 6 Position the fabric right side up on top of the cord and place the cord to the rear of the machine under the presser foot.

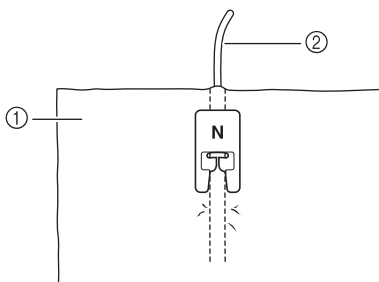

- ① Fabric (right side)
- ② Gimp thread

- 7 Lower the presser foot and start sewing to make a decorative finish.

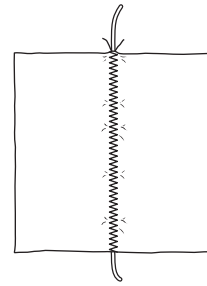

Elastic Zigzag Stitches


Use elastic zigzag stitches for tape attaching, overcasting, darning, or a wide variety of other uses.

Stitch	Stitch name	Presser foot
1-13	2 steps elastic zigzag	
1-14	2 steps elastic zigzag	
1-15	3 steps elastic zigzag	

- 1 Select a stitch.
- 2 Attach presser foot "J".

■ Tape Attaching


While stretching the tape flat, sew it to the fabric.

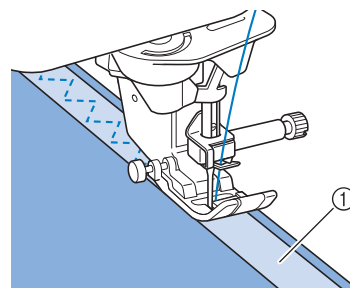

- ① Tape

Overcasting

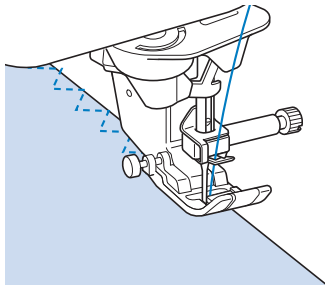


Use this stitch to sew overcasting on the edge of stretch fabrics. Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.



Overcasting


Use for the edge of seams in skirts or trousers, and the edge of all cuttings. Use presser foot "G", presser foot "J", or the side cutter attachment depending on the kind of overcasting stitch you select.

Overcasting Using Presser Foot "G"


Stitch	Stitch name	Presser foot
1-16	Overcasting stitch	
1-17	Overcasting stitch	
1-18	Overcasting stitch	

1 Select a stitch and attach presser foot "G".

2 Lower the presser foot so that the presser foot guide is set flush against the edge of the fabric.

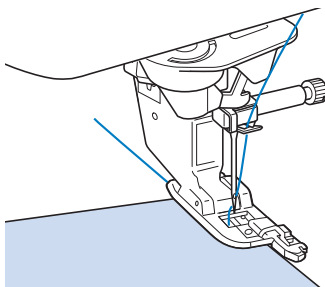


3 Sew along the presser foot guide.

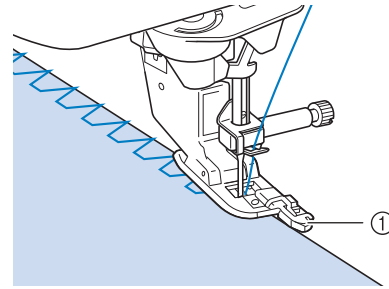

① Guide

CAUTION

- After the stitch width is adjusted, rotate the handwheel toward you (counterclockwise). Check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may break and cause injury.

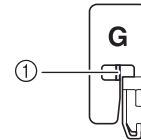


① The needle should not touch the center bar

- If the presser foot is raised to its highest level, the needle may strike the presser foot.

4 Press the "Start/Stop" button to stop sewing when you are finished, and raise the presser foot and needle to remove the fabric by pulling it back.





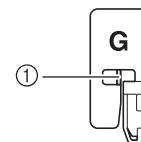

CAUTION

- Pull the fabric to the back of the machine after finished sewing. By pulling the fabric to the front or side, the center bar of the presser foot "G" may break.




① Center bar

Overcasting Using Presser Foot “J”

Stitch	Stitch name	Presser foot
1-19	Overcasting stitch	
1-20	Overcasting stitch	
1-21	Overcasting stitch	
1-22	Overcasting stitch	
1-23	Single diamond overcast	
1-24	Single diamond overcast	

- 1 Select a stitch and attach presser foot “J”.
- 2 Sew with the needle dropping slightly off the edge of the fabric.

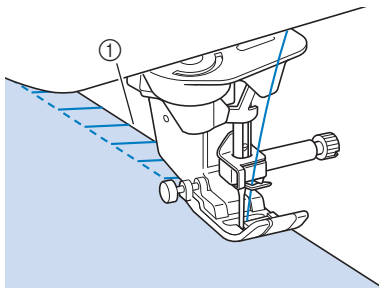

① Needle drop position



Note

- Fine adjustment of the stitching on the fabric can be done with “L/R Shift”. Before sewing your project, be sure to sew trial stitches using the same conditions as in the actual project.



Memo

- For best results when sewing stretch fabrics, decrease the pressure of the presser foot.

Overcasting Using the Side Cutter (Sold Separately)

By using the side cutter, you can do overcasting while cutting the fabric.






⚠ CAUTION

- Recommended stitches are noted “S” in the lower right corner, therefore be sure to only select one of these stitches listed below. Using another stitch may cause the needle to hit the presser foot and break, possibly causing injury.




Note

- Thread the needle manually when using the side cutter, or only attach the side cutter after threading the needle using the “Automatic Threading” button.

Stitch	Stitch name	Presser foot
1-25	With side cutter	
1-26	With side cutter	
1-27	With side cutter	
1-28	With side cutter	
1-29	With side cutter	

- 1 Select a stitch.
- 2 Follow the steps on page 72 to remove the presser foot.
- 3 Thread the needle (page 61).

- 4** Position the fork on the side cutter's operating lever onto the needle clamp screw.

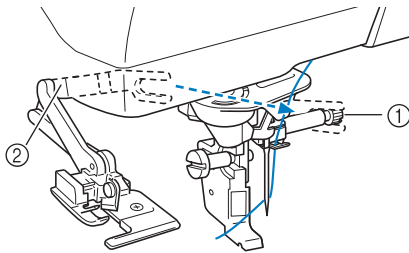


- ① Needle clamp screw
- ② Operating lever

Memo


- Make sure that the fork of the operating lever is set onto the needle screw firmly.

- 5** Position the side cutter so that the side cutter pin is aligned with the notch in the presser foot holder, and then lower the presser foot.

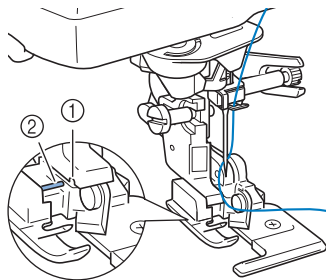


- ① Notch in presser foot holder
 - ② Pin
- The side cutter is attached.

- 6** Raise the presser foot and pull out a long section of the upper thread. Pass it below the presser foot and pull it out in the fabric feed direction.

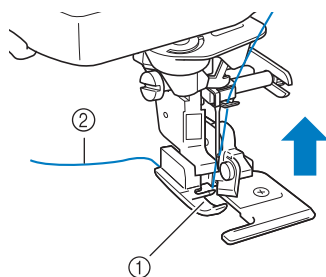


- ① Presser foot
- ② Upper thread

- 7** Make a cut of approximately 20 mm (approx. 3/4 inch) in the fabric.

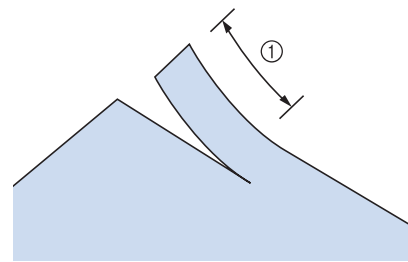

- ① 20 mm (approx. 3/4 inch)

- 8** Position the fabric so that the right side of the cut is on top of the guide plate and the left side of the cut is underneath the presser foot.

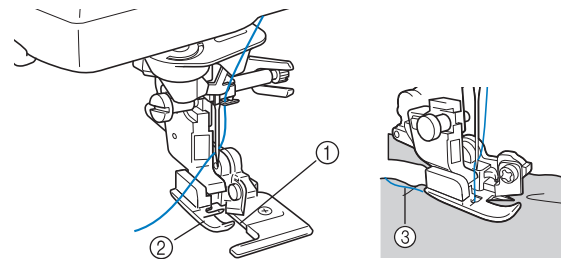


- ① Guide plate (lower knife)
- ② Presser foot
- ③ Upper thread

Memo


- If the fabric is not positioned correctly, the fabric will not be cut.

- 9** Lower the presser foot and start.

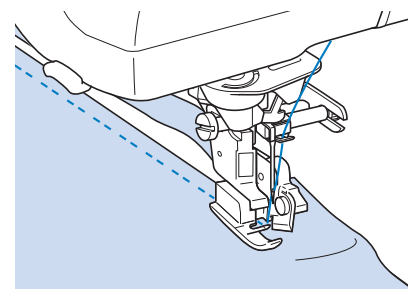

→ A seam allowance is cut while the stitching is sewn.

- When using the side cutter, sew between low and mid-speed and do not touch the knives or operation lever of the side cutter while sewing to avoid equipment damage or injury.

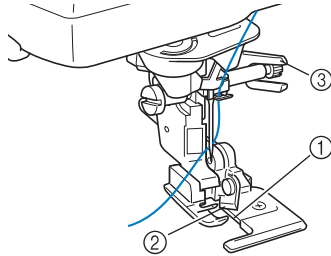

- ① Guide plate (lower knife)
- ② Upper knife
- ③ Operation lever




Note

- If the width has been adjusted, rotate the handwheel toward you (counterclockwise). Check that the needle does not touch the side cutter. If the needle touches the side cutter, it might cause the needle to break.

■ Sewing Straight Stitches While Using the Side Cutter (Sold Separately)


The seam margin should be approximately 5 mm (approx. 3/16 inch).

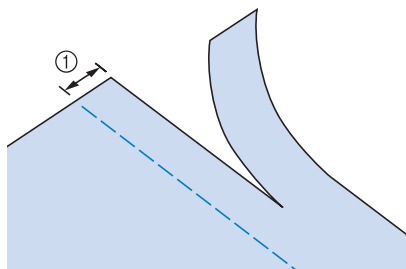

① Seam margin

Memo

- The fabric will not be cut if the whole fabric is simply spread out underneath the presser foot guide plate. Set the fabric as explained in step B from the previous section, and then start sewing.

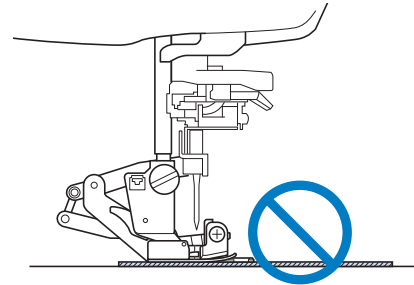





































































































- One layer of 13 oz. denim can be cut.
- Clean the side cutter after use to avoid having dust and scraps of thread build up in the cutter area.
- Add a small amount of oil as required to the cutting edge of the cutter.

Quilting

You can make beautiful quilts quickly and easily with this machine. When making a quilt, you will find it convenient to use the knee lifter and foot controller to free your hands for other tasks (“Using the Foot Controller” on page 78 and /or “Using the Knee Lifter” on page 90). The 30 quilting stitches Q-01 through Q-30 and the utility stitches with “P” or “Q” indicated on their key are useful for quilting. The “P” or “Q” at the bottom of the key display indicates that these stitches are intended for (“Q”) quilting and (“P”) piecing.

Stitch	Stitch name	Presser foot	
	Piecing stitch (Middle)		
	Piecing stitch (Right)		
	Piecing stitch (Left)		
	Hand-look quilting (Middle)		
	Basting stitch		

Stitch	Stitch name	Presser foot	
			
	Stem stitch		
	Quilting appliqué zigzag stitch		
	Zigzag stitch (Right)		
	Zigzag stitch (Left)		
	2 steps elastic zigzag		
	3 steps elastic zigzag		
	Quilting appliqué stitch		
	Shell tuck edge		
	Blanket stitch		
	Quilting stippling		
	Overcasting stitch		
	Tape attaching		
	Serpentine stitch		
	Feather stitch		
	Fagoting cross stitch		
	Couching stitch		
	Patchwork double overlock stitch		
	Smocking stitch		
	Rick-rack stitch		

Stitch	Stitch name	Presser foot	
			
	Decorative stitch		
	Decorative stitch		
	Hemstitching		
	Hemstitching		
	Single diamond overcast		
	Overcasting stitch		
	Piecing stitch (Right)		
	Piecing stitch (Middle)		
	Piecing stitch (Left)		
	Hand-look quilting		
	Quilting appliqué zigzag stitch		
	Quilting appliqué stitch		
	Quilting stippling		






Memo


- When a stitch pattern in the quilting stitches category (only quilting stitches marked with “Q”) is selected, a finer stitch width or L/R shift can be set than that available with stitch patterns in other categories.

■ Piecing


Sewing two pieces of fabric together is called piecing. When cutting pieces for quilt blocks, make sure the seam allowance is 6.5 mm (approx. 1/4 inch).


- 1 Select  or  and attach presser foot "J".
- 2 Align the edge of the fabric with the edge of the presser foot, and start sewing.

* To sew a 6.5 mm (approx. 1/4 inch) seam allowance along the right edge of the presser foot with  selected, the L/R Shift should be set to 5.50 mm (approx. 7/32 inch).

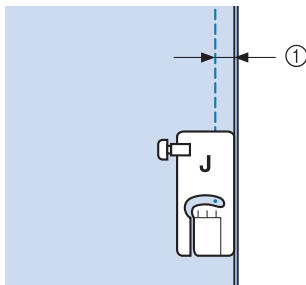



① 6.5 mm (approx. 1/4 inch)

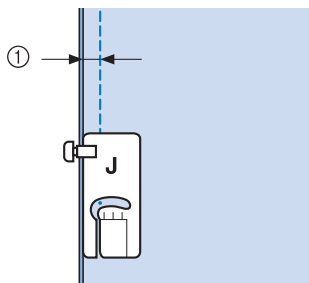* To sew a 6.5 mm (approx. 1/4 inch) seam allowance along the left edge of the presser foot with  selected, the L/R Shift should be set to 1.50 mm (approx. 1/32 inch).



① 6.5 mm (approx. 1/4 inch)

* To change the needle position, use  or  in the L/R Shift display.




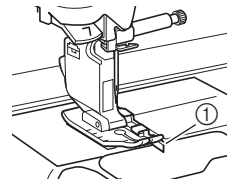
Memo

- Using a straight stitch (middle needle position) makes it easier to sew smoothly (page 110).
- When stitch Q-01 is selected and the guideline marker is set at 6.50 mm (when "Initial Position" is set to center needle position) or 10.00 mm (when "Initial Position" is set to left needle position), the space between the needle position and the guideline will be 6.5 mm or approximately 1/4 inch. Aligning the edge of the fabric with the guideline will allow you to easily sew accurate 1/4 inch seams.

■ Piecing Using the 1/4" Quilting Foot with Guide

This quilting foot can sew an accurate 1/4-inch or 1/8-inch seam allowance. It can be used for piecing together a quilt or for topstitching.

- 1 Press , and then attach the 1/4" quilting foot with guide.




① Guide

- 2 Use the guide and marks on the presser foot to sew accurate seam allowances.

Piecing a 1/4 inch seam allowance

Keep the edge of the fabrics against the guide as you sew.

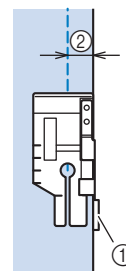


① Guide
② 1/4 inch

Memo

- For accurate fabric placement, refer to "Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)" on page 112.

Creating an accurate seam allowance

Use the mark on the foot to begin, end, or pivot 1/4 inch from edge of fabric.

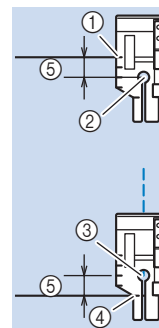


① Align this mark with edge of fabric to begin.
② Beginning of stitching
③ End of stitching
④ Opposite edge of fabric to end or pivot
⑤ 1/4 inch

Memo

- For details on pivoting, refer to "Pivoting" on page 89.

Topstitching quilting, 1/8 inch

Sew with the edge of the fabric or seam aligned with the left side of the presser foot's front section.

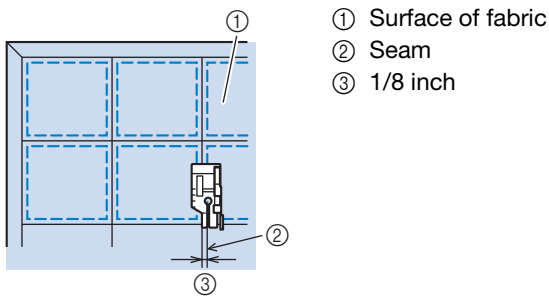


■ Quilting

Sewing the quilt top, batting, and backing together is called quilting. You can sew the quilt with the dual feed foot to keep the quilt top, batting, and backing from sliding. The dual feed foot has a motorized belt that moves together with the feed dogs in the needle plate during sewing.


For straight line quilting, use the dual feed foot and the straight stitch needle plate. Always select a straight stitch (middle needle position) when using the straight stitch needle plate.

1 Select , or .

2 Attach the dual feed foot (page 74).

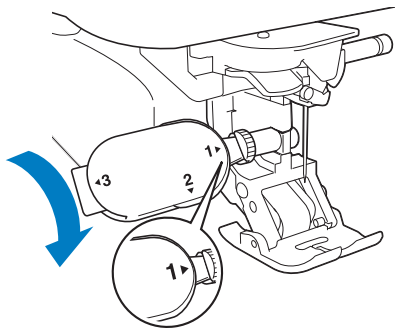

3 Place one hand on each side of the presser foot to hold the fabric secure while sewing.

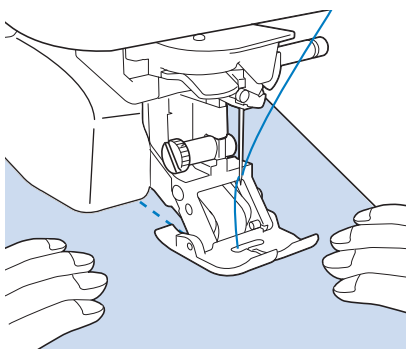


Memo

- Sew at slow to medium speed.
- Always check to be sure that your quilting surface is securely basted before beginning to sew. Specialized machine quilt needles and threads are also available for machine quilting.


■ Appliqué

1 Trace the pattern onto the appliqué fabric and then cut around it, leaving a 3 to 5 mm (approx. 1/8 to 3/16 inch) seam allowance.

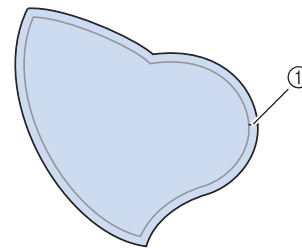


① Seam allowance: 3 to 5 mm (approx. 1/8 to 3/16 inch)

2 Place a piece of stabilizer cut to the finished size of the appliqué design onto the fabric, and then fold over the seam margin using an iron. Clip curves when necessary.



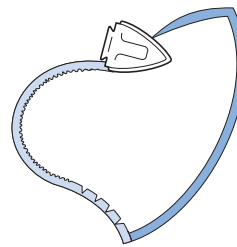


3 Turn the appliqué over, and attach the stabilizer with basting pins or a basting stitch.

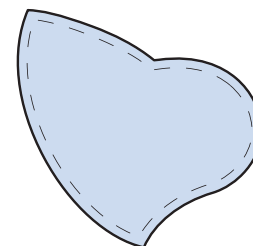

4 Select  and attach presser foot “J”.

5 Use the quilting appliqué stitch to attach the appliqué. Sew around the edge while dropping the needle as close to the edge as possible.

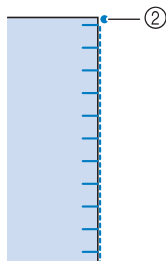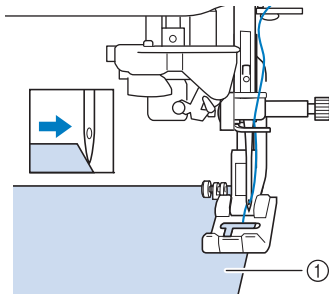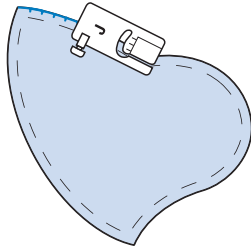


- ① Appliqué
- ② Needle drop position


CAUTION

- Be careful that the needle does not strike a basting pin during sewing. Striking a pin can cause the needle to break, resulting in injury.

You can use the appliqué technique to attach appliqué designs like the three pictured below.

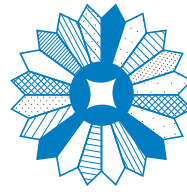

①

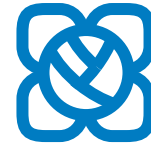

②



③


- ① Dresden plate
- ② Stained glass
- ③ Sunbonnet sue


■ Quilting with Satin Stitches

For better fabric control, use the foot controller to sew with satin stitches. Set the speed control slide to control the stitch width to make subtle changes in the stitch width during sewing.

1 Attach the foot controller (page 78).


2 Select  and attach presser foot “J”.

3 Press  in the length display to shorten the stitch length.

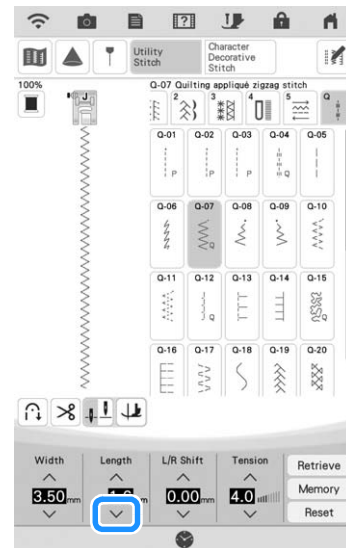


Memo

- The setting will vary according to the kind of fabric and the thickness of the thread, but a length of 0.3 to 0.5 mm (approx. 1/64 to 1/32 inch) is best for satin stitches.

4 Press  to use the speed control slide to control the stitch width.

5 Set the “Width Control” to “ON”.

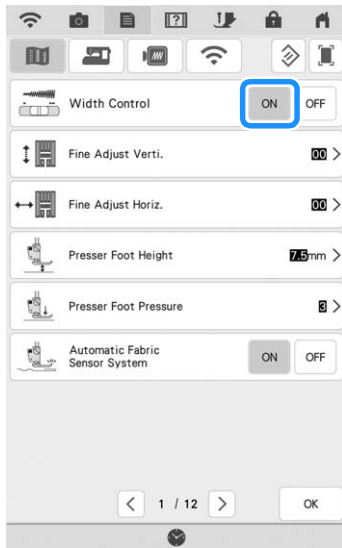

Memo

 
- You can use the speed control slide to adjust the stitch width. Use the foot controller to adjust the sewing speed.

6 Press .

→ The display will return to the original screen.


7 Start sewing.

- You can adjust the stitch width during sewing by moving the sewing speed controller. Slide the lever to the left, and the stitch width becomes narrower. Slide it to the right, the stitch width becomes wider. The size of the width changes equally on both sides of the middle needle position.




- ① narrower
- ② wider

Example: Changing the width

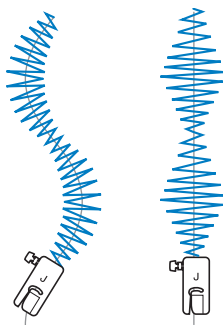

8 When you are finished sewing, set the “Width Control” back to “OFF”.

Free Motion Quilting

With free motion quilting, the feed dogs can be lowered by pressing , so that the fabric can be moved freely in any direction.

For free motion quilting, use free motion quilting foot “C” or free motion open toe quilting foot “O” depending on the stitch that is selected, and set the machine to free motion sewing mode. In this mode, the presser foot is raised to the necessary height for free motion sewing.

We recommend attaching the foot controller and sewing at a consistent speed. You can adjust the sewing speed with the speed control slide on the machine.

Using free motion Quilting Foot “C”

Use the free motion quilting foot “C” with straight stitch needle plate for free motion sewing.




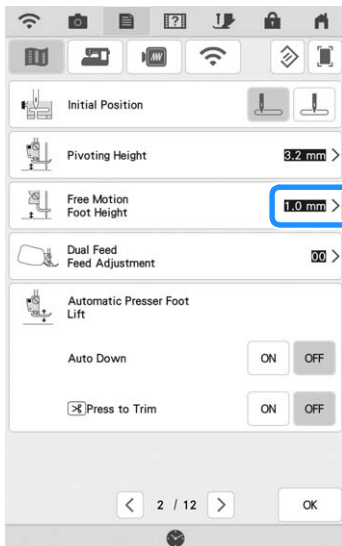
Free motion quilting foot “C”

CAUTION

- With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.
- When using free motion quilting foot “C”, be sure to use the straight stitch needle plate and sew with the needle in middle (center) needle position. If the needle is moved to any position other than the middle (center) needle position, the needle may break, which may result in injuries.


Memo

- When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press  to display “Free Motion Foot Height” of the settings screen. Touch the number to select the height that the quilting foot is raised above the fabric. Increase the setting, for example, when sewing very stretchy fabric, so that it is easier to sew.



- In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension. Test with a sample piece of fabric that is similar to your chosen fabric.

1 Attach the straight stitch needle plate (page 113).

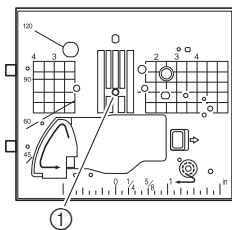


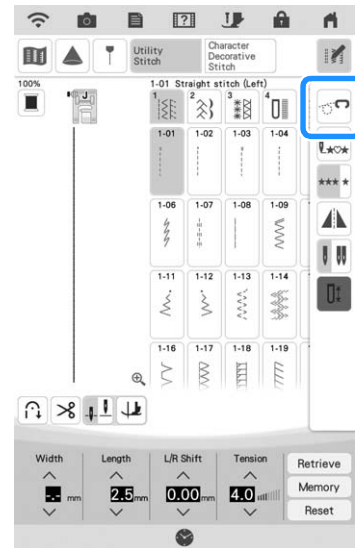
① Round hole


Memo


- Notice this needle plate has a round hole for the needle.

2 Select  or .

3 Press  to set the machine to free motion sewing mode.



→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.

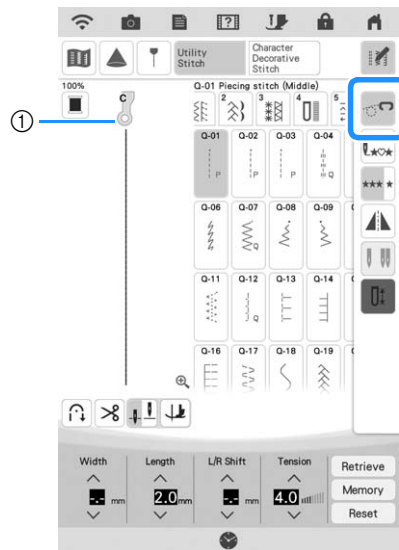


① Free motion quilting foot “C”
→ When stitch Q-01 or 1-31 is selected, free motion quilting foot “C” is indicated in the upper-left corner of the screen.

4 Remove the presser foot holder (page 73).

CAUTION

- The machine must be turned off and unplugged when switching the needle plate.

- 5** Attach free motion quilting foot “C” at the front with the presser foot holder screw aligned with the notch in the quilting foot.

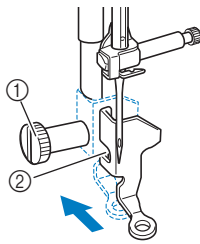


- ① Presser foot holder screw
- ② Notch



Note

- Make sure that the quilting foot is attached properly and not slanted.

- 6** Hold the quilting foot in place with your right hand, and tighten the presser foot holder screw using the multi-purpose screwdriver with your left hand.

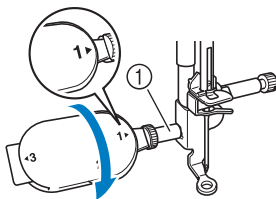


- ① Presser foot holder screw

⚠ CAUTION

- Be sure to securely tighten the screw with the included multi-purpose screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.

- 7** Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0-2.5 mm (approx. 1/16 - 3/32 inch) in length.

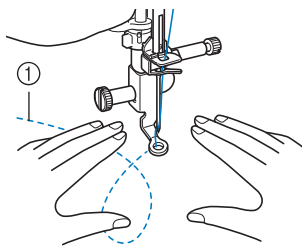

- ① Stitch

- 8** Press  to cancel the free motion sewing mode.

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

- 9** After sewing, make sure to remove the straight stitch needle plate and presser foot “C”, and reinstall the regular needle plate.



Note

- Free motion open toe quilting foot “O” can also be used with the straight stitch needle plate. We recommend using free motion open toe quilting foot “O” with free motion sewing of fabrics of uneven thicknesses.
- When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the L/R Shift.




Memo

- Normally, the feed dogs are raised for regular sewing.
- Do not be discouraged with your initial results. The technique requires practice.

Using free motion Open Toe Quilting Foot “O”

The free motion open toe quilting foot “O” is used for free motion quilting with zigzag or decorative stitches or for free motion quilting of straight lines on fabric with an uneven thickness. Various stitches can be sewn using free motion open toe quilting foot “O”. For details on the stitches that can be used, refer to “STITCH SETTING CHART” on page 221.

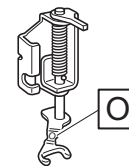



Free motion open toe quilting foot “O”



Memo

- The standard needle plate must be used if zigzag or decorative stitch patterns are selected.
- In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (page 87). Test with a sample piece of quilting fabric.

- 1** Press  to set the machine to free motion sewing mode.

→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.

2 Select a stitch.




Memo

- When stitch Q-01 or 1-31 is selected, free motion quilting foot “C” is indicated in the upper-left corner of the screen. When the other stitches are selected, free motion open toe quilting foot “O” is indicated in the screen.

3 Remove the presser foot holder (page 73).

4 Attach free motion open toe quilting foot “O” by positioning the pin of the quilting foot above the needle clamp screw and aligning the lower-left of the quilting foot and the presser bar.

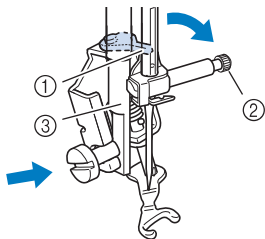

- ① Pin
- ② Needle clamp screw
- ③ Presser bar




Note

- Make sure that the quilting foot is not slanted.

5 Hold the quilting foot in place with your right hand, and tighten the presser foot holder screw using the multi-purpose screwdriver with your left hand.

- * Use the multi-purpose screw driver setting the position to “1”. (page 24)

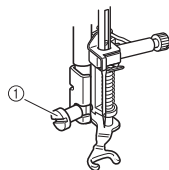


- ① Presser foot holder screw

⚠ CAUTION

- Be sure to securely tighten the screw with the included multi-purpose screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.

6 Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0-2.5 mm (approx. 1/16 - 3/32 inch) in length.

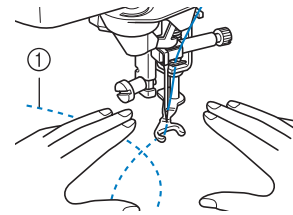

- ① Stitch

7 Press to cancel the free motion sewing mode.

- Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.




Memo


- Do not be discouraged with your initial results. The technique requires practice.

■ Echo Quilting Using the Free Motion Echo Quilting Foot “E”

Sewing quilting lines at equal distances around a motif is called echo quilting. The quilting lines, which appear as ripples echoing away from the motif, are the distinguishing characteristic of this quilting style. Use the free motion echo quilting foot “E” for echo quilting. Using the measurement on the presser foot as a guide, sew around the motif at a fixed interval. We recommend attaching the foot controller and sewing at a consistent speed.

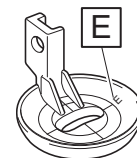

Free motion echo quilting foot “E” measurement

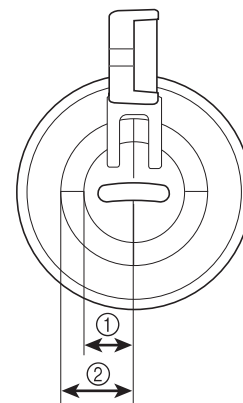


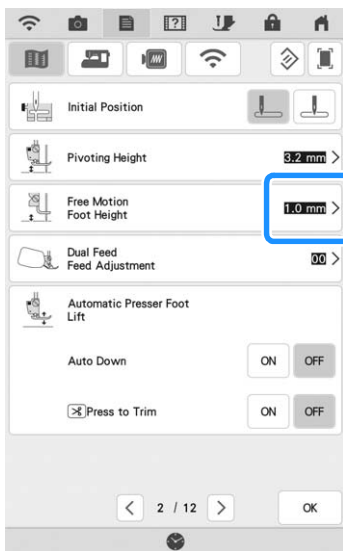
- ① 6.4 mm (approx. 1/4 inch)
- ② 9.5 mm (approx. 3/8 inch)

⚠ CAUTION

- With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.


📖 Memo


- When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press  to display “Free Motion Foot Height” of the settings screen (page 29). Touch the number to select the height that the quilting foot is raised above the fabric. Increase the setting, for example, when sewing very soft fabric, so that it is easier to sew.



- In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (page 87). Test with a sample piece of quilting fabric.

1 Select .


2 Press  to set the machine to free motion sewing mode.

→ The key appears as , the quilting foot is raised to the necessary height, then the feed dogs are lowered for free motion sewing.



3 Follow the steps on page 72 to remove the presser foot.

4 Remove the presser foot holder and then attach the adapter (page 73).

5 Position the free motion echo quilting foot “E” on the left side of the presser bar with the holes in the quilting foot and presser bar aligned.

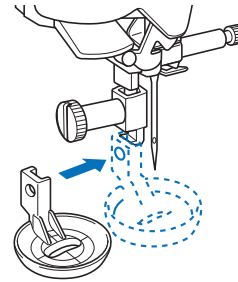



6 Tighten the screw with the included screwdriver (large).

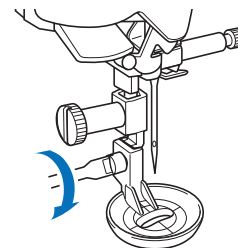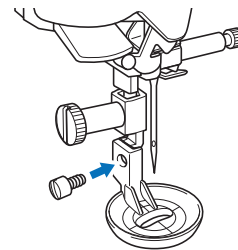


⚠ CAUTION

- Be sure to securely tighten the screws with the included screwdriver (large). Otherwise, the needle may touch the quilting foot, causing it to bend or break.

7 Using the measurement on the quilting foot as a guide, sew around the motif.

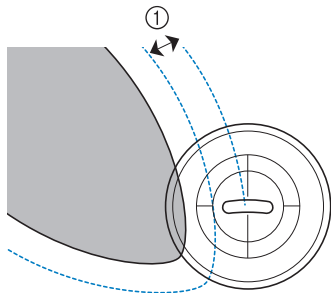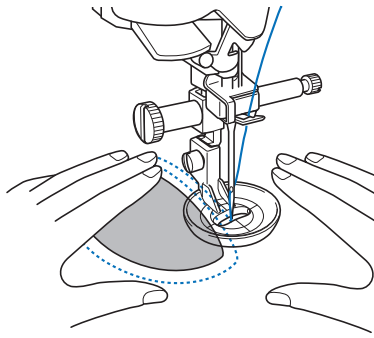

① 6.4 mm (approx. 1/4 inch)
Finished project

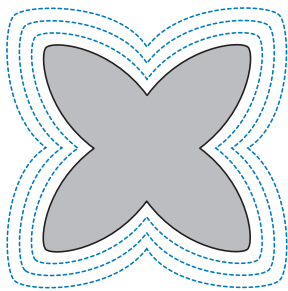

8 Press to cancel the free motion sewing mode.

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

Hand-Look Quilting

Sew hand-look quilting stitch patterns using the threads recommended below:

Upper thread: Use transparent nylon thread or lightweight thread that matches the color of the fabric for this thread to appear invisible.

Bobbin thread: Use a color that contrasts with the fabric for the stitch pattern to stand out.



Note

- For most fabrics and threads, using a 90/14 needle will result in a clean finish.
- To bring up more of the bobbin thread, increase the thread tension.

Memo

- S-03, S-04, S-05 are made up of several short stitches.

Blind Hem Stitches


Secure the bottoms of skirts and pants with a blind hem. Two stitches are available for blind hem stitching.

Stitch	Stitch name	Presser foot
	Blind hem stitch	
	Blind hem stitch stretch	

Memo


- When the size of cylindrical pieces is too small to slide onto the arm or the length is too short, the fabric will not feed and desired results may not be achieved.

 1 Turn the skirt or pants wrong side out.



- ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Bottom side

2 Fold the fabric along the desired edge of the hem, and press.

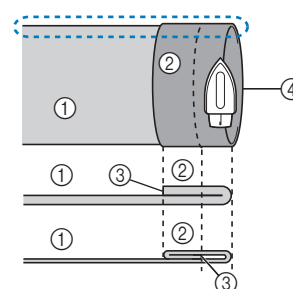


- ① Wrong side of fabric
- ② Right side of Fabric
- ③ Edge of fabric
- ④ Desired edge of hem

<Thick fabric>

<Normal fabric>

<Seen from the side>

3 Use a chalk pencil to mark on the fabric about 5 mm (3/16 inch) from the edge of the fabric, and then baste it.

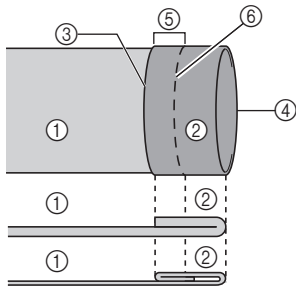


- ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Desired edge of hem
- ⑤ 5 mm (3/16 inch)
- ⑥ Basting

<Thick fabric>
<Normal fabric>

<Seen from the side>

4 Fold back the fabric inside along the basting.

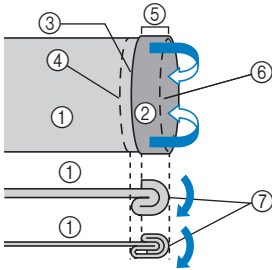


- ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Desired edge of hem
- ⑤ 5 mm (3/16 inch)
- ⑥ Basting
- ⑦ Basting point

<Thick fabric>
<Normal fabric>

<Seen from the side>

5 Unfold the edge of fabric, and position the fabric with the wrong side facing up.

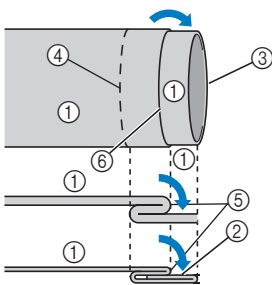


- ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Desired edge of hem
- ⑤ Basting point
- ⑥ Basting

<Thick fabric>
<Normal fabric>

<Seen from the side>

 
6 Attach blind stitch foot "R".



7 Select  or .


8 Remove the flat bed attachment to use the free-arm.

9 Slide the item that you wish to sew onto the free arm, make sure that the fabric feeds correctly, and then start sewing.

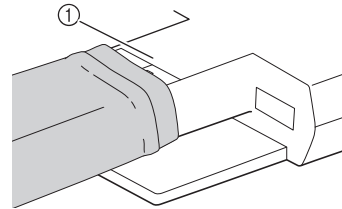


① Free arm

10 Position the fabric with the edge of the folded hem against the guide of the presser foot, and then lower the presser foot lever.

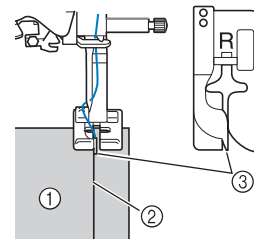

- ① Wrong side of fabric
- ② Fold of hem
- ③ Guide


11 Adjust the stitch width until the needle slightly catches the fold of the hem.

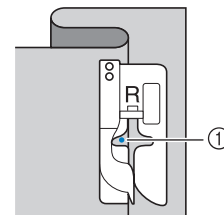

① Needle drop point

When you change the needle drop point, raise the needle, and then change the stitch width.

<Stitch Width>

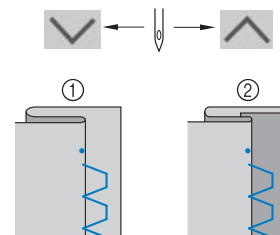


- ① Thick fabric
- ② Normal fabric

Memo

- Blind hem stitches cannot be sewn if the left needle drop point does not catch the fold. If the needle catches too much of the fold, the fabric cannot be unfolded and the seam appearing on the right side of the fabric will be very large, leaving an unattractive finish. If you experience either of these cases, follow the instructions below to solve the problem.


■ If the Needle Catches Too Much of the Hem Fold

The needle is too far to the left.


Press  to decrease the stitch width so that the needle slightly catches the fold of the hem.



<Thick fabric>

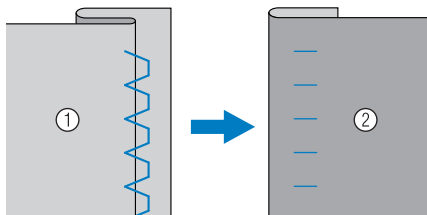


<Normal fabric>

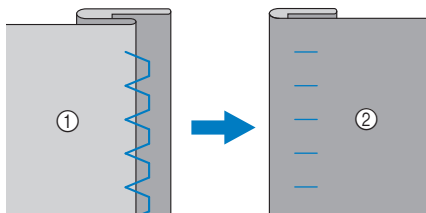

- ① Wrong side of fabric
- ② Right side of fabric


■ If the Needle Does Not Catch the Hem Fold

The needle is too far to the right.


Press  to increase the stitch width so that the needle slightly catches the fold of the hem.



<Thick fabric>

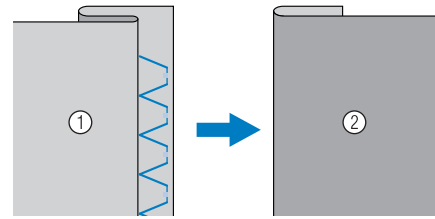


<Normal fabric>

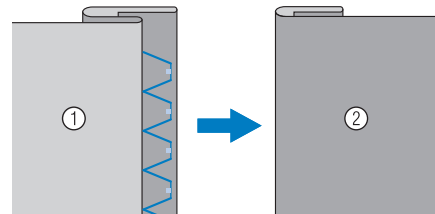

- ① Wrong side of fabric
- ② Right side of fabric

12 Sew with the fold of the hem against the presser foot guide.

13 Remove the basting stitching and reverse the fabric.

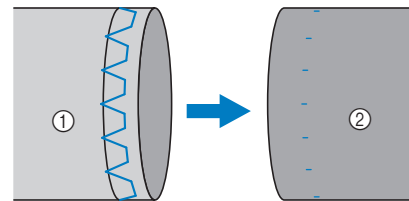


- ① Wrong side of fabric
- ② Right side of fabric

Appliqué

1 Use a temporary spray adhesive, fabric glue or a basting stitch to attach the appliqué to the fabric.

* This will keep the fabric from moving during sewing.

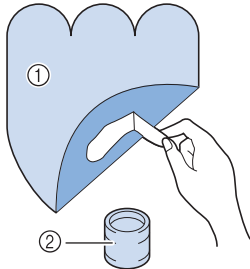

- ① Appliqué
- ② Fabric glue


2 Select  **or** .

* Adjust the stitch length and width to correspond to the appliqué shape, size, and quality of material (page 85).


 **Memo**

• For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

3 Attach presser foot “J”. Check that the needle drops slightly off the edge of the appliqué, then start sewing.

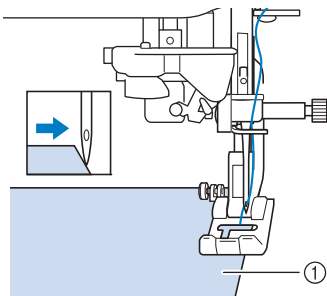


- ① Appliqué material

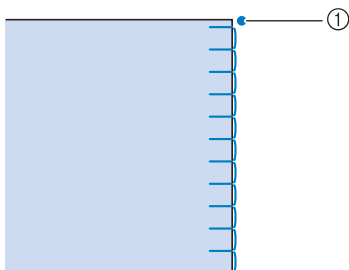

- ① Needle drop position


■ Appliqué Sharp Curves

Stop the machine with the needle in the fabric outside the appliqué. Raise the presser foot and turn the fabric a little bit at a time while sewing for an attractive finish to the seam.

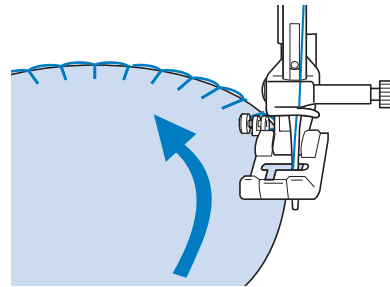


■ Appliqué Corners

Stop the machine with the needle in the right position of the outside (or inside) corner of the appliqué. Raise the presser foot and pivot the fabric to align the fabric edge. Lower the presser foot and continue stitching.

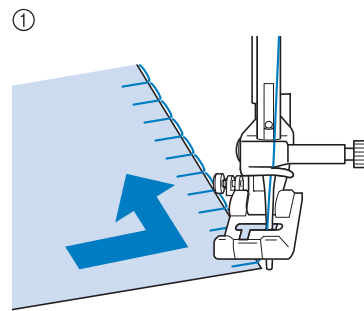

②

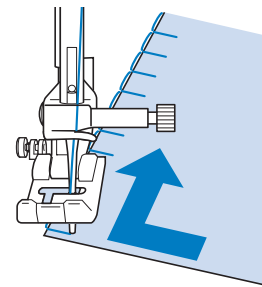

- ① Outside corner
- ② Inside corner

 **Memo**

• Placing a lightweight tear away stabilizer beneath the stitching area will improve the stitch placement along the edge of the appliqué fabric.

Shelltuck Stitches

Shelltuck stitches give an attractive appearance of shells along the curve of a collar. This stitch pattern can be used for edging the neckline or sleeves of dresses and blouses.

1 Select .



Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.


2 Increase the upper thread tension for an attractive scallop finish to the shelltuck stitches (page 87).



Memo

- If the upper thread tension is too weak, the shelltuck stitches will not scallop.



3 To make rows of shell tuck stitches, fold the fabric in half along the bias.

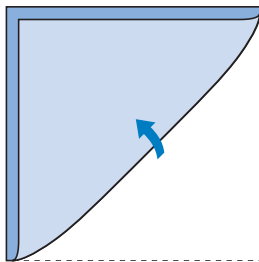

Memo


- Use a thin fabric.

4 Attach presser foot “J”. Set the needle drop point slightly off the edge of the fabric, and start sewing.

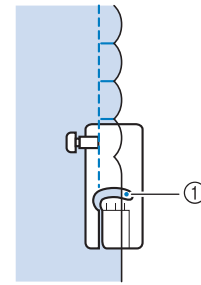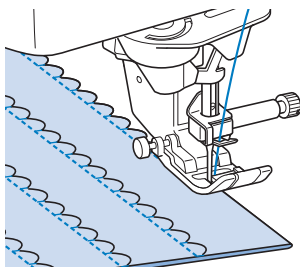

① Needle drop position

5 Unfold the fabric, and iron the tucks to one side.

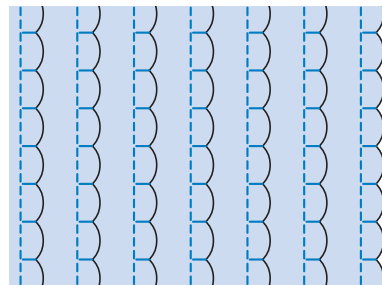

Memo

- To make shell tucks at the edge of a collar or neckline, follow the stitch pattern's instructions and then use this stitch to make a decorative finish on the collar or neckline.

Scallop Stitches

This wave-shaped satin stitch is called the scallop stitch. Use this stitch to decorate the edges of blouse collars and handkerchiefs or use it as a hem accent.



Memo

- A temporary spray adhesive may be necessary for lightweight fabrics. Test sew the fabric before sewing a project.

1 Select .




Memo


- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

- 2 Attach presser foot “N”. Sew scallop stitches along the edge of the fabric.

* Do not sew directly on the edge of the fabric.

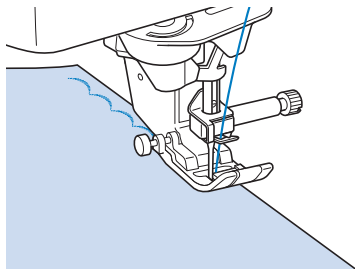

- 3 Trim along the seam, making sure not to cut the stitches.

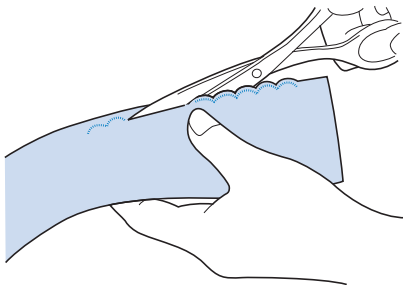


Memo

- Use a seam sealant to secure the edges of the scallop stitches.

Crazy Quilting


For a decorative look called “Crazy Quilting”, the following stitches can be sewn on top of a pressed seam allowance.

- 1 Select a straight stitch and attach presser foot “J”.
- 2 With the right sides facing each other, sew two pieces of fabric together, and then press open the seam allowance.

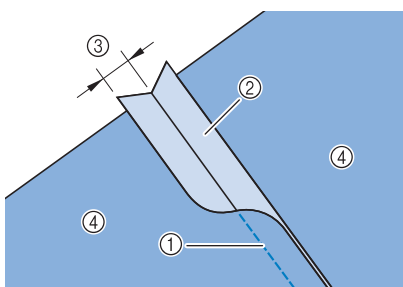


- ① Straight stitch
- ② Seam margins
- ③ 6.5 mm (approx. 1/4 inch)
- ④ Wrong side

 - 3 Select a stitch for top stitching.



- 4 Place the fabric right side up in the machine, and center the presser foot over the seam when sewing.

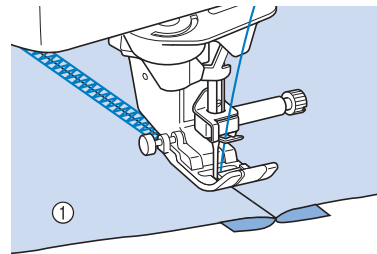


① Right side of fabric

Smocking Stitches


Use smocking stitches for decorative sewing on clothes, etc.

- 1 Select a straight stitch and attach presser foot “J”.
- 2 Set the stitch length to 4.0 mm (approx. 5/32 inch) and loosen the upper thread tension to approximately 2.0 (“Setting the Stitch Length” on page 86 and “Setting the Thread Tension” on page 87).
- 3 Pull the bobbin and upper threads out by 50 mm (approx. 2 inches).
- 4 Sew the seams, leaving approximately 10 mm (approx. 3/8 inch) between the seams, then trim excess thread, leaving 50 mm (approx. 2 inches).

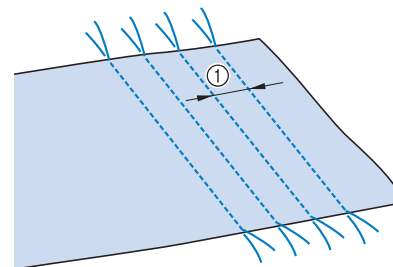

① Approximately 10 mm (approx. 3/8 inch)

- 5** Pull the bobbin threads to obtain the desired amount of gather, and then smooth the gathers by ironing them.

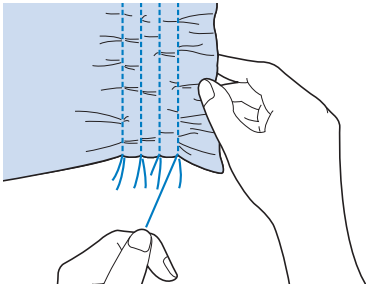


- 6** Select  or .




Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

- 7** Sew the spaces between the straight seams.

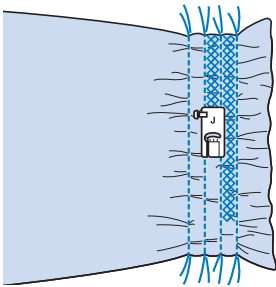

- 8** Pull out the straight stitch threads.

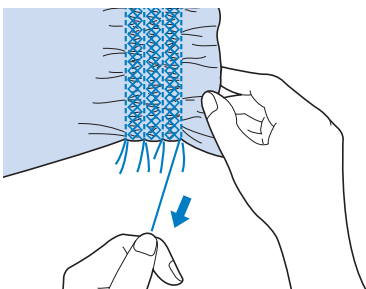


Fagoting

When there is a space between two fabrics with thread sewn over the space to join the fabrics together, it is called fagoting. Use this stitch when sewing blouses or children's clothes.

- 1** Baste two pieces of fabric onto thin paper, leaving a space of 4 mm (approx. 3/16 inch) between the fabrics.

- * If you draw a line down the middle of the thin paper or water soluble stabilizer, sewing is easier.

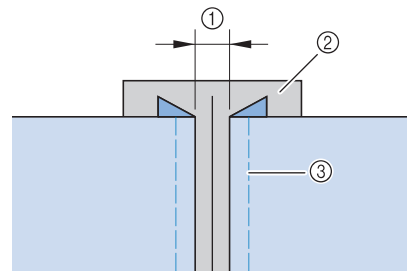

- ① 4.0 mm (approx. 3/16 inch)
 ② Paper
 ③ Basting stitches


- 2** Select  or .



Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

- 3** Attach presser foot “J”. Align the center of the presser foot with the middle of the space between the fabrics and begin sewing.

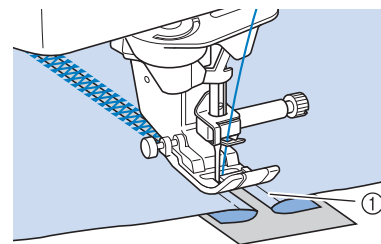

- ① Basting stitches



Memo



- Use a thick thread.

- 4** When sewing is finished, gently tear the paper away.


Tape or Elastic Attaching

- 1 Select a straight stitch and attach presser foot “J”.
- 2 Set the stitch length to 4.0 mm (approx. 3/16 inch), and loosen the upper thread tension to 2.0 (“Setting the Stitch Length” on page 86 and “Setting the Thread Tension” on page 87).

 **Memo**

- Be sure that neither automatic reinforcement  nor automatic thread cutting  is selected.


- 3 Sew two rows of straight stitches on the right side of the fabric, then pull the bobbin thread to create the necessary gather.

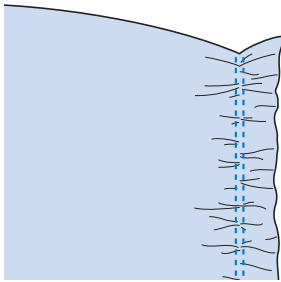

 **Memo**

- Before sewing the straight stitch, rotate the handwheel toward you (counterclockwise) and pull up the bobbin thread. Holding the top and bobbin thread, pull a length of thread out from the rear of the machine. (Be sure that the presser foot is raised.)

- 4 Place the tape over the gather, and hold it in place with basting pins.

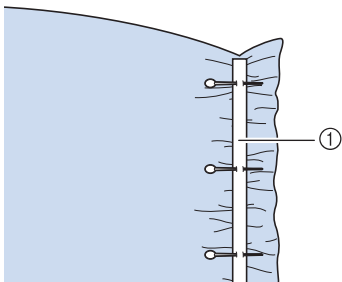



① Tape

- 5 Select  or .

 **Memo**

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.


- 6 Sew over the tape (or elastic).

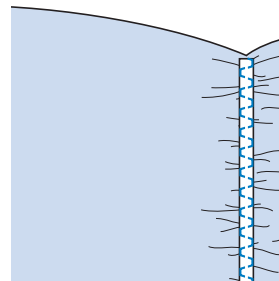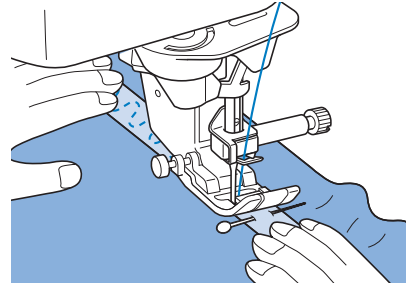

 **CAUTION**

- Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.

- 7 Pull out the straight stitch threads.

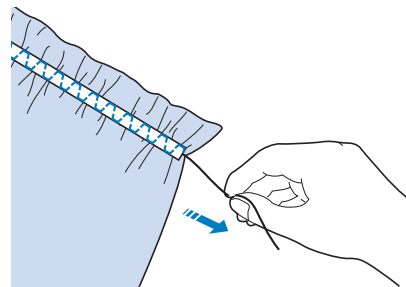

Heirloom

■ Hemstitching (1) (Daisy Stitch)

Use for sewing tablecloths, decorative hems, and decorative stitching on shirt fronts.



Memo

- Use a light to medium weight homespun fabric with a little stiffness.

1 Insert a type 130/705H, size 100/16 Wing needle.

- * This specialty sewing needle is not furnished with your machine. Must be purchased separately.

⚠ CAUTION

- The “Automatic Threading” button cannot be used. Thread the wing needle by hand, from front to back. Using the “Automatic Threading” button may result in damage to the machine.
- A more attractive finish can be obtained if you use a “130/705H Wing” needle when sewing these stitch patterns. If using a wing needle and the stitch width has been set manually, check that the needle will not touch the presser foot by carefully rotating the handwheel toward you (counterclockwise) before starting to sew.

2 Select a stitch and attach presser foot “N”.

- * Select any stitch between 3-01 and 3-25.




Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

3 Start sewing.


Example: Illustration of finished product

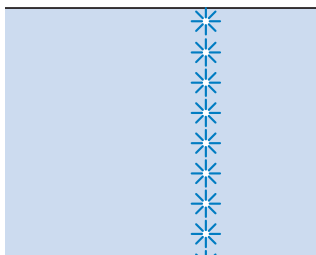

■ Hemstitching (2) (Drawn Work (1))

1 Pull out several threads from one area on a piece of fabric to open the area.

- * Pull out 5 or 6 threads to leave a 3 mm (approx. 1/8 inch) area open.

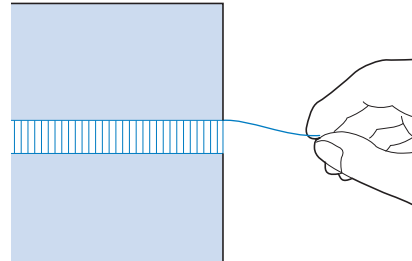

Memo

- Loosely woven fabrics work best for this.


2 Select .



Memo


- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

3 Attach presser foot “N”. With the right side of the fabric facing up, sew one edge of the open area.

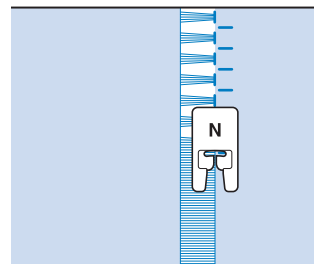

4 Press to create a mirror image of the stitch.


- 5 Match beginning needle drop points on the opposite edge of the open area to keep the stitching symmetrical.

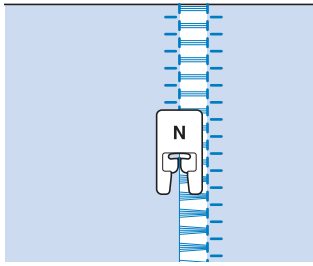

■ Hemstitching (3) (Drawn Work (2))

- 1 Pull out several threads from both sides of the 4 mm (approx. 3/16 inch) area which are not yet open.

* Pull out four threads, leave five threads, and then pull out four threads. The width of five threads is approximately 4 mm (approx. 3/16 inch) or less.

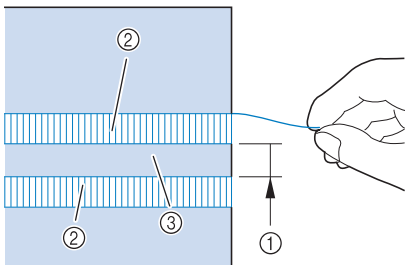


- ① Approx. 4 mm (approx. 3/16 inch) or less
- ② Four threads (pull out)
- ③ Five threads (leave)

- 2 Select .

Memo

• For details on each stitch, refer to “STITCH SETTING CHART” on page 221.


- 3 Sew the decorative stitch in the center of the five threads created above.

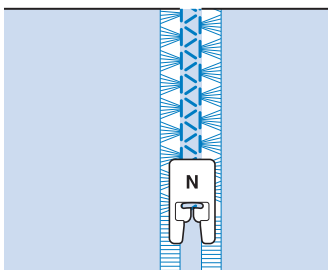

Memo

• A wing needle can be used for Hemstitching (3).

 
Basting

- 1 Select  and attach presser foot “J”.
- 2 Keep pressing the “Reverse Stitch” button or the “Reinforcement Stitch” button to sew 4 stitches of reinforcement stitches, then press “Start/Stop” button to continue sewing.

Memo


• When you use the basting stitch for gathering, do not use a reinforcement stitch at the beginning; you should lift the presser foot, rotate the handwheel toward you (counterclockwise), pull up the bobbin thread and pull a length of top and bobbin thread out from the rear of the machine.

• Stitching will be sewn with a length of 5 mm (approx. 3/16 inch).



① 5 mm (approx. 3/16 inch)

- 3 Sew while keeping the fabric straight.

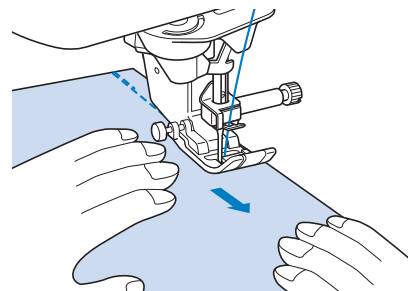


- 4 End the basting with reinforcement stitches.

■ Free-Motion Basting

When the feed dogs are lowered, basting can be sewn while freely moving the fabric.

1 Press .

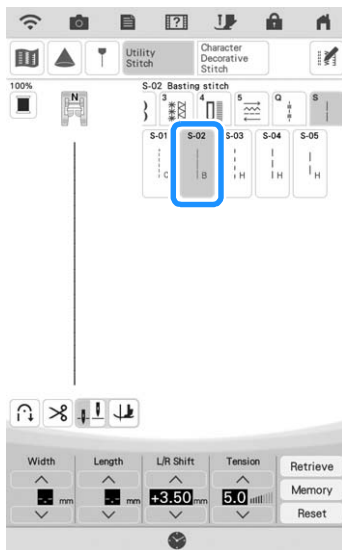

→ The presser foot is raised to the height necessary for free-motion sewing, and the feed dogs are lowered.

2 Keep pressing the “Reverse Stitch” button or the “Reinforcement Stitch” button to sew 4 stitches of reinforcement stitches, then press “Start/Stop” button to continue sewing.

3 Press the “Start/Stop” button to start sewing.

Sew while moving the fabric when the needle is raised.

Memo


- If the side pedal of the multi-function foot controller (sold separately) is set to “Single Stitch”, basting can be sewn by using the side pedal to sew each single stitch. For details on specifying settings for the multi-function foot controller, refer to “Specifying the Multi-Function Foot Controller (Sold Separately)” on page 34.
- The green light on the right of the “Reinforcement Stitch” button lights up while reinforcement or reverse stitching.
- The sewing speed is limited up to 100 spm.

4 End the basting with reinforcement stitches.

Zigzag Couching

You can easily sew decorative effects using yarn.

CAUTION

- When using yarn, we recommend selecting yarn of weight 4 (MEDIUM ). Medium yarn is often referred to as worsted weight, 20 knitted stitches per 10cm, or 9-11 wraps per inch. The diameter of the yarn is approximately 2-3 mm (1/12-1/8 inch). If the yarn is extremely thin or thick, has an unusual shape (flat or furry), or more than 2 yarns, the best finishing results may not be achieved, or injuries or damage may result.


Note

- Sew test stitches on the fabric before sewing on your project.
- We recommend using a stabilizer material when sewing stretch fabrics, lightweight fabrics, fabrics with a coarse weave, or fabrics which are prone to fabric shrinkage.

■ Prepare for Zigzag Couching


1 Attach the spool stand to the machine.

At this time, do not raise the telescopic thread guide shaft.

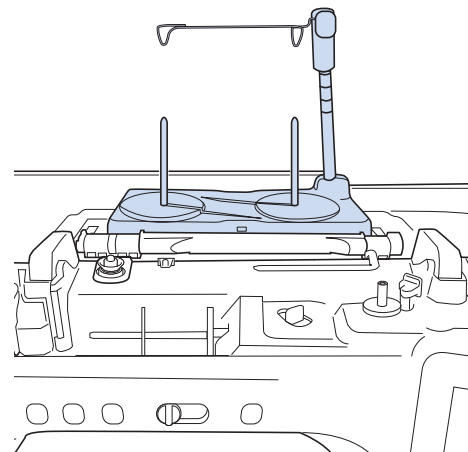


* Refer to “Assembling the Spool Stand” on page 25.

2 Insert the yarn guide for zigzag couching into the slot on the top left of the machine.

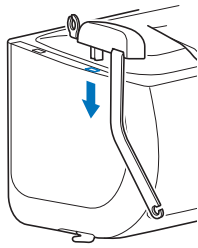

Note

• There are two yarn guides: one for sewing couching and one for embroidery couching. Check the shape of the part, and then install the appropriate guide.

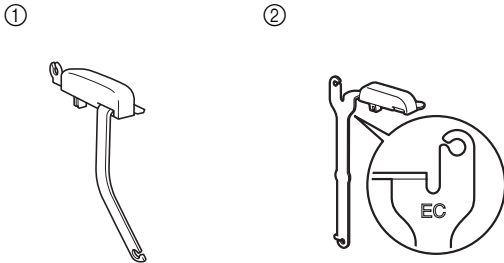

- ① Yarn guide for sewing couching
- ② Yarn guide for embroidery couching


3 Press  to lock all keys and buttons, and then raise the presser foot lever.

4 Attach the dual feed foot to the machine without attaching the couching dual feed foot.

* Refer to “Attaching the Dual Feed Foot” on page 74.




5 Pass the yarn through the telescopic thread guide and the yarn guide (①) to (②).

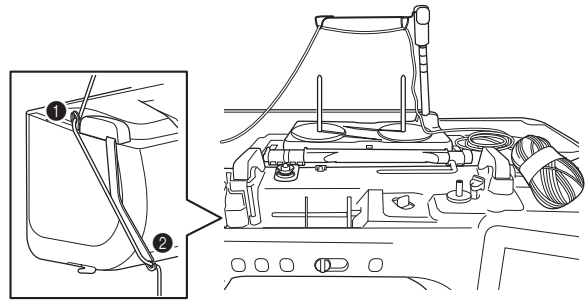


Note


• Make sure that the yarn does not become entangled as you work.

6 Thread the yarn through the couching foot. Pass the yarn through the loop in the yarn threader, and then pass the threader from top to bottom through the hole on the couching foot.

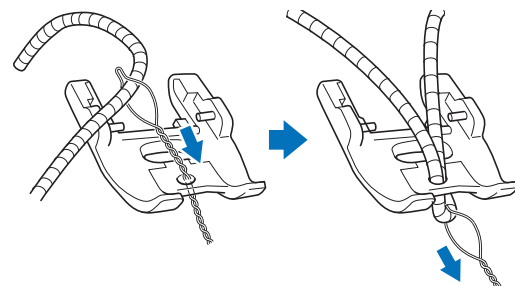

7 Attach the couching dual feed foot shown below to the dual feed foot.

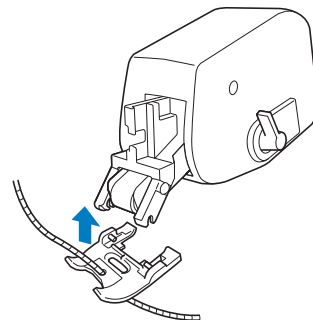


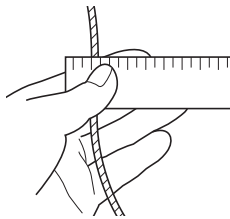
- 8 Pull out the yarn for about 10 cm (4 inches) to the back of the machine.
- 9 Press  to unlock all keys and buttons.
- 10 Thread the machine with the upper thread.

**Note**


- Do not use the spool stand for upper thread. Otherwise thread may tangle with yarn.

■ Sewing Zigzag Couching

- 1 Select  (Stitch Pattern 1-10).
- 2 Measure the width of the yarn and set the stitch width according to the width of the yarn.


**Note**

- Make sure that there is enough width to wrap over the yarn.
- You can adjust the stitch width while checking the camera view. Refer to “Checking the Needle Location in the Screen” on page 92.

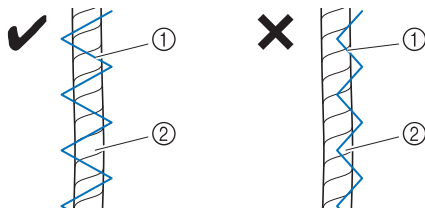

- ① Zigzag stitch
② Yarn

- 3 Rotate the handwheel to set the needle in the sewing start position. Start sewing on the right side of the yarn.
- 4 Make sure that the yarn passes straight through the channel in the back of the couching dual feed foot, and then lower the presser foot.

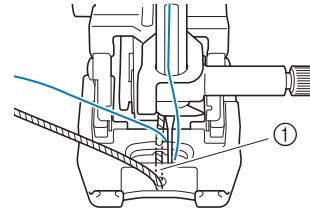


- ① Channel

**Note**

- Pull off an appropriate amount of yarn from the ball or skein so the yarn does not become taut.

- 5 Set the sewing speed to a medium speed.

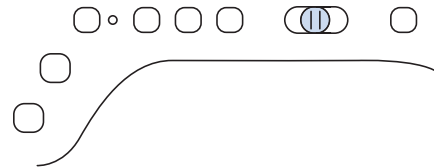

- 6 Press “Start/Stop” button to start sewing.

- * While lightly holding down the fabric with both hands, adjust the sewing direction.

**Memo**

- The multi-function foot controller can also be very useful for sharp angle sewing when set to single stitch sewing. Refer to “Specifying the Multi-Function Foot Controller (Sold Separately)” on page 34.
- Pivoting is also useful when rotating fabric with both hands.
- When guideline marker is set to on, it is easy to sew zigzag couching straight.

One-Step Buttonholes

With one-step buttonholes, you can make buttonholes appropriate to the size of your button.

⚠ CAUTION

- When attaching and removing buttonhole foot “A+”, do not apply excessive force to the presser foot, otherwise it may be damaged. In addition, be careful not to hit the needle when attaching and removing buttonhole foot “A+”, otherwise the needle may break.


Note

- Before attaching the presser foot, check that there is enough thread in the bobbin.
- When the presser foot is attached, the compartment of the flat bed attachment cannot be opened. Be sure to first remove any necessary accessories.
- Sew trial stitches on fabric that is the same as that used in your project, referring to “Fabric/Thread/Needle Combinations” on page 71.
- The built-in camera detects the position of buttonhole foot “A+”. Do not touch the camera. (Refer to “NAMES OF MACHINE PARTS AND THEIR FUNCTIONS” on page 12.)
- Do not peel the “A+” sticker off buttonhole foot “A+” or cover the sticker with the upper thread, etc., otherwise the camera cannot detect the presser foot or buttonholes cannot be sewn.

Stitch	Stitch name	Presser foot
4-01	Narrow rounded buttonhole	A+
4-02	Wide round ended buttonhole	A+
4-03	Tapered round ended buttonhole	A+
4-04	Round ended buttonhole	A+
4-05	Round ended buttonhole	A+
4-06	Round double ended buttonhole	A+
4-07	Narrow squared buttonhole	A+

Stitch	Stitch name	Presser foot
4-08	Wide squared buttonhole	A+
4-09	Squared buttonhole	A+
4-10	Stretch buttonhole	A+
4-11	Heirloom buttonhole	A+
4-12	Bound buttonhole	A+
4-13	Keyhole buttonhole	A+
4-14	Tapered keyhole buttonhole	A+
4-15	Keyhole buttonhole	A+

One-step buttonholes are sewn from the front of the presser foot to the back, as shown below.

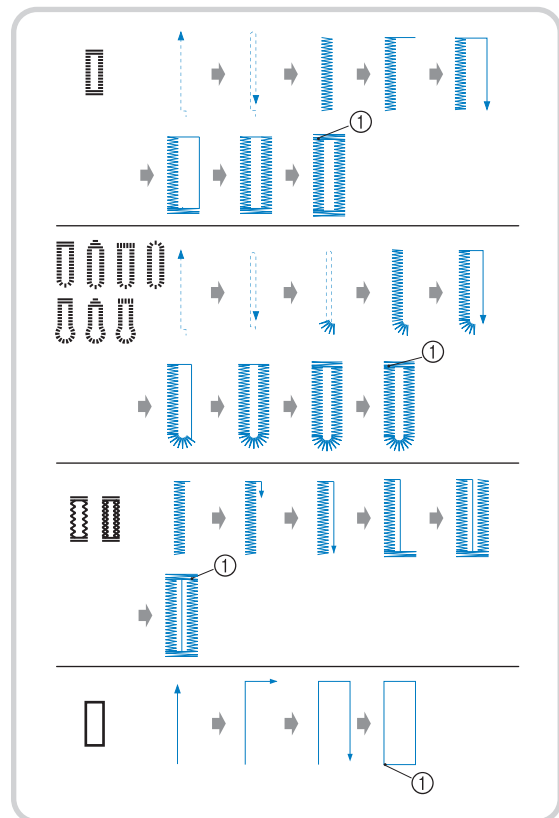


① Reinforcement stitching

1 Select a buttonhole stitch, and attach buttonhole foot “A+”.

Position the upper thread under the presser foot by guiding thread through the hole in the presser foot before attaching the buttonhole foot “A+”.

2 Mark the position and length of the buttonhole on the fabric.

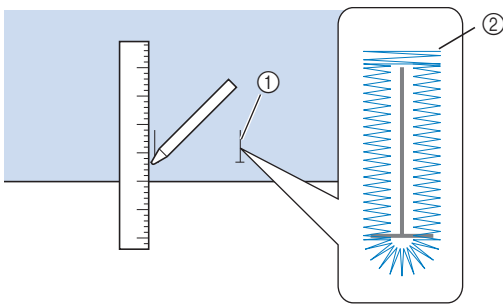


- ① Marks on fabric
- ② Buttonhole sewing

Memo

- The maximum buttonhole length is about 47 mm (approx. 1-3/4 inches) (diameter + thickness of the button).

3 Pull out the button holder plate on the presser foot, and insert the button that will be put through the buttonhole. Then tighten the button holder plate around the button.

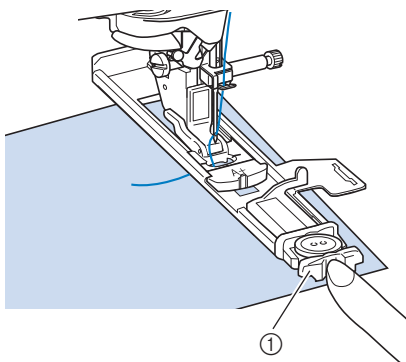


- ① Button holder plate

Memo

- The size of the buttonhole is determined by the size of the button in the button holder plate.


4 Align the presser foot with the mark on the fabric, and lower the presser foot.

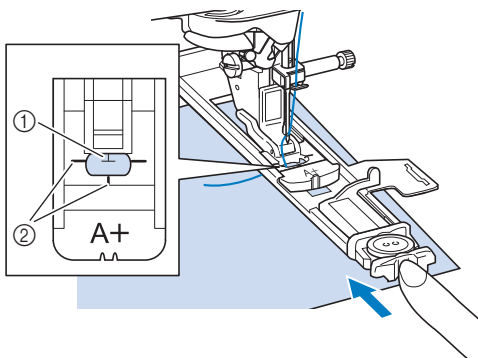

- ① Mark on the fabric
- ② Marks on the presser foot


Note

- Slide the outside frame of the buttonhole foot backward as far as possible as shown in the illustration, making sure that there is no gap behind the part of the foot marked "A+". If the buttonhole foot is not slid back as far as possible, the buttonhole will not be sewn at the correct size.

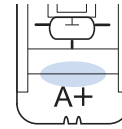

5 Gently hold the end of the upper thread, and then start sewing.

- * Feed the fabric carefully by hand while the buttonhole is sewn.

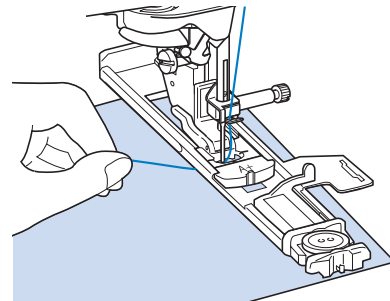


- Once sewing is completed, the machine automatically sews reinforcement stitches, and then stops.

Memo

- If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

- 6** Insert a pin along the inside of one of the bar tacks, and then insert the seam ripper into the center of the buttonhole and cut towards the pin.

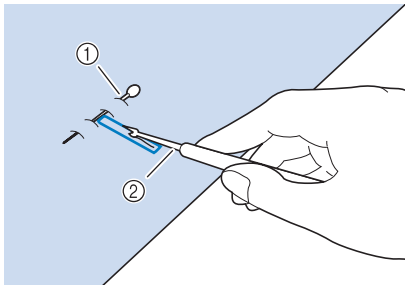


- ① Basting pin
- ② Seam ripper

⚠ CAUTION

- When using the seam ripper to open the buttonhole, do not put your hand or finger in the path of the ripper. The ripper may slip and cause injury. Do not use the seam ripper in any other way than how it is intended.

📖 Memo

- For keyhole buttonholes, use the eyelet punch to make a hole in the rounded end of the buttonhole. Then insert a pin along the inside of one of the bar tacks, insert a seam ripper into the hole made with the eyelet punch, and cut towards the pin.

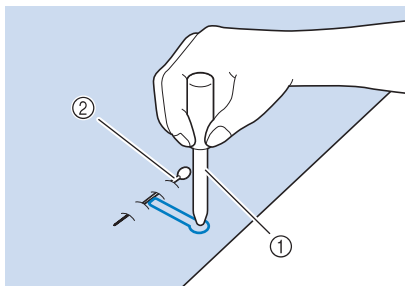

- ① Eyelet punch
- ② Basting pin

■ Sewing Stretch Fabrics




Note

- Attach stabilizer material to the back of stretch fabrics to prevent them from stretching.


When sewing on stretch fabric with  or , sew the buttonhole stitches over a gimp thread.

- 1** Hook the gimp thread onto the back of presser foot “A+”. Insert the ends into the grooves at the front of the presser foot, and then temporarily tie them there.

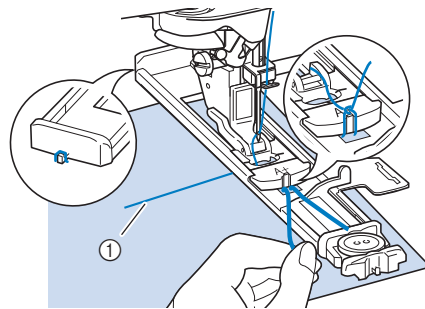

- ① Upper thread


- 2** Lower the presser foot and start sewing.

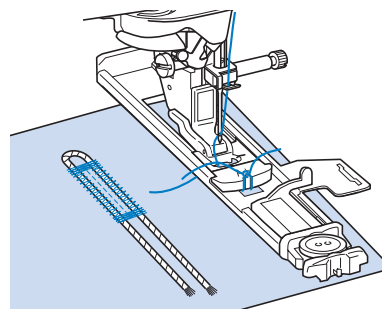

Memo

- Set the width of the satin stitches to the width of the gimp thread, and set the buttonhole width to be 2-3 times the width of the gimp thread.

- 3** Once sewing is completed, gently pull the gimp thread to remove any slack, and trim off any excess.

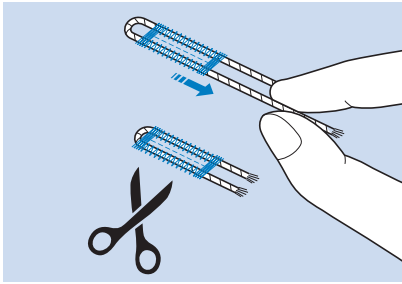


Memo

- After using the seam ripper to cut open the threads over the buttonhole, trim off the threads.

■ Odd Shaped Buttons/Buttons that Do Not Fit into the Button Holder Plate


Use the markings on the presser foot scale to set the size of the buttonhole. One mark on the presser foot scale equals 5 mm (approx. 3/16 inch). Add the button diameter and thickness together, and then set the plate at the calculated value.

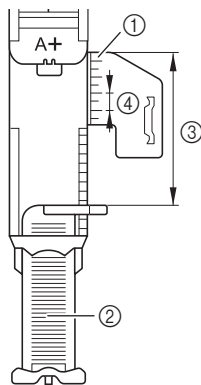

- Presser foot scale
- Button holder plate
- Completed measurement of diameter + thickness
- 5 mm (approx. 3/16 inch)

Memo

- Example) For a button with a diameter of 15 mm (about 9/16 inch) and thickness of 10 mm (about 3/8 inch), align the scale with 25 mm (about 1 inch), or specify 25 mm in the screen.

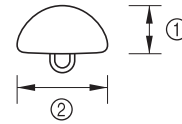


- 10 mm (approx. 3/8 inch)
- 15 mm (approx. 9/16 inch)



■ Sewing Thick Fabrics

Place a piece of folded fabric or cardboard beside the fabric being sewn to level the buttonhole foot and allow for easier and even feeding.

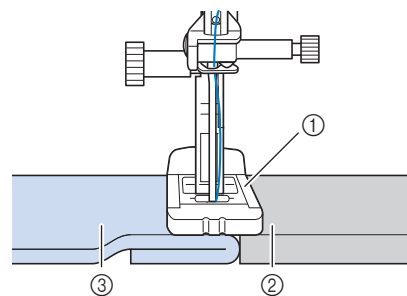


- Presser foot
- Thick paper
- Fabric

Memo

- If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.


■ Sewing Thick Seams or Fabric that Cannot Be Correctly Fed

 Attach the buttonhole stabilizer, and then feed the fabric between the stabilizer and the presser foot.

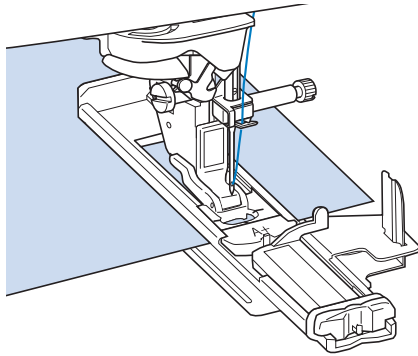









Four-Step Buttonholes

 You can sew 4-step buttonholes using the following 4 stitches together. You can sew any desired length for the buttonhole when using 4-step buttonholes. 4-step buttonholes are a good option when attaching oversize buttons.




Note


- When changing the stitch settings, make sure that all stitch settings are changed to match.

Stitch	Stitch name	Presser foot
	4 steps buttonhole 1	
	4 steps buttonhole 2	
	4 steps buttonhole 3	
	4 steps buttonhole 4	

Four-step buttonholes are sewn as shown below.

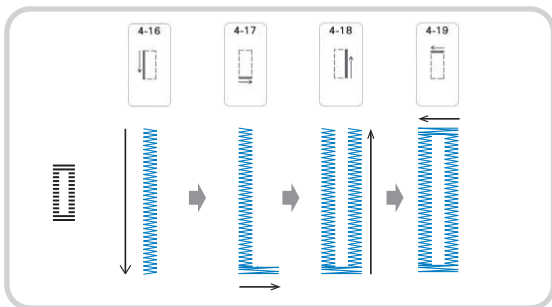


- 1 Mark the position and length of the buttonhole on the fabric.

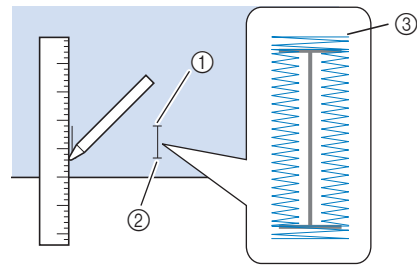


- ① Starting point
- ② End point
- ③ Buttonhole sewing

- 2 Attach monogramming foot “N”, and select

stitch  to sew the left side of the buttonhole.


- 3 Press the “Start/Stop” button to start sewing.


- 4 Sew the desired length for the buttonhole and press the “Start/Stop” button again.

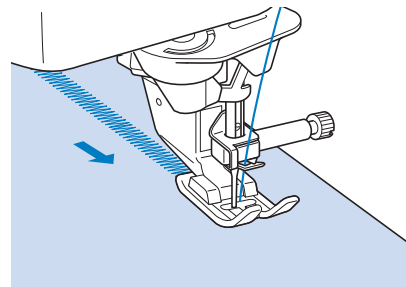

- 5 Select stitch  to sew the bar tack and press the “Start/Stop” button.

→ The machine will automatically stop after sewing the bar tack.

- 6 Select stitch  to sew the right side of the buttonhole, and press the “Start/Stop” button to begin sewing.

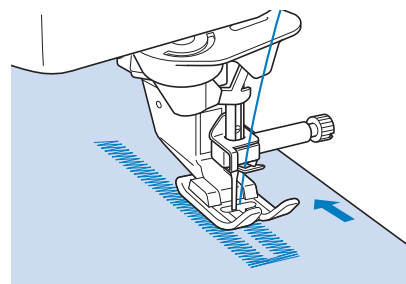

7 Sew the right side of the buttonhole and press the "Start/Stop" button again.

* Sew the right side of the buttonhole the same length as the left.

8 Select stitch to sew the bar tack and then press the "Start/Stop" button.





→ The machine will automatically sew off the bar tack tie and stop when the bar tack is complete.

9 Raise the presser foot and remove the fabric.


10 Refer to page 148 to open the buttonhole.

■ Darning

Use darning stitches for mending and other applications.

Stitch	Stitch name	Presser foot
	Darning	
	Darning	

Darning is performed by sewing from the front of the presser foot to the back as shown below.

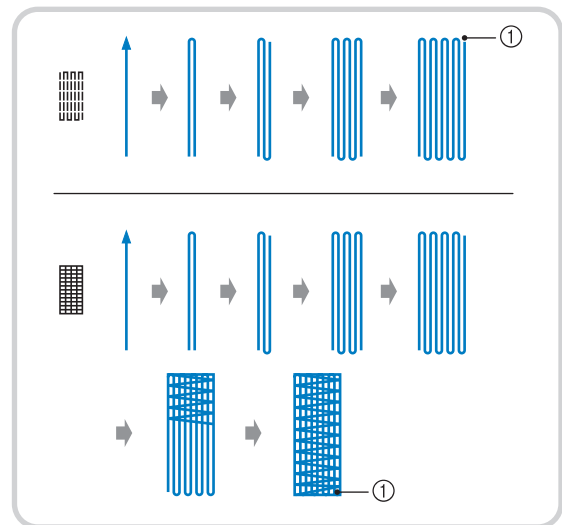


① Reinforcement stitches

1 Select a stitch, and attach buttonhole foot "A+".

Position the upper thread under the presser foot by guiding thread through the hole in the presser foot before attaching the buttonhole foot "A+".

2 Set the scale to the desired length of the darning.

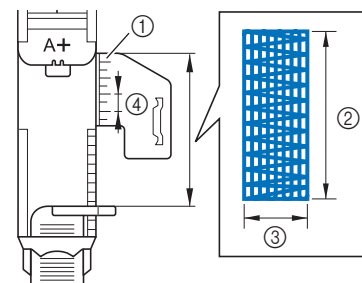


- ① Presser foot scale
- ② Completed length measurement
- ③ Width 7 mm (approx. 1/4 inch)
- ④ 5 mm (approx. 3/16 inch)



Memo


- The maximum length for darning is 5 cm (approx. 2 inches).

- 3 Check that the needle drops at the desired position and lower the presser foot, making sure the upper thread passes underneath the buttonhole foot.

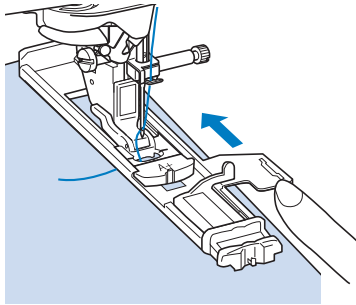


Note

- Pass the thread underneath the presser foot.
- Set the presser foot so that there is no gap behind the section marked with an “A+” (the shaded area in the illustration below). If there is a gap, the size of the darning will not be correct.

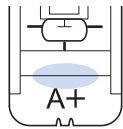

- 4 Gently hold the end of the upper thread, and then press the “Start/Stop” button to start the machine.

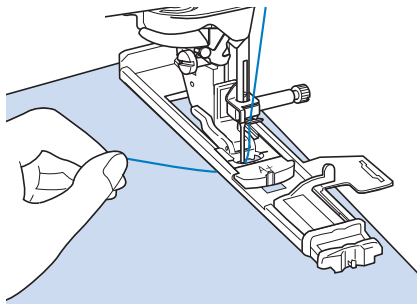

→ Once sewing is completed, the machine automatically sews reinforcement stitches, and then stops.



Memo

- If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

Bar Tacks


Use bar tacks to reinforce areas that will be subject to strain, such as pocket corners.

Stitch	Stitch name	Presser foot
	Bar tack	

- 1 Select

- 2 Attach buttonhole foot “A+” and set the scale to the length of the bar tack you wish to sew.

Position the upper thread under the presser foot by guiding thread through the hole in the presser foot before attaching the buttonhole foot “A+”.

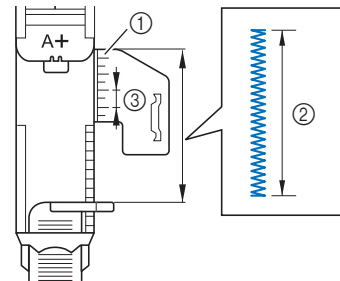


- ① Presser foot scale
- ② Completed length measurement
- ③ 5 mm (approx. 3/16 inch)




Memo

- Bar tacks can be between 10 mm (approx. 3/8 inch) and 50 mm (approx. 2 inches).


- 3** Set the fabric so that the pocket moves toward you during sewing.

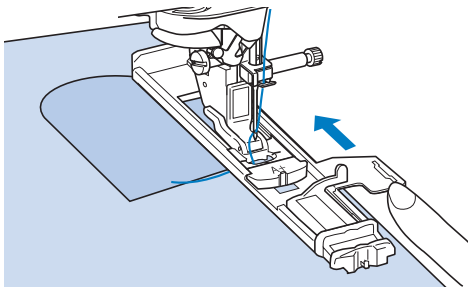**Note**

- Pass the thread underneath the presser foot.
- Slide the outside frame of the buttonhole foot backward as far as possible as shown in the illustration, making sure that there is no gap behind the part of the foot marked "A+". If the buttonhole foot is not slid back as far as possible, the bar tack will not be sewn to the correct size.

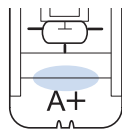


- 4** Check the first needle drop point and lower the presser foot.

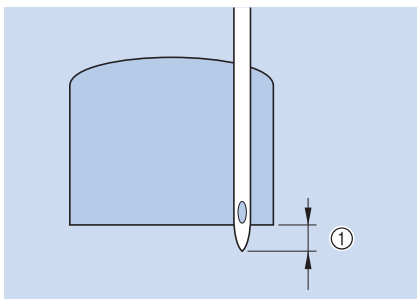

① 2 mm (approx. 1/16 inch)

- 5** Gently hold the end of the upper thread and begin sewing.

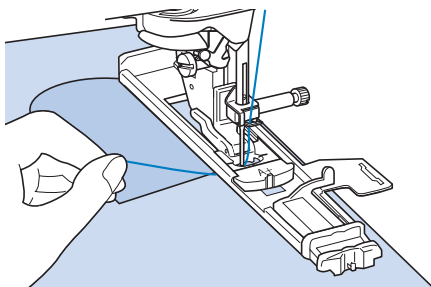

→ When sewing is completed, the machine will sew reinforcement stitches and stop automatically.

Button Sewing

Buttons with 2 or 4 holes can be attached, using the machine.

Stitch	Stitch name	Presser foot
4-23	Button sewing	M

**Note**


- Do not use the automatic thread cutting function when sewing buttons. Otherwise, you will lose the thread ends.

- 1** Select .

→ The feed dogs are lowered automatically.

- 2** Raise the presser foot.

- 3** Attach button sewing foot "M", slide the button along the metal plate and into the presser foot, and lower the presser foot.

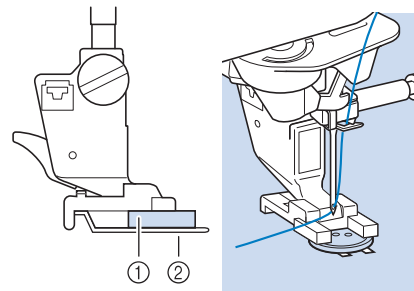

- ① Button
② Metal plate

- 4** Rotate the handwheel toward you (counterclockwise) to check that the needle goes into each hole correctly.

- * If the needle does not reach the holes on the left side, adjust the stitch width.
- * To attach the button more securely, repeat the process.


- 5** Gently hold the end of the upper thread and start sewing.

→ The machine stops automatically when sewing is finished.

⚠ CAUTION

- Make sure the needle does not strike the button during sewing. The needle may break and cause injury.


- 6** From the wrong side of the fabric, pull the end of the bobbin thread to pull the upper thread through to the wrong side of the fabric. Tie the two thread ends together and cut the threads.

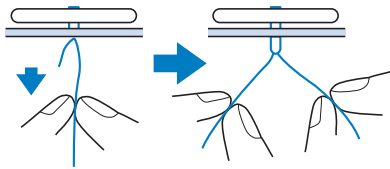

- 7** After the button is attached, select another stitch and rotate the handwheel toward you (counterclockwise) to raise the feed dogs.


■ Attaching 4-Hole Buttons

Sew the two holes closest to you. Then raise the presser foot and move the fabric so that the needle goes into the next two holes, and sew them in the same way.

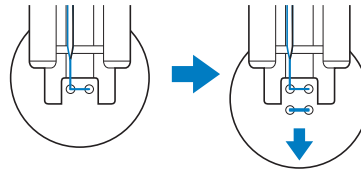


■ Attaching a Shank to the Button

- 1** Pull the shank lever toward you before sewing.

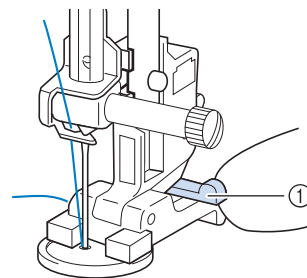

① Shank lever

- 2** After attaching the button, pull the two ends of the upper thread between the button and the fabric, wind them around the shank, and then tie them firmly together.

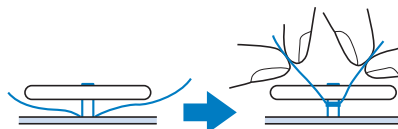

- 3** Tie the ends of the bobbin thread from the beginning and end of sewing together on the wrong side of the fabric.



Note

- When sewing is completed, be sure to select another stitch and rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

4 Cut off any excess thread.


Eyelet

Use this stitch for making belt holes and other similar applications.

Stitch	Stitch name	Presser foot
4-24	Eyelet	
4-25	Star eyelet	

1 Select or .

 
2 Use in either the stitch width display or the stitch length display to choose the size of the eyelet.



- ① Large 7 mm (approx. 9/32 inch)
- ② Medium 6 mm (approx. 15/64 inch)
- ③ Small 5 mm (approx. 13/64 inch)

Note • Only one size is available for .

3 Attach monogramming foot “N”, then rotate the handwheel toward you (counterclockwise) to check the needle drop position.

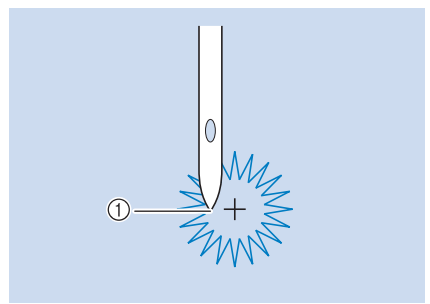


① Needle drop position

4 Lower the presser foot and start sewing.

→ When sewing is finished, the machine sews reinforcement stitches and stops automatically.

Note • If the stitch pattern comes out poorly, make adjustments to “SEWING STITCH PATTERNS” on page 167.


5 Use the eyelet punch to make a hole in the center of the stitching.

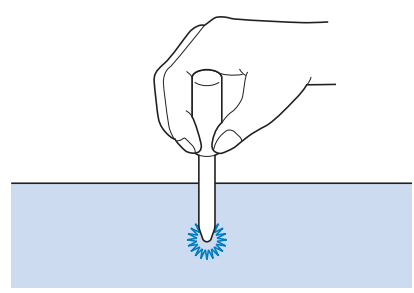


Multi-directional Sewing (Straight Stitch and Zigzag Stitch)

Use these stitch patterns to attach patches or emblems to pant legs, shirt sleeves, etc.

1 Remove the flat bed attachment to use the free-arm.

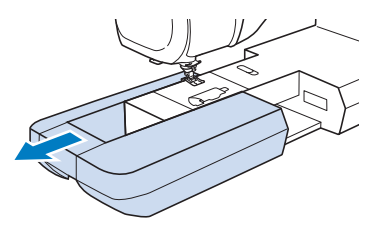

Memo • Insert the tubular piece of fabric onto the free-arm, and then sew in the order shown in the illustration.

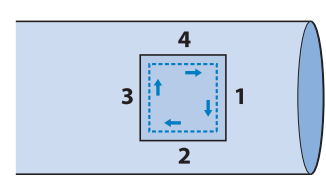


2 Select and attach monogramming foot “N”.

Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.


3 Set the needle in the fabric at the sewing start point, and sew seam “1” as shown.

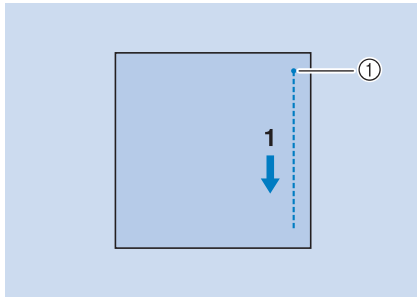


① Start Point

4 Select  and sew seam “2” as shown.

- * The fabric will move sideways, guide the fabric by hand to keep sewing straight.

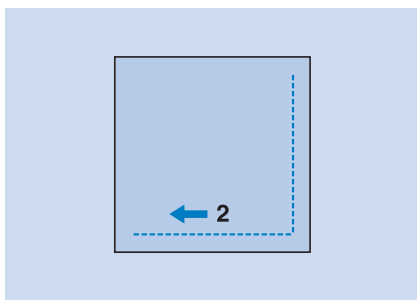


5 Select  and sew seam “3” as shown.

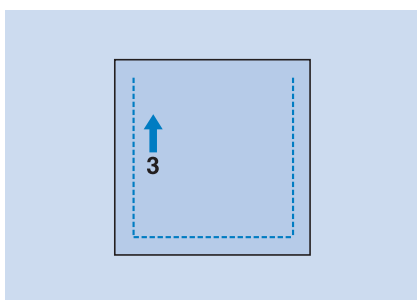

→ The fabric feeds forward while stitching backward.

6 Select  and sew seam “4” as shown.

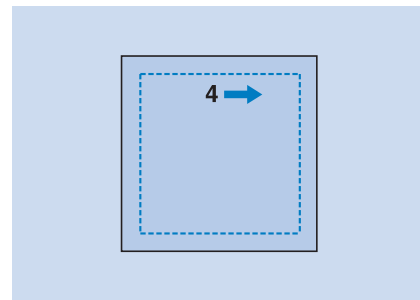

→ The seam will be connected to the starting point of seam 1.

Zipper Insertion

■ Centered Zipper

Use for bags and other such applications.

1 Select .


Memo

- For details on each stitch, refer to “STITCH SETTING CHART” on page 221.

Note


- Make sure you sew using the middle needle position.

2 Attach presser foot “J” and sew straight stitches up to the zipper opening. Change to a basting stitch (page 142) and sew to the top of the fabric.

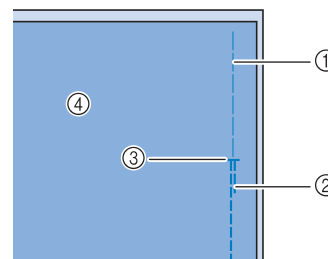


- ① Basting stitches
- ② Reverse stitches
- ③ End of zipper opening
- ④ Wrong side

- 3** Press the seam allowance open and attach the zipper with a basting stitch in the middle of each side of the zipper tape.

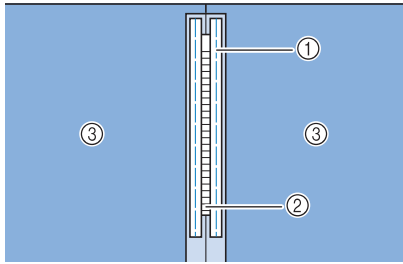

- ① Basting stitches
② Zipper
③ Wrong side

- 4** Remove presser foot "J". Align the right side of the pin in zipper foot "I" with the presser foot holder, and attach the zipper foot.

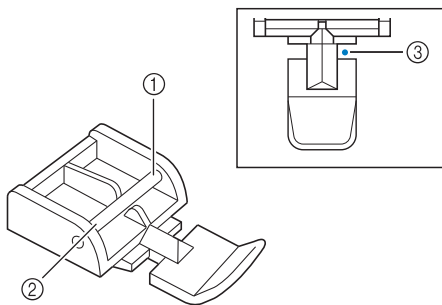


- ① Right
② Left
③ Needle drop position

⚠ CAUTION

- When using zipper foot "I", make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.

- 5** Topstitch 7 to 10 mm (approx. 1/4 to 3/8 inch) from the seamed edge of the fabric, then remove the basting.

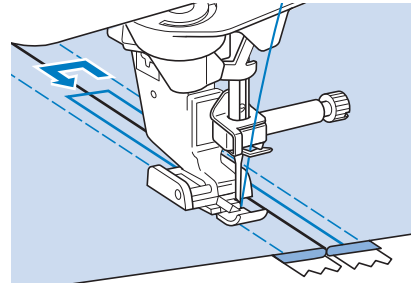

⚠ CAUTION

- Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.

■ Inserting a Side Zipper

Use for side zippers in skirts or dresses.


- 1** Select .



Note


- Make sure you sew using the middle needle position.

- 2** Attach presser foot “J” and sew straight stitches up to the zipper opening. Change to a basting stitch and sew to the top of the fabric.

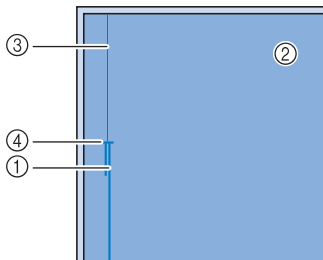

- ① Reverse stitches
- ② Wrong side of fabric
- ③ Basting stitches
- ④ End of zipper opening


- 3** Press the seam allowance open and align the folded hem along the teeth of the zipper, while maintaining 3 mm (approx. 1/8 inch) of sewing space.

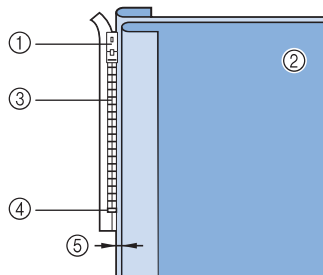

- ① Zipper pull tab
- ② Wrong side of fabric
- ③ Zipper teeth
- ④ End of zipper opening
- ⑤ 3 mm (approx. 1/8 inch)

- 4** Remove presser foot “J”.

- 5** Align the right side of the pin in zipper foot “I” with the presser foot holder, and attach the presser foot.

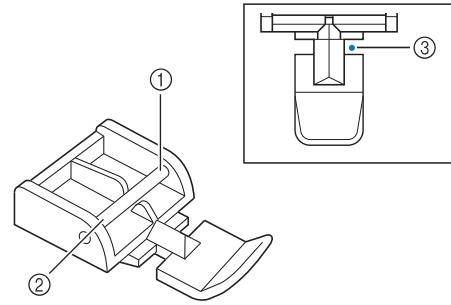

- ① Right
- ② Left
- ③ Needle drop position


⚠ CAUTION

- When using zipper foot “I”, make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.

- 6** Set the presser foot in the 3 mm (approx. 1/8 inch) margin.

- 7** Starting from the end of the zipper opening, sew to a point about 50 mm (approx. 2 inches) from the edge of the fabric, then stop the machine.

- 8** Pull down the zipper slider, then continue sewing to the edge of the fabric.

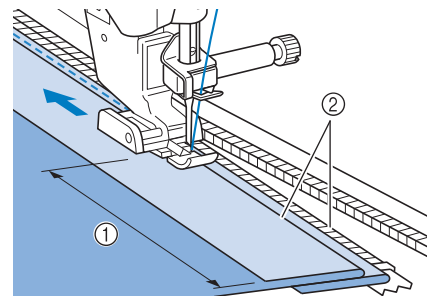


- ① 50 mm (approx. 2 inches)
- ② 3 mm (approx. 1/8 inch)

⚠ CAUTION

- Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.


- 9** Close the zipper, turn the fabric over, and sew a basting stitch.

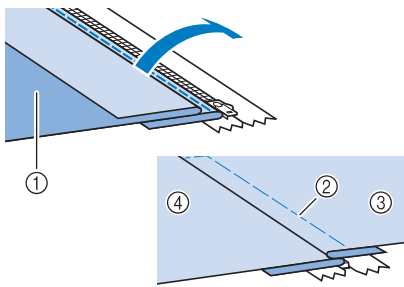

- ① Front of the skirt (wrong side of fabric)
- ② Basting stitches
- ③ Front of the skirt (right side of fabric)
- ④ Back of the skirt (right side of fabric)

- 10** Remove the presser foot, and reattach it so that the left side of the pin is attached to the presser foot holder.

- * When sewing the left side of the zipper, the needle should drop on the right side of the presser foot. When sewing the right side of the zipper, the needle should drop on the left side of the presser foot.

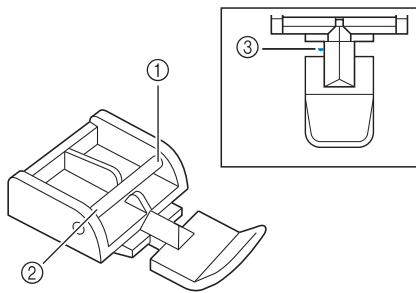


- ① Right
- ② Left
- ③ Needle drop position

- 11** Set the fabric so that the left edge of the presser foot touches the edge of the zipper teeth.

- 12** Sew reverse stitches at the end of the zipper, then continue sewing.

- 13** Stop sewing about 50 mm (approx. 2 inches) from the edge of the fabric, leave the needle in the fabric, and remove the basting stitches.

- 14** Open the zipper and sew the rest of the seam.

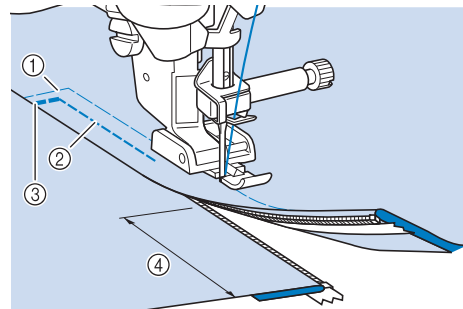


 
- ① Basting stitches
- ② 7 to 10 mm (approx. 1/4 inch to 3/8 inch)
- ③ Reverse stitches
- ④ 50 mm (approx. 2 inches)




Chapter **4**

Character/Decorative Stitches

SELECTING STITCH PATTERNS

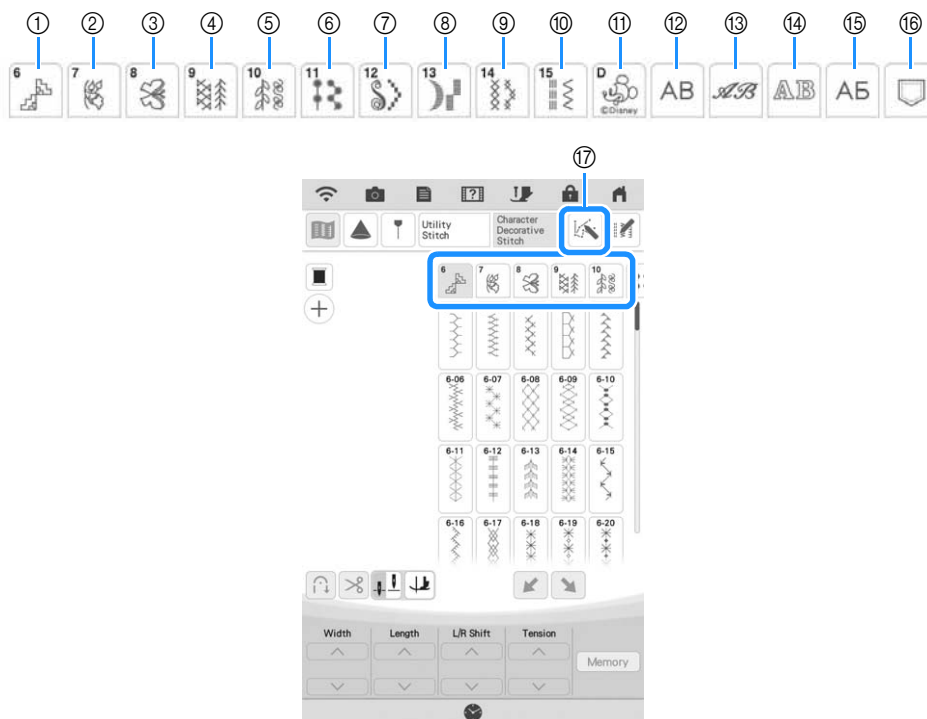

Press , then  to display the screen below.



- ① Wide and Various
- ② Wide Botanical
- ③ Wide Motifs and Messages
- ④ Narrow and Various
- ⑤ Narrow Botanical
- ⑥ Candlewicking
- ⑦ Large Satin
- ⑧ Satin
- ⑨ Cross Stitches
- ⑩ Combinable Utility
- ⑪ Disney
- ⑫ Alphabet Characters (Gothic Font)
- ⑬ Alphabet Characters (Handwriting Font)
- ⑭ Alphabet Characters (Outline)
- ⑮ Cyrillic font
- ⑯ Pocket
- ⑰ Press this key to create your own stitches with the “MY CUSTOM STITCH” function (page 190)



Note

- If the screen is locked () , unlock the screen by pressing  . While the screen is locked, no other key can be operated.

Stitch Selection Screens

There are 15 categories of Character/Decorative stitch patterns.

Wide and Various

Wide Botanical

Wide Motifs and Messages

Narrow and Various

Narrow Botanical

Candlewicking

Large Satin

Satin

Cross Stitches

Combinable Utility

Disney

Alphabet Characters (Gothic Font)

Alphabet Characters (Handwriting Font)


Alphabet Characters (Outline)

Cyrillic Font



Selecting Decorative Stitch Patterns

- 1 Select the category of the stitch pattern you want to sew.
- 2 Press the key of the stitch pattern you want to sew.

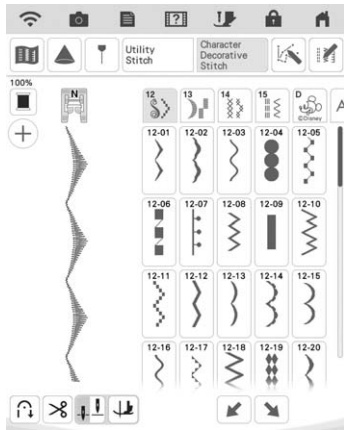


→ The selected stitch pattern is displayed.

Selecting Character Stitch Patterns

Entering characters from the groups shown below, for example “Blue Sky”.

- 1 Press **AB**, **ABC**, **AB** or **AB** to select a font.

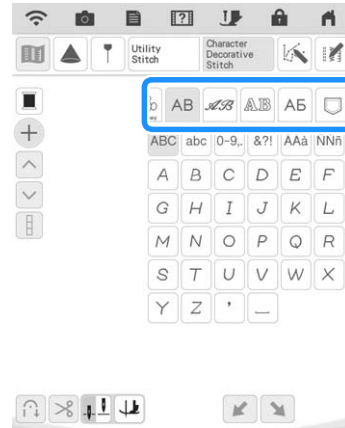


- 2 Press to change the selection screens.



- 3 Press **ABC** and then enter “B”.



- 4 Press **abc** and then enter “lue”.

5 Press **[-]** to enter a space.

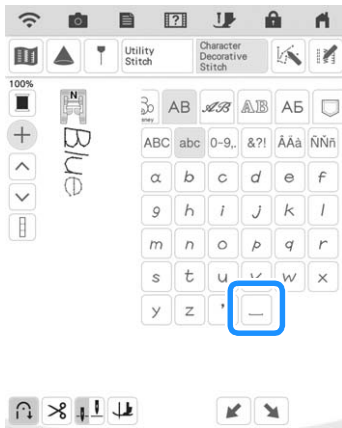

6 Press **[ABC]** again and enter "S".

7 Press **[abc]** and then enter "ky".

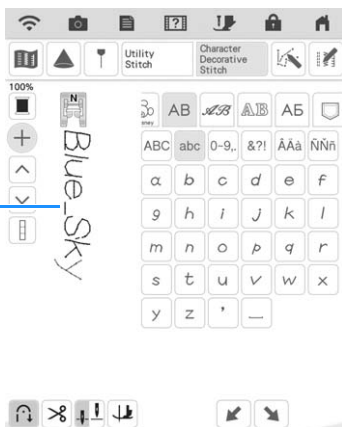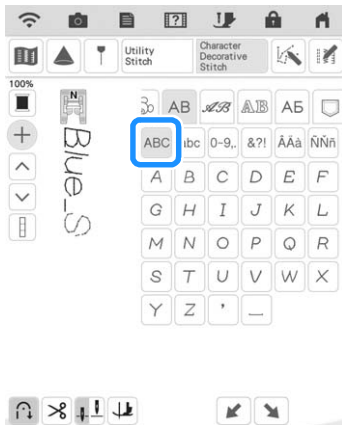

① Jump stitch

- * Remove the jump stitches after sewing.
- * To continue entering characters in a different font, select the other font, and then repeat the procedure from step 1.

■ Deleting Characters

1 Press **[←]**, and then press **[Delete]** to delete the last character.



2 Select the correct character.

■ Adding Characters

1 Press **[+]** so that screen displays **[+]**.

2 Press **[^]** or **[v]** to move the cursor in front of the character where you want to add characters.

3 Select the character you want to add.


■ Adjusting the Character Spacing

The space between the characters can be adjusted.

1 Press **[←]**, and then press **[Spacing]**.



→ The character spacing window appears.

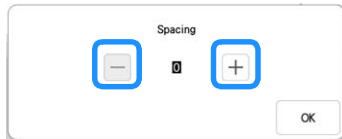2 Press **-** **+** to adjust character spacing.

- * Press **+** to increase the character spacing and press **-** to decrease the character spacing.

Memo

- The default setting is "0". No number less than "0" can be set.
- Changing character spacing by this method, pertains to all characters. Spacing changes are valid not only while entering characters but also before and after the entering of characters.

SEWING STITCH PATTERNS


Sewing Attractive Finishes

To achieve attractive results when sewing character/decorative stitches, check the table below for the proper fabric/needle/thread combinations.




Note

- Other factors, such as fabric thickness, stabilizer material, etc., also have an effect on the stitch, so you should always sew a few trial stitches before beginning your project.
- When sewing satin stitch patterns, there may be shrinking or bunching of stitches, so be sure to attach a stabilizer material.
- Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.

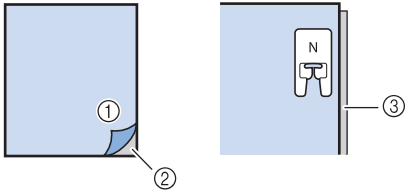
Fabric	When sewing on stretch fabrics, lightweight fabrics, or fabrics with coarse weaves, attach stabilizer on the wrong side of the fabric. If you do not wish to do so, place the fabric on a thin paper such as tracing paper.  ① Fabric ② Stabilizer ③ Thin paper
Thread	#50 - #60
Needle	With lightweight, regular, or stretch fabrics: the Ball point needle (golden colored) With heavyweight fabrics: home sewing machine needle 90/14
Presser foot	Monogramming foot "N". Using another presser foot may give inferior results.

Basic Sewing

- 1 Select a stitch pattern.
- 2 Attach monogramming foot "N".
- 3 Place the fabric under the presser foot, pull the upper thread out to the side, and then lower the presser foot.

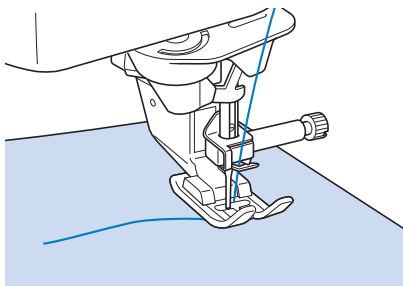

- 4 Press the "Start/Stop" button to start sewing.

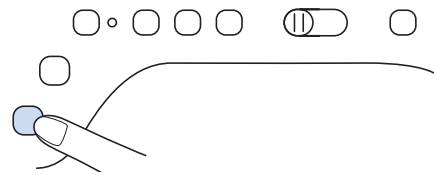

CAUTION


- When sewing 7 mm satin stitch patterns and the stitches are bunched, lengthen the stitch length. If you continue sewing when the stitches are bunched, the needle may bend or break ("Setting the Stitch Length" on page 86).



Memo


- If the fabric is pulled or pushed during sewing, the stitch pattern may not turn out correctly. Also, depending on the stitch pattern, there may be movement to the left and right as well as front and back. Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.

- 5 Press the "Start/Stop" button to stop sewing.
- 6 Keep pressing the "Reverse Stitch" button or the "Reinforcement Stitch" button to sew 4 stitches of reinforcement stitches.

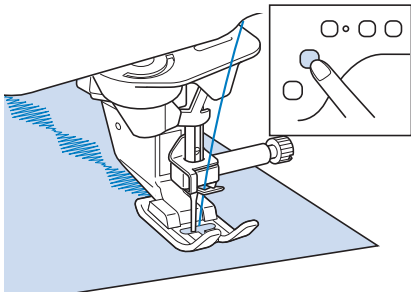


Memo


- When sewing character stitches, the machine automatically sews reinforcement stitches at the beginning and end of each character.

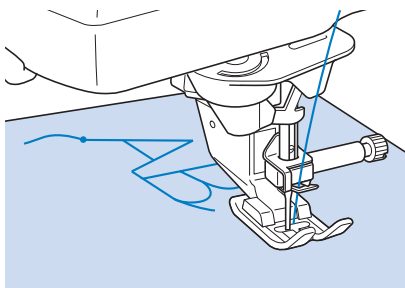

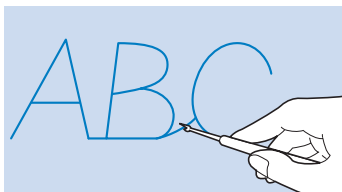


- After sewing is finished, use a seam ripper to trim any excess thread (jump stitches).




Making Adjustments

Your stitch pattern may sometimes turn out poorly, depending on the type or thickness of fabric, the stabilizer material used, sewing speed, etc. If your sewing does not turn out well, sew trial stitches using the same conditions as the real sewing, and adjust the stitch pattern as explained below. If the stitch pattern does not turn out well even after making adjustments based on the  stitch pattern, make adjustments for each stitch pattern individually.


- 1 Press  and select .

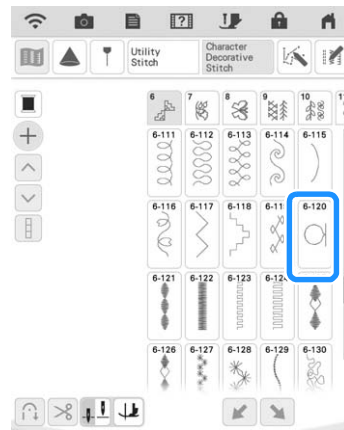


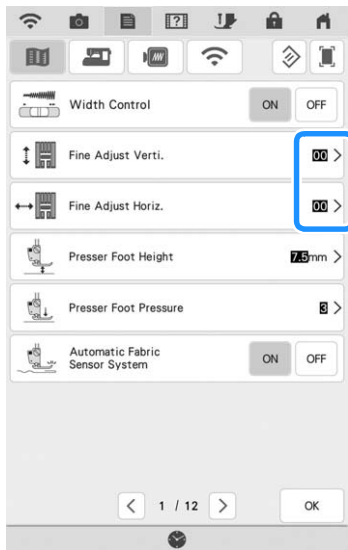
- 2 Attach monogramming foot "N" and sew the stitch pattern.

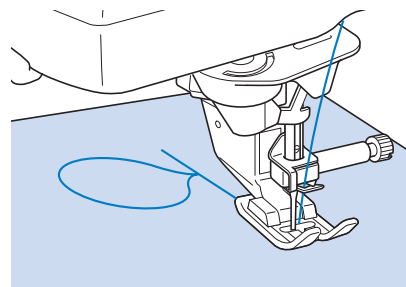


- 3 Compare the finished stitch pattern to the illustration of the correct stitch pattern below.

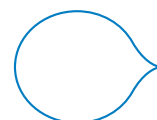


- 4** Press , and then adjust the stitch pattern with the “Fine Adjust Verti.” or “Fine Adjust Horiz.” displays.



 
- * If the stitch pattern is bunched:
Touch to increase the number in the “Fine Adjust Verti.” display.
- The displayed value increases each time the button is pressed and the stitch pattern will lengthen.



 - * If the stitch pattern has gaps:
Touch to decrease the number in the “Fine Adjust Verti.” display.
- The displayed value decreases each time the button is pressed and the stitch pattern will shorten.



 - * If the stitch pattern is skewed to the left:
Touch to increase the number in the “Fine Adjust Horiz.” display.
- The displayed value increases each time the button is pressed and the stitch pattern will slide to the right.



- * If the stitch pattern is skewed to the right:
Touch to decrease the number in the “Fine Adjust Horiz.” display.
- The displayed value decreases each time the button is pressed and the stitch pattern will slide to the left.



- 5** Sew the stitch pattern again.

- * If the stitch pattern still comes out poorly, make adjustments again. Adjust until the stitch pattern comes out correctly.



Memo

- You can sew with the setting screen on the display.

- 6** Press  to return to the original screen.

EDITING STITCH PATTERNS




Key Functions

You can create just the finish you want using the editing functions. Make stitch patterns larger or smaller, make mirror images, etc.







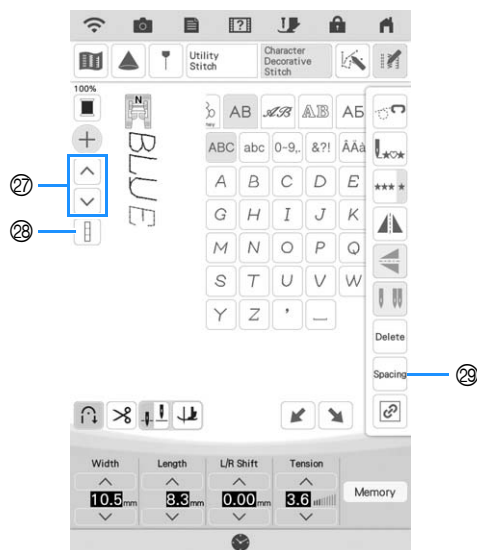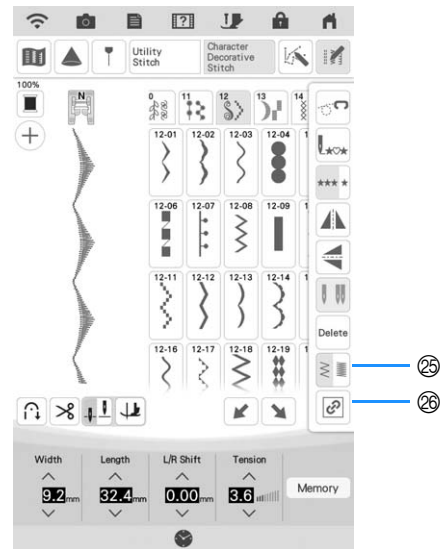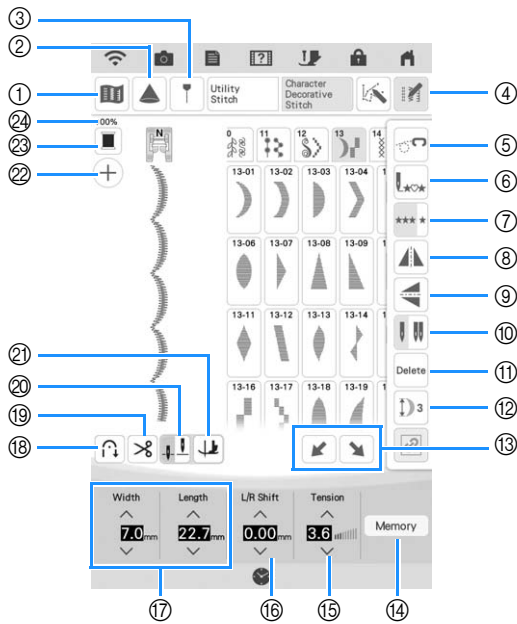



Note

- Some editing functions cannot be used with certain stitch patterns. Only the functions for the displayed keys are available when a stitch pattern is selected.



No.	Display	Key Name	Explanation	Page
①		Image key	Press this key to display an enlarged image of the selected stitch pattern.	175
②		Projector key	Press this key to use projector functions.	99
③		Guideline marker key	Press this key to display or set the guideline marker for the sewing line. The guideline marker makes quilt piecing or aligning stitching on the fabric edge easier.	101
④		Stitch pattern editing key	Press this key to display editing function keys on the screen.	105
⑤		Free motion mode key	Press this key to enter free motion sewing mode. The feed dog is lowered and presser foot is raised to a height appropriate for free motion quilting.	128
⑥		Back to beginning key	When sewing is stopped, press this key to return to the beginning of the stitch pattern.	174
⑦		Single/Repeat sewing key	Press this key to choose single stitches or continuous stitches.	173
⑧		Horizontal mirror image key	After selecting the stitch pattern, use this key to create a horizontal mirror image of the stitch pattern.	173
⑨		Vertical mirror image key	After selecting the stitch pattern, use this key to create a vertical mirror image of the stitch pattern.	173
⑩		Needle mode selection key (single/double)	Press this key to select twin needle sewing mode. The sewing mode changes between single needle mode and twin needle mode each time you press the key. If the key display is light gray, the selected stitch pattern cannot be sewn in the twin needle mode.	64
⑪		Delete key	When you make a mistake selecting a stitch pattern, use this key to delete the mistake. When you make a mistake in combining stitch patterns, use this key to delete stitch patterns.	165
⑫		Elongation key	When 7mm satin stitch patterns are selected, press this key to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.	173
⑬		Step effect key	Press this key to make step stitch patterns.	179
⑭		Memory key	Use this key to save stitch pattern combinations.	183
⑮		Thread tension key	Shows the automatic thread tension setting of the currently selected stitch pattern. You can use and to change the thread tension settings.	87
⑯		“L/R Shift” key	Press to shift the stitch pattern to the right or press to shift the stitch pattern to the left. This feature is not available on all stitch patterns. Only those applicable will be shifted. The machine default setting is highlighted.	86
⑰		Stitch width and stitch length key	Shows the stitch width and stitch pattern length of the selected stitch pattern. The machine default settings are highlighted.	85, 86
⑱		Automatic reinforcement stitch key	Press this key to use the automatic reinforcement stitching (reverse stitching) setting. If you select this setting before sewing, the machine will automatically sew reinforcement stitches at the beginning and end of sewing (depending on the stitch pattern, the machine may sew reverse stitches).	79
⑲		Automatic thread cutting key	Press this key to set the automatic thread cutting function. Set the automatic thread cutting function before sewing to have the machine automatically sew reinforcement stitches at the beginning and end of sewing (depending on the stitch pattern, the machine may sew reverse stitches) and trim the threads after sewing.	88
⑳		Needle position setting key	Press this key to select the needle stop position to be up or down. You can also check the needle mode setting (single or twin). Single needle/down position Single needle/up position Twin needle/down position Twin needle/up position	64, 89
㉑		Pivot key	Press this key to select the pivot function. When the pivot function is selected, stopping the machine lowers the needle and slightly raises the presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	89

No.	Display	Key Name	Explanation	Page
22		Add stitch pattern key	Press this key to add a new stitch pattern.	165
23		Thread color change key	Press this key to change the thread color displayed on the screen.	175
24		Stitch pattern display size	Show the approximate size of the stitch pattern selected. 100% : Nearly the same size as the sewn stitch pattern 50% : 1/2 the size of the sewn stitch pattern 25% : 1/4 the size of the sewn stitch pattern * The actual size of the sewn stitch pattern may differ depending on the type of fabric and thread that is used.	107
25		Thread density key	After selecting the stitch pattern, use this key to change the thread density of the stitch pattern.	174
26		Maintain aspect ratio key	Press this key to maintain the aspect ratio when enlarging or reducing the stitch pattern.	173
27		Stitch pattern selection key	Press this key to enter or edit the stitch pattern immediately after the selected stitch pattern.	165
28		Select all on/off key	Press this key to switch between selecting only the last stitch pattern entered or all combined stitch patterns.	173
29		Character spacing key	Press this key to change the spacing of character stitch patterns.	165

Changing the Size

Select a stitch pattern, then press or to change the size of the stitch pattern.




Memo

- When the select all on/off key appears as , the size of all stitch patterns can be changed.
- When the maintain aspect ratio key appears as , the stitch pattern size can be changed while maintaining the aspect ratio.


Stitch Pattern Size

* The size differs depending on the fabric and threads.

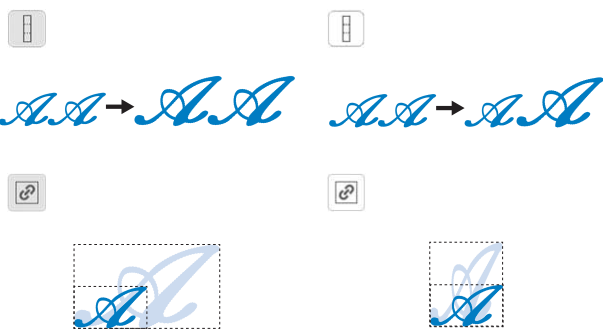

Changing the Length (for 7mm Satin Stitch Patterns Only)

When 7mm satin stitch patterns are selected, press , and then press to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.

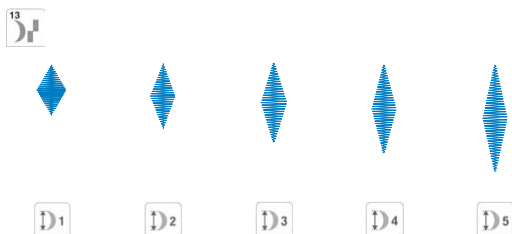

Creating a Vertical Mirror Image

To create a vertical mirror image, select a stitch pattern, press , and then press .




Creating a Horizontal Mirror Image

To create a horizontal mirror image, select a stitch pattern, press , and then press .



Sewing a Stitch Pattern Continuously

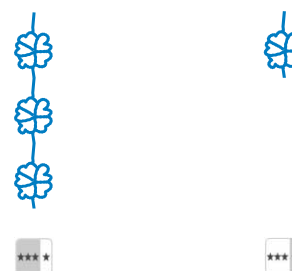

Press , and then press to select continuous sewing or single stitch sewing.




Memo



- To finish a complete motif while sewing the stitch pattern continuously, you can press the key while sewing. The machine will automatically stop when the motif is finished.

Changing Thread Density (for Large Satin Only)

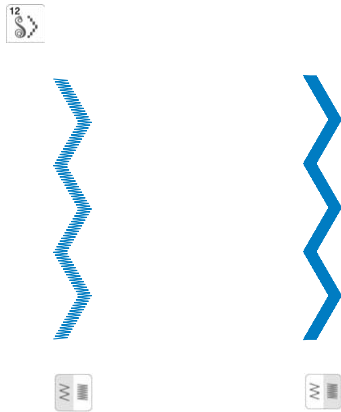After selecting a satin stitch pattern, press , and then press  to select your preferred thread density.




CAUTION

- If the stitches bunch when thread density is changed to , return the thread density to . If you continue sewing when the stitches are bunched, the needle may bend or break.




Memo

- When the select all on/off key appears as , the thread density of all stitch patterns can be changed.

Returning to the Beginning of the Stitch Pattern

When sewing character/decorative stitches, you can return to the beginning of the stitch pattern after trial sewing or when the stitching is sewn incorrectly.

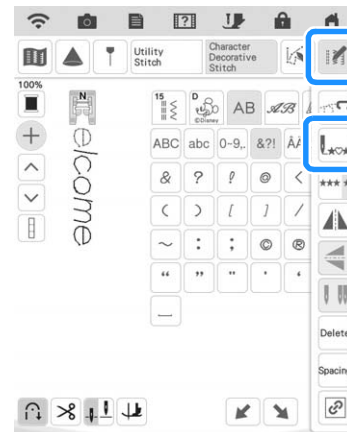

- 1 Press the “Start/Stop” button to stop the machine, press , and then press .




→ Sewing returns to the beginning of the selected stitch pattern (“W”) from the point where sewing was stopped.



Memo

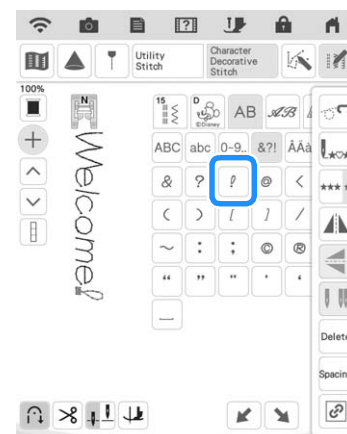

- If this key is pressed while sewing is stopped, stitch patterns can be added at the end of a combined stitch pattern. (In this example, “!” is added.) Press  or  to add the stitch pattern at the desired location.



- 2 Press the “Start/Stop” button to continue sewing.




Checking the Image

You can display an approximate size image of the selected stitch pattern. You can also check and change the colors of the image on the screen.

- 1 Press .
 - An image of the selected stitch pattern is displayed.
- 2 Press  to change the thread color in the image to red, blue, black or yellow.



→ The color changes every time you press the button.

- 3 Press   to display the enlarged image.
- 4 Press arrow keys to view any part of the image that extends out of the viewable display area.
- 5 Press  to return to the original screen.

COMBINING STITCH PATTERNS

You can combine many varieties of stitch patterns, such as character stitches, cross stitches, satin stitches, or stitches you design with MY CUSTOM STITCH function (see chapter 5 for information about MY CUSTOM STITCH). You can also combine stitch patterns of different sizes, mirror image stitch patterns, and others.

Before Combining


Single stitch sewing is automatically selected for sewing combined stitch patterns. If you want to sew the stitch pattern continuously, press ******* after finishing the stitch pattern combination.

Combining Various Stitch Patterns

Example:



1 Press .

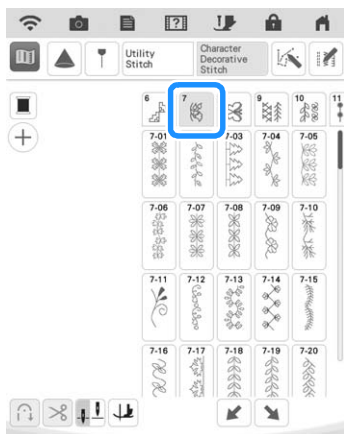


2 Select .




3 Press .

4 Press .

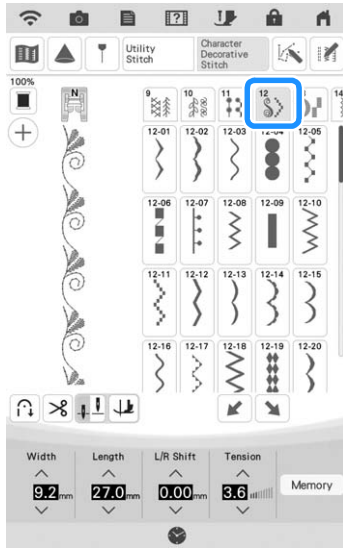


5 Select .

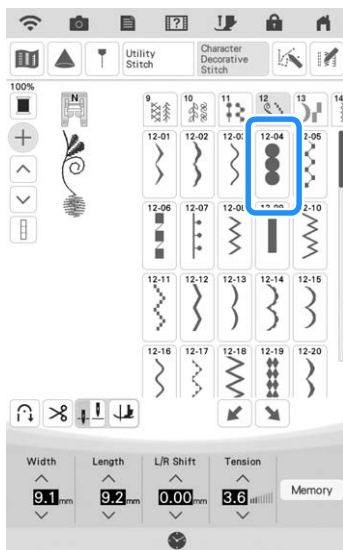

6 Press , then press  so that it displays  to sew the stitch pattern continuously.



Memo

- Stitch patterns are deleted individually starting with the last stitch pattern entered by pressing .



Combining Large and Small Stitch Patterns




Example:




1 Press .

→ The large size stitch will be selected.

2 Press  so that it displays .

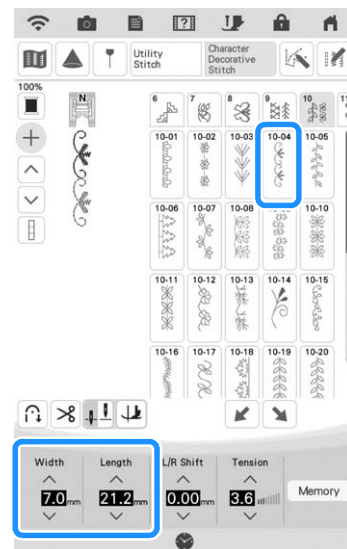


3 Press  again, and then press  or  in the width or length settings to change the size.






→ The size of the stitch pattern changes.



Memo

- To change the size of the stitch pattern while maintaining the aspect ratio, press the maintain aspect ratio key (). This setting is available for the stitch patterns in  and  or alphabet characters.

- 4 Press , and then press  so that it displays  to sew the stitch pattern continuously.



→ The entered stitch pattern is repeated.

Combining Horizontal Mirror Image Stitch Patterns

Example:





- 1 Press  .
- 2 Press  .

- 3 Press  again, press , and then press  .



→ The stitch pattern is flipped along a vertical axis.

- 4 Press  so that it displays  to sew the stitch pattern continuously.




→ The entered stitch pattern is repeated.

Combining Stitch Patterns of Different Length




Example:





1 Press , press , then press  once.

→ The length of the image is set to .


2 Press .

3 Select  again, press , and then press  3 times.

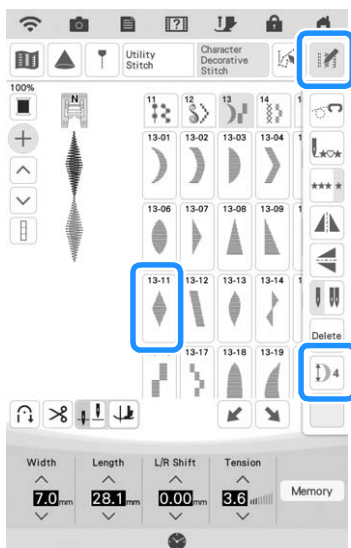

→ The length of the image is set to .

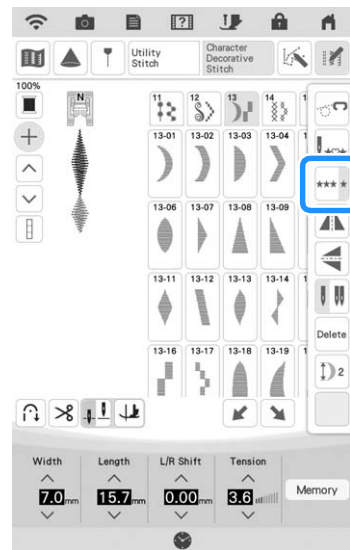

4 Press .




→ The entered stitch pattern is repeated.

Making Step Stitch Patterns

You can use the   keys to create a step effect, also called step stitch patterns.

- * Press  to move the stitch pattern a distance equal to half of the stitch pattern's size to the left.
- * Press  to move the stitch pattern a distance equal to half of the stitch pattern's size to the right.

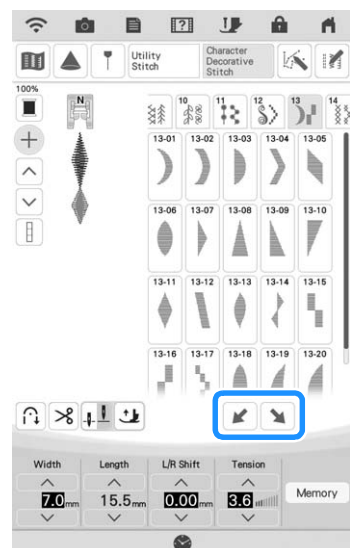

Example:




1 Press  .

2 Press  .



→ The next stitch pattern will move to the right.

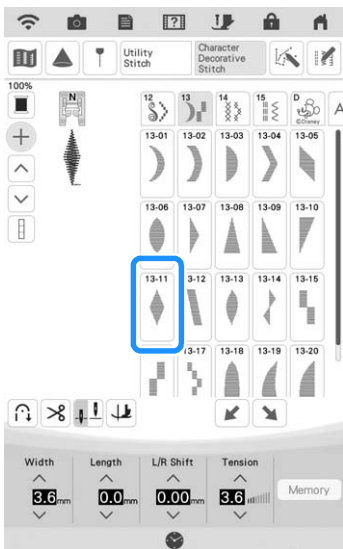

3 Press  again.




4 Press  .





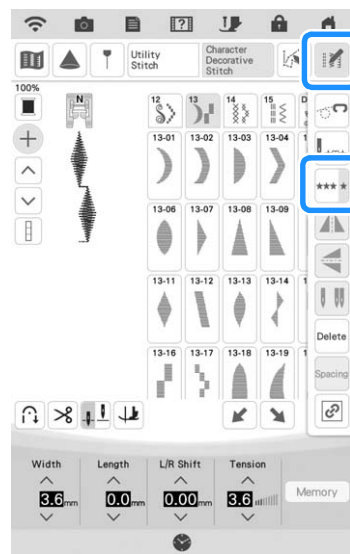


→ The next stitch pattern will move to the left.

5 Press , and then press  .





 → The entered stitch pattern is repeated.

More Examples

Press  →  →  →  →  .



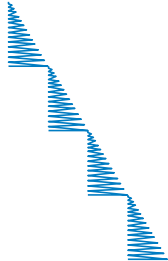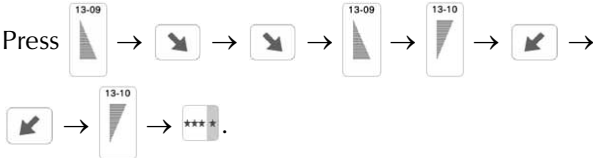

4

USING THE MEMORY FUNCTION

Stitch Data Precautions

Observe the following precautions when using stitch data other than that created and saved in this machine.

■ Types of Stitch Data that Can Be Used

- In the Character/Decorative Stitch memory, “.pmv”, “.pmx”, “.pmu” and “.pmp” stitch data files can be used with this machine. When the machine is used to save a file with any extension, it is saved as a “.pmp” data file.
- Using data other than that created using this machine or the machine which create “.pmu” data file, may cause the machine to malfunction.

■ Types of USB Devices/Media that Can Be Used

Stitch data can be saved to or recalled from USB external media. Use external media that meets the following specifications.

- USB Flash drive (USB Flash memory)

Stitch data can be recalled only from;

- USB CD-ROM, CD-R, CD-RW drives

You can also use the following types of USB media with the USB Memory Card Reader/USB card writer module.

- Secure Digital (SD) Card
- CompactFlash
- Memory Stick
- Smart Media
- Multi Media Card (MMC)
- xD-Picture Card



Note

- Some USB media may not be usable with this machine. Please visit our website for more details.
- The access lamp will begin blinking after inserting USB devices/media, and it will take about 5 to 6 seconds to recognize the devices/media. (Time will differ depending on the USB device/media).

- To create file folders, use a computer.

■ Precautions on Using the Computer to Create and Save Data

- If the name of the stitch data file/folder cannot be identified, for example, because the name contains special characters, the file/folder is not displayed. If this occurs, change the name of the file/folder. We recommend using the 26 letters of the alphabet (uppercase and lowercase), the numbers 0 through 9, “-”, and “_”.
- Stitch data in a folder created in USB media can be retrieved.

Saving Stitch Patterns in the Machine's Memory

You can save often-used stitch patterns in the machine's memory. A total of about 1 MB of stitch patterns can be saved in the machine's memory.



Note

- Do not turn the main power to OFF while the "Saving..." screen is displayed. You will lose the stitch pattern you are saving.



Memo

- It takes a few seconds to save a stitch pattern.
- Refer to page 184 for information on retrieving a saved stitch pattern.

1 Press **Memory**.



2 Press **Save**.

- Press **Cancel** to return to the original screen without saving.




→ The "Saving..." screen is displayed. When the stitch pattern is saved, the display returns to the original screen automatically.

If the Memory Is Full

If the following screen appears while you are trying to save a stitch pattern, the memory is too full to hold the currently selected stitch pattern. To save the stitch pattern in the machine's memory, you have to delete a previously saved stitch pattern.

Press **OK**, and then refer to "Retrieving Stitch Patterns from the Machine's Memory" on page 184.

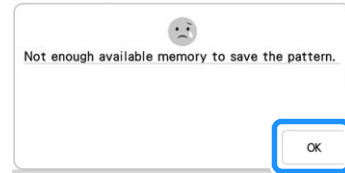

Saving Stitch Patterns to USB Media

When sending stitch patterns from the machine to USB media, plug the USB media into the machine's USB port.




Memo

- USB media is commercially available, but some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.
- The USB media can be inserted or removed at any time.

1 Press **Memory**.



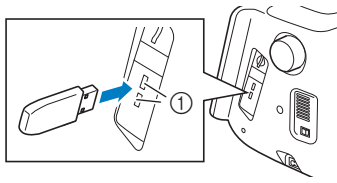

2 Insert the USB media into the USB port on the machine.



① USB port

3 Press .

- * Press  when connecting the USB media to the USB port for mouse.
- * Press  to return to the original screen without saving.



→ The “Saving...” screen is displayed. When the stitch pattern is saved, the display returns to the original screen automatically.



Note

- Do not insert or remove USB media while “Saving...” screen is displayed. You will lose some or all of the stitch pattern you are saving.

Retrieving Stitch Patterns from the Machine’s Memory


1 Press .



→ The pocket selection screen appears.

2 Choose a stitch pattern to retrieve.

- * If the entire saved stitch pattern is not displayed, press the thumbnail.

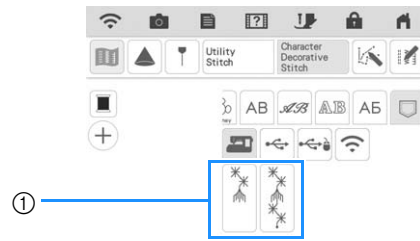


① Saved stitch patterns

→ The selected stitch pattern is retrieved and the sewing screen will be displayed.

Recalling from USB Media


You can recall a specific stitch pattern from either direct USB media or a folder in the USB media. If the stitch pattern is in a folder, check each folder to find the stitch pattern.


- 1 Insert the USB media into the USB port on the machine. (page 183)

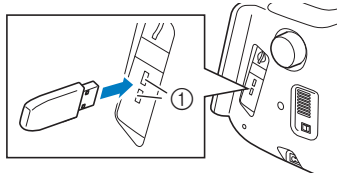


① USB port


- 2 Press .



* Press  when connecting the USB media to the USB port for mouse.

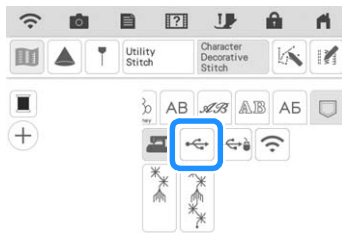

→ Stitch patterns and a folder in a top folder are displayed.

- 3 Press  when there is a subfolder to sort two or more stitch patterns to USB media, the stitch pattern in the subfolder is displayed.

* Press  to return to the original screen without recalling.

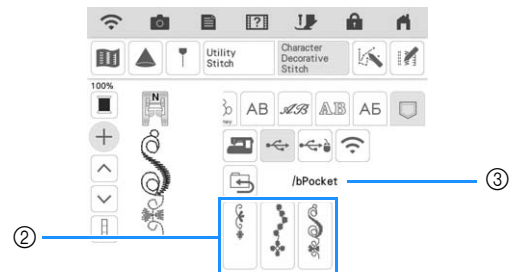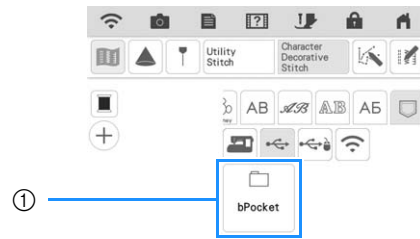


- ① Folder name
- ② Stitch patterns in a folder show only the first stitch pattern of any combined stitch patterns.

- ③ Path

→ The path shows the current folder at the top of the list.

Stitch patterns and a subfolder within a folder are displayed.

- * Press  to return to the previous folder.
- * Use the computer to create folders. Folders cannot be created with the machine.

4 Press the key of the stitch pattern you want to recall.



→ The selected stitch pattern is recalled and the sewing screen will be displayed.

Managing Saved File

You can delete the saved file or save to machine's memory from USB media.



 

1 In the retrieving screen from USB, press

, and touch the stitch pattern you want to manage.



2 Choose the command.



	Press to select all displayed stitch patterns.
	Press to deselect all selected stitch patterns.
	Press to delete the selected stitch patterns.
	Press to save the selected stitch patterns in the machine's memory.

Transferring Stitch Patterns to the Machine (PE-DESIGN to this machine)

For detailed procedures, refer to PE-DESIGN manual (Version 11 or higher).

1 In the stitch pattern selection screen, press

, and then press .



→ The stitch patterns transferred from the application appear.



Chapter **5**

MY CUSTOM STITCH


DESIGNING A STITCH

By using the MY CUSTOM STITCH function, you can register stitches you have created yourself. You can also sew designs combining MY CUSTOM STITCH creations with built-in characters (page 176).

Memo


- Stitches that you create with MY CUSTOM STITCH can be a maximum of 7 mm (approx. 9/32 inch) wide and 37 mm (approx. 1-1/3 inches) long.
- Stitches can be designed more easily with MY CUSTOM STITCH if you first draw the stitch on the included grid sheet.

1 Draw the stitch design on the grid sheet (part code SA507, GS3:X81277-151).

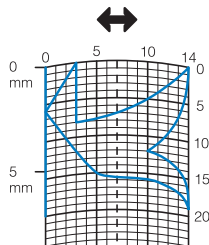

Memo

- Simplify the design so that it can be sewn as a continuous line. For a more attractive stitch, close the design by intersecting lines.


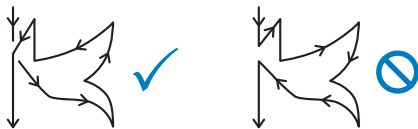


If the design is to be repeated and linked, the start point and end point of the design should be at the same height.




2 Decide the spacing of the stitch.


- * By adjusting the spacing of a stitch, you can create various stitch patterns with one stitch.

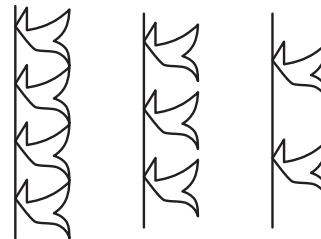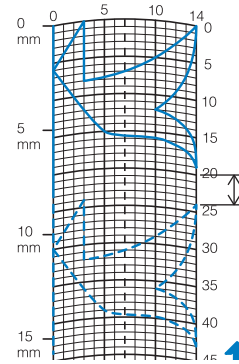

3 Place points where the stitch pattern intersects with the grid, and connect all the points with a line.

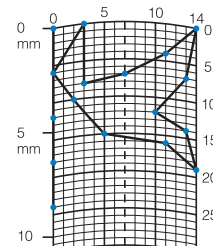



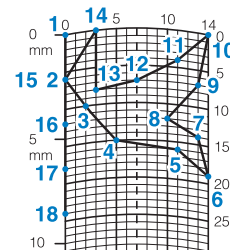




4 Determine the x and y coordinates of each of the marked points.

















Memo



- This will determine the stitch design that will be sewn.

Examples of Custom Stitches

	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		0	12	18	22	23	21	17	14	12	9	6	3	1	3	6
		0	0	3	6	10	13	14	13	11	13	14	13	10	6	3
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
		12	41	43	40	41	38	35	32	30	32	35	41	45	47	44
		0	0	4	7	11	13	14	13	10	6	3	0	0	4	7
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
		45	47	50	54	56	55	51	45	70						
	11	13	14	13	10	6	3	0	0							


	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		0	30	32	32	32	33	35	35	37	35	32	30	30	29	26
		0	0	1	7	10	12	11	8	12	14	14	11	5	3	8
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
		24	18	13	12	13	10	12	8	12	7	12	6	10	5	10
		10	13	14	14	12	11	10	9	8	6	6	3	2	0	2
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
		16	19	23	22	17	22	23	19	42						
	1	0	0	6	10	6	0	0	0							



	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		0	3	5	8	12	17	20	24	27	29	31	32	30	27	24
		0	5	8	11	13	14	14	13	12	11	9	6	3	1	0
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
		21	18	16	15	15	16	18	21	25	28	33	37	41	43	44
		0	1	3	5	8	10	12	13	14	14	13	11	8	5	0
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
																
																





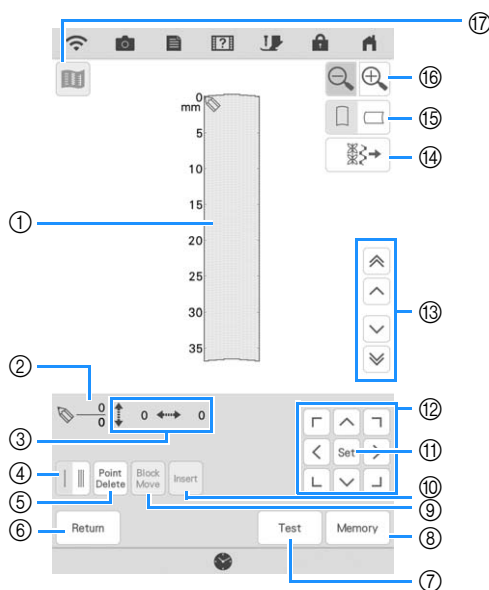











	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		0	5	4	5	8	7	8	11	11	11	16	11	7	4	0
		7	7	3	7	7	0	7	7	3	7	7	3	0	3	7
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
		4	7	11	16	21	20	21	24	23	24	27	27	27	32	27
		11	14	11	7	7	11	7	7	14	7	7	11	7	7	11
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
		23	20	16	20	23	27	32								
	14	11	7	3	0	3	7									

ENTERING STITCH DATA

Key Functions




- ① This area displays the stitch being created.
- ② Displays the number of the present set point over the total number of points in the stitch.
- ③ Displays the y-coordinate of  over the x-coordinate of .



No.	Display	Key Name	Explanation	Page
④		Single/triple stitching key	Press this key to select whether one or three stitches will be sewn between two points.	191
⑤		Point delete key	Press this key to delete a selected point.	191
⑥		Return key	Press this key to exit the entering stitch data screen.	—
⑦		Test key	Press this key to sew a test of the stitch.	191, 196
⑧		MY CUSTOM STITCH memory key	Press this key to store the stitch being created.	196
⑨		Block move key	Press this key to group points together and move them together.	193
⑩		Insert key	Press this key to insert new points on the stitch design.	194
⑪		Set key	Press this key to set a point on the stitch design.	191-193
⑫		Arrow keys	Use these keys to move  over the display area.	191-194
⑬		Point-to-point key	Use these keys to move  from point to point on the stitch, or to the first or last point entered on the stitch.	192-194
⑭		Stitch edit key	Press this key to edit the utility stitches in the machine.	194
⑮		Grid direction key	Press this key to change the direction of the grid sheet.	191
⑯		Enlarger key	Press this key to see an enlarged version of the stitch being created.	191
⑰		Image key	Press this key to view an image of the stitch.	191


1 Press  and then .

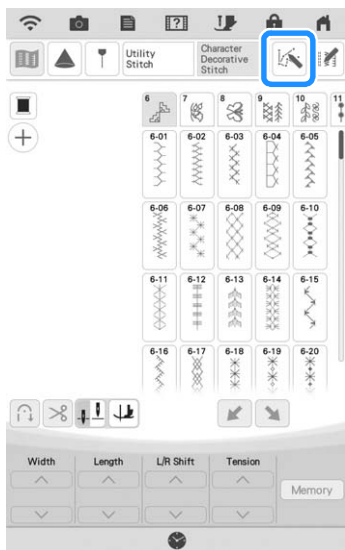
2 Press .



3 Use  to move  to the coordinates of the first point on the grid.


- * Press  to change the direction of the grid.
- * Press  to enlarge the image of the stitch being created.

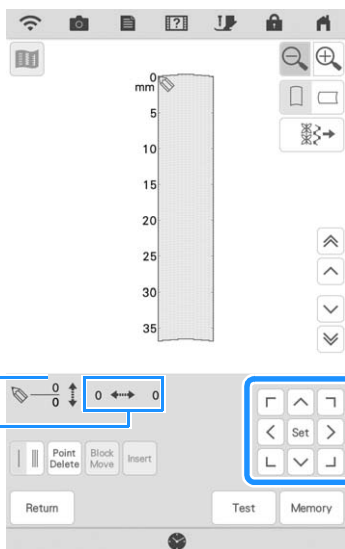


- ① Currently selected point/Total number of points
- ② Coordinates of 

4 Press  to add the point indicated by .


- * To insert coordinates with the dual purpose stylus, move the tip of the pen to a desired point. Once you release the pen from the screen a point will be entered into the graph at those coordinates. The number of the currently selected points along with the total number of points will be displayed.

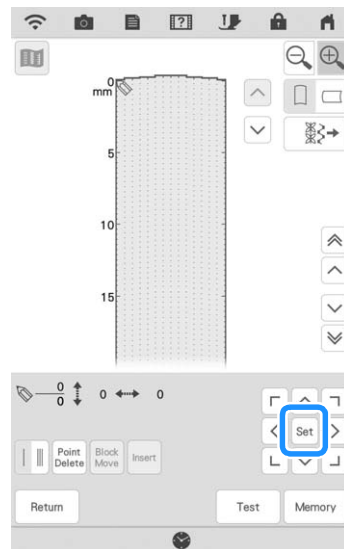


5 Select whether one stitch or three stitches will be sewn between the first two points.


- * To sew three stitches, press the key so that it appears as .


6 Use  to move  to the second point and press .

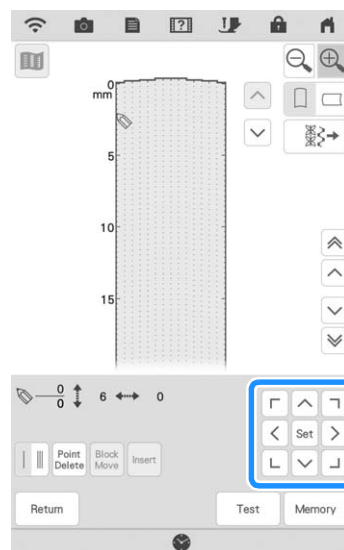

7 Repeat the steps above for each point that you have drawn on the grid sheet until the stitch design is drawn on the screen as a continuous line.


- * Press  to delete a selected point entered.

- * Press **Test** to sew a test-run of the stitch.
- * Press **Return** to return to the original screen.
- * Press  to view an image of the stitch.

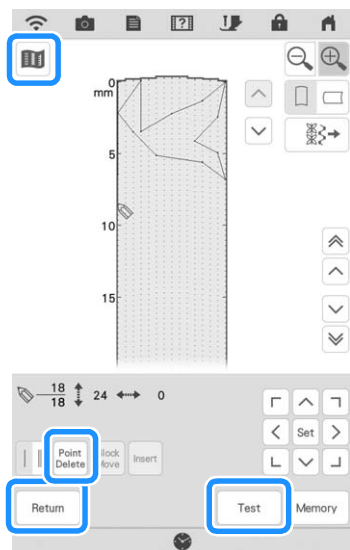

 **Memo**

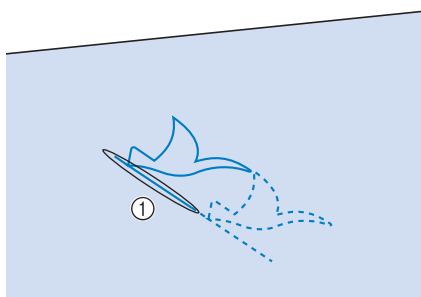

- If you have entered points that are too close together, the fabric may not feed properly. Edit the stitch data to leave a larger space between points.
- If the stitch design is to be repeated and linked, make sure that linking stitches are added so that the stitch designs will not overlap.








① Linking stitches

- You can touch on the grid to set the point, or you can also use stylus or arrows on the screen.


■ **Moving a Point**

1 Press  or  to move  to the point that you want to move.

- * To move  to the first point, press .
- * To move  to the last point, press .

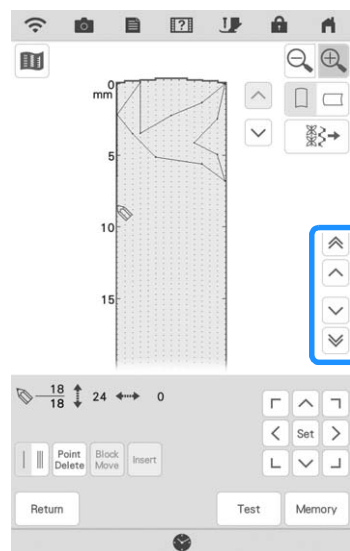


2 Use  to move the point.

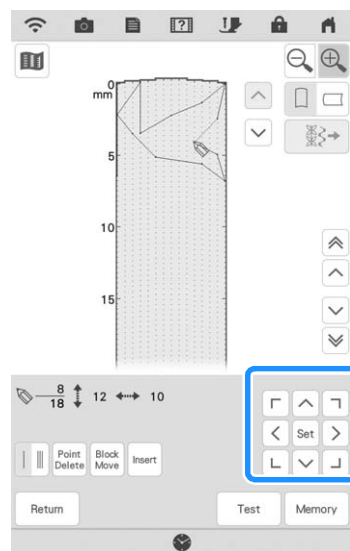

- * You can also move  by using the dual purpose stylus.


■ Moving Part or All of the Design

1 Press **Block Move**.

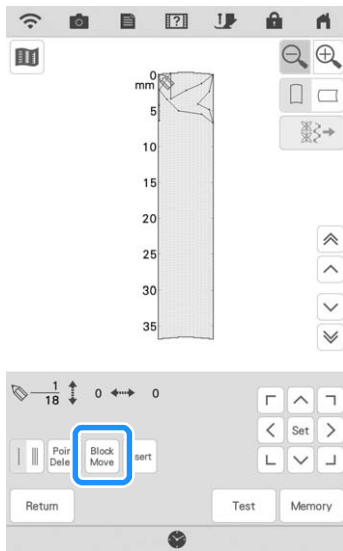


→ The selected point and all points that were entered after it are selected.

2 Press **↑** or **↓** to move the section.

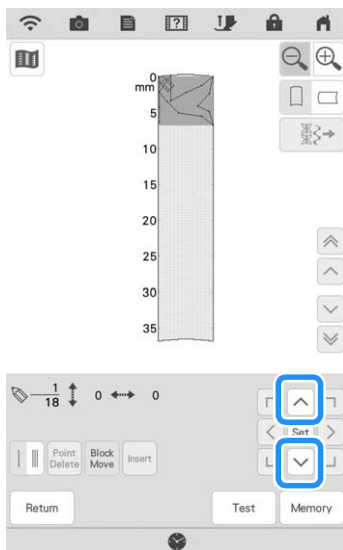



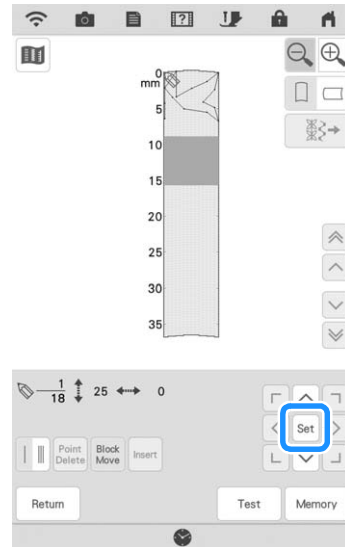




3 Press **Set**.




→ The section will be moved.


■ Inserting New Points

1 Press  or  to move  to a place on the design where you want to add a new point.

- * To move  to the first point, press .
- * To move  to the last point, press .

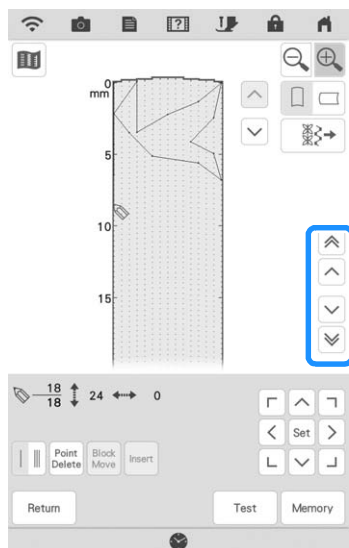


2 Press .

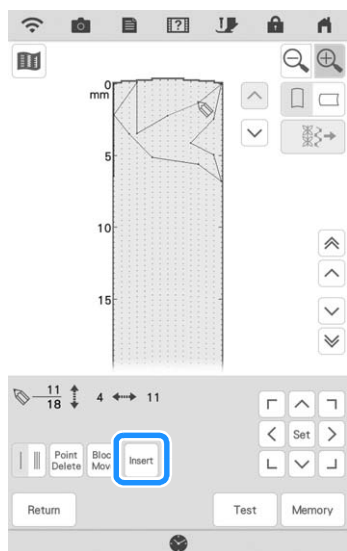

→ A new point is entered and  moves to it.


3 Use  to move the point.

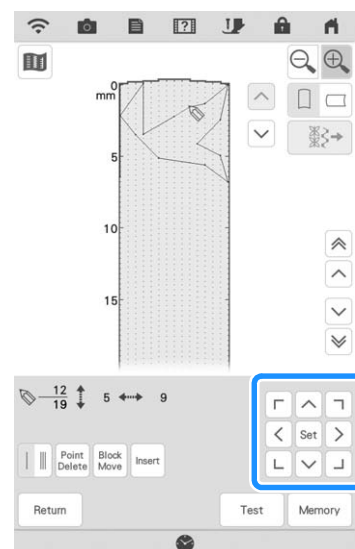

* You can also move  by using the dual purpose stylus.


Editing Stitch Stored in the Machine

1 Press .

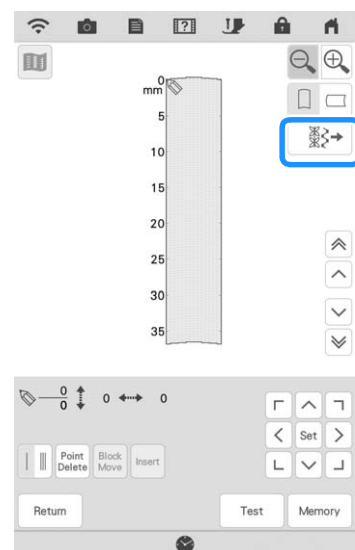

2 Select the stitch category and stitch that you want to edit.

* Scroll to display the other stitches.

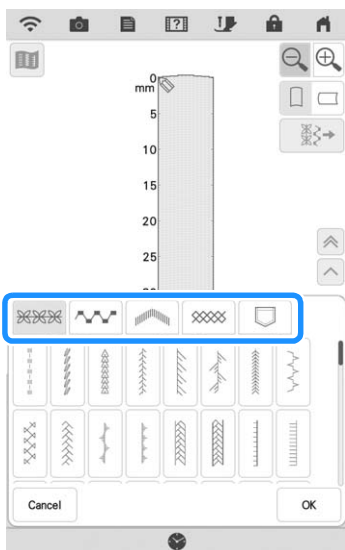


→ Selected stitch is displayed in the grid.



Memo

- When retrieving a saved custom stitch to be edited, refer to “Retrieving Stitch Patterns from the Machine’s Memory” on page 184.

3 Press .

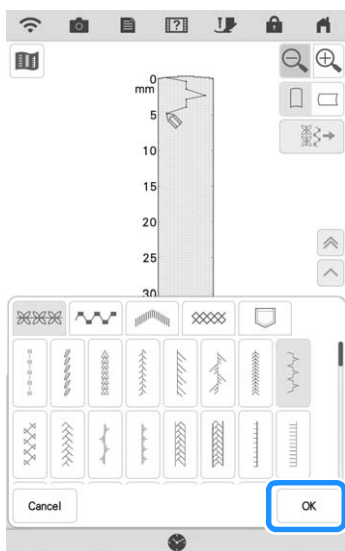


→ Edit the stitch as you like.

USING STORED CUSTOM STITCHES

Storing Custom Stitches in Your List

Stitch patterns created using the MY CUSTOM STITCH function can be stored for later use.

1 Press Memory

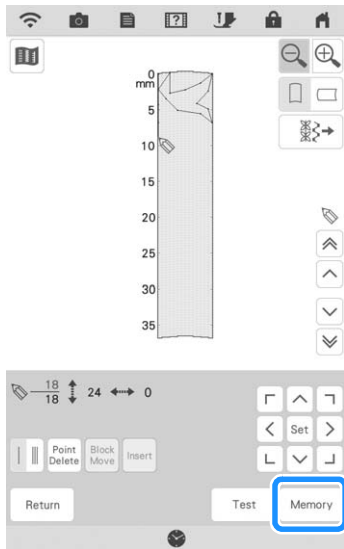


2 Touch the desired icon to memory.



Note

- When saving file to USB, be sure to insert USB media into the USB media port.

Before storing a stitch, press Test to sew a test-run of the stitch.

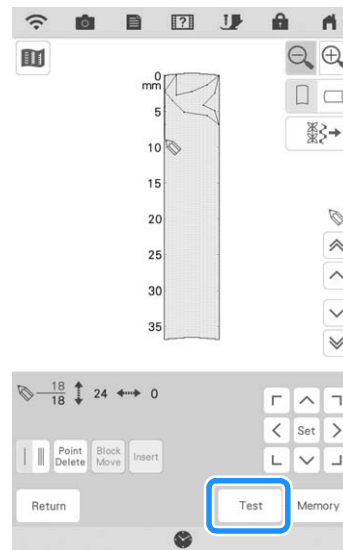

Memo

- Storing a stitch pattern takes a few seconds.
- For details on retrieving a stored stitch pattern, refer to page 197.

Note

- Do not turn off the machine while the "Saving..." message is displayed, otherwise the stitch pattern data being saved may be lost.

■ If the Memory Is Full


If the following screen appears while you are trying to save a stitch pattern, the memory is too full to hold the currently selected stitch pattern. To save the stitch pattern in the machine's memory, you have to delete a previously saved stitch pattern.

Press **OK**, and then refer to "Retrieving Stitch Patterns from the Machine's Memory" on page 184.



Retrieving Stored Stitches


1 Press .

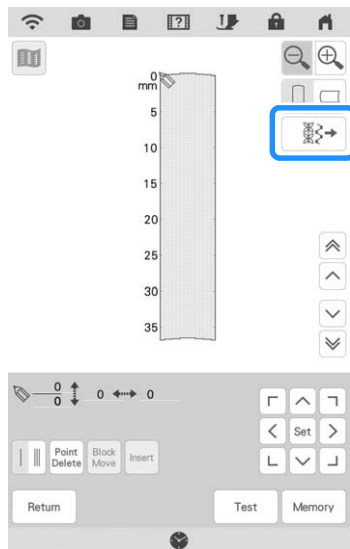

Memo


- You can also retrieve the stitches by the procedure to retrieve the Decorative/Character stitches. Refer to page 184 and 185.

2 Press .

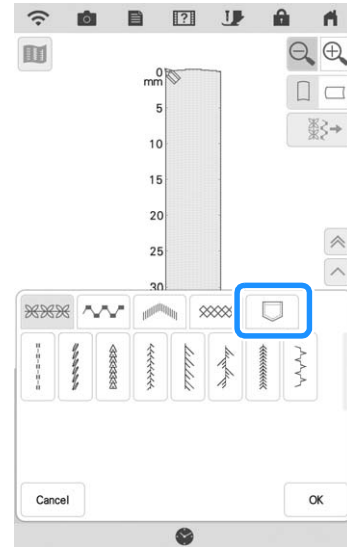


3 Choose , , or to retrieve.

- * Press **Cancel** to return to the previous screen without retrieving.

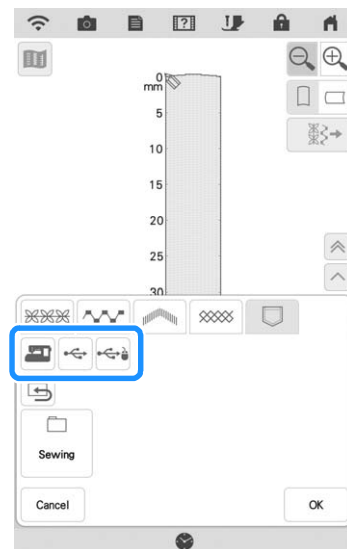

- 4** Select the stitch pattern you want to retrieve and press **OK**.

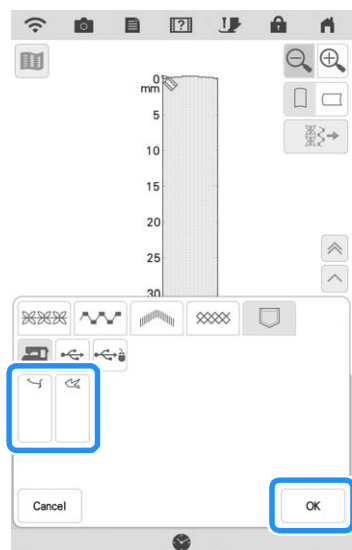



Chapter **6**
Appendix



CARE AND MAINTENANCE

⚠ CAUTION

- Be sure to unplug the machine before cleaning it. Otherwise, electric shock or injury may result.

Restrictions on Oiling

In order to prevent damaging this machine, it must not be oiled by the user. This machine was manufactured with the necessary amount of oil applied to ensure correct operation, making periodic oiling unnecessary.

If problems occur, such as difficulty turning the handwheel or an unusual noise, immediately stop using the machine, and contact your authorized Brother dealer or the nearest Brother authorized service center.

Precautions on Storing the Machine

Do not store the machine in any of the locations described below, otherwise damage to the machine may result, for example, rust caused by condensation.

- * Exposed to extremely high temperatures
- * Exposed to extremely low temperatures
- * Exposed to extreme temperature changes
- * Exposed to high humidity or steam
- * Near a flame, heater or air conditioner
- * Outdoors or exposed to direct sunlight
- * Exposed to extremely dusty or oily environments



Note

- In order to extend the life of this machine, periodically turn it on and use it. Storing this machine for an extended period of time without using it may reduce its efficiency.

Cleaning the LCD Screen

If the screen is dirty, gently wipe it with a soft, dry cloth. Do not use organic solvents or detergents.



Note

- Do not wipe the LCD screen with a damp cloth.



Memo


- Occasionally, condensation may form on the LCD screen or it may become fogged up; however, this is not a malfunction. After a while, the cloudiness will disappear.

Cleaning the Machine Casing

If the surface of the machine is dirty, lightly soak a cloth in a neutral detergent, squeeze it out firmly, and then wipe the surface. Then wipe again with a dry cloth.

Cleaning the Race


- 1 Press the "Needle Position" button to raise the needle.
- 2 Turn the main power to OFF, and then unplug the machine.
- 3 Remove the needle and the presser foot holder (page 69, 72).
- 4 Remove the flat bed attachment or the embroidery unit if either is attached.
- 5 Slide the needle plate lever toward you.

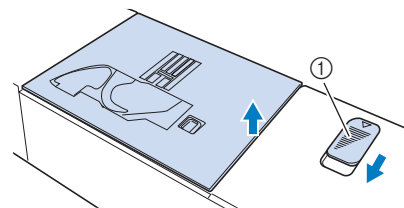


① Slide toward you.

→ The needle plate opens.

- 6 Slide out the needle plate with your right hand to remove it.

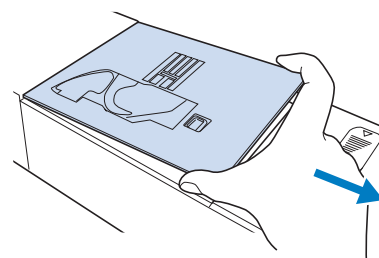


7 Grasp the bobbin case, and then gently lift out.

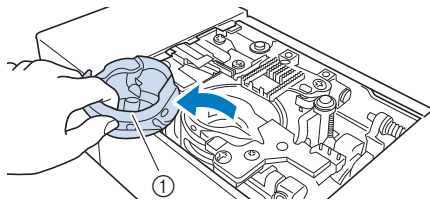

① Bobbin case

8 Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the race and bobbin thread sensor and the surrounding area.

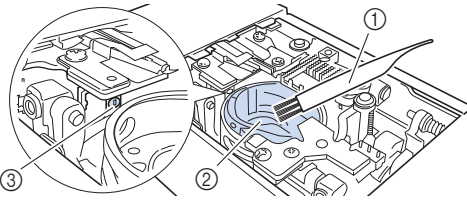


① Cleaning brush
② Race
③ Bobbin thread sensor




Note

- Do not apply oil to the bobbin case.
- If lint or dust collects on the bobbin thread sensor, the sensor may not operate correctly.

9 Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the ● mark on the machine.

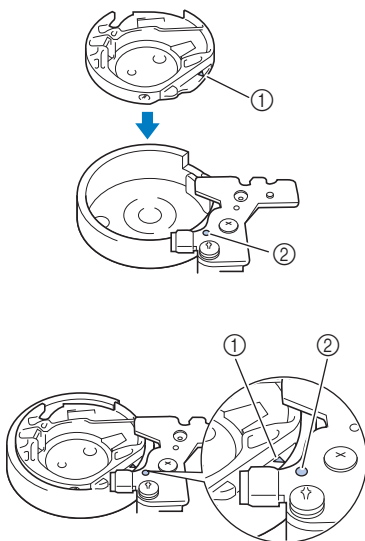

* Align the ▲ and ● marks.

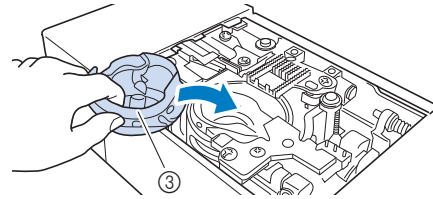


- ① ▲ mark on the bobbin case
- ② ● mark on the machine
- ③ Bobbin case

* Make sure that the indicated points are aligned before installing the bobbin case.

CAUTION


- Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case, contact your nearest Brother authorized service center.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.

10 Insert the tabs on the needle plate into the notches in the machine.

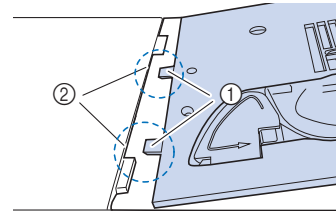

- ① Tabs
- ② Notches


11 Press down on the right side of the needle plate to secure it.

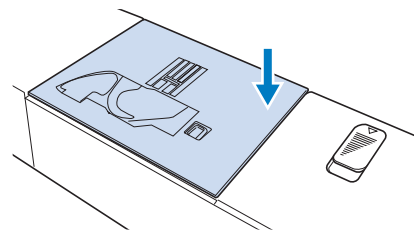

Cleaning the Cutter in the Bobbin Case Area

The cutter below the needle plate should be cleaned. If dust or lint accumulate on the cutter, it will be difficult to cut the thread when the “Thread Cutter” button is pressed or the automatic thread cutting function is used. Clean the cutter when the thread is not easily cut.

- 1 Follow steps 1 through 7 in “Cleaning the Race” to remove the needle plate.
- 2 Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the cutter in the bobbin case area.

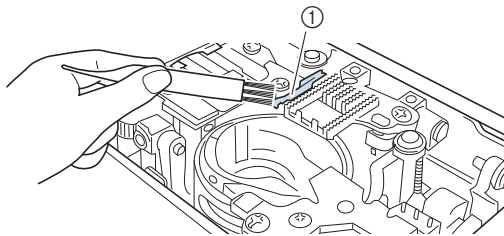

① Cutter

⚠ CAUTION

- Do not touch the cutter, otherwise injuries may result.

- 3 Attach the needle plate.

About the Maintenance Message



Once this message appears, it is recommended to take your machine to an authorized Brother dealer or the nearest Brother authorized service center for a regular maintenance check. Although this message will disappear and the machine will continue to function once you press , the message will display several more times until the appropriate maintenance is performed.

Please take the time to arrange for the maintenance your machine requires once this message appears. Such steps will help to ensure you receive continued, uninterrupted hours of machine operation for the future.

TROUBLESHOOTING

If the machine stops operating correctly, check the following possible problems before requesting service. You can solve most problems by yourself. If you need additional help, the Brother Support website offers the latest FAQs and troubleshooting tips. Visit us at "<http://s.brother/cpdab/>".

If the problem persists, contact your authorized Brother dealer or the nearest Brother authorized service center.

Frequent Troubleshooting Topics


Detailed causes and remedies for common troubleshooting topics are described below. Be sure to refer to this before contacting your authorized Brother dealer.

■ Upper Thread Is Too Tight	page 203
■ Tangled Thread on Wrong Side of Fabric	page 204
■ Incorrect Thread Tension	page 206
■ Fabric Is Caught in the Machine and Cannot be Removed	page 207

Upper Thread Is Too Tight

■ Symptom

- * The upper thread appears as a single continuous line.
- * The lower thread is visible from the upper side of the fabric. (Refer to the illustration below.)
- * The upper thread has tightened up, and comes out when pulled.
- * The upper thread has tightened up, and wrinkles appear in the fabric.
- * The upper thread tension is tight, and the results do not change even after the thread tension is adjusted.

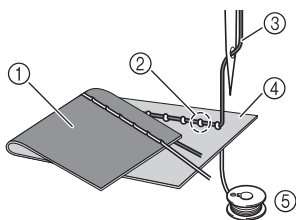

- ① Lower side of fabric
- ② Lower thread visible from upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- ⑤ Lower thread

■ Cause

Incorrect lower threading


If the lower thread is incorrectly threaded, instead of the appropriate tension being applied to the lower thread, it is pulled through the fabric when the upper thread is pulled up. For this reason, the thread is visible from the upper side of the fabric.

■ Remedy

Correctly install the lower thread.

- 1 Turn off the machine.
- 2 Remove the bobbin from the bobbin case.
- 3 Place the bobbin in the bobbin case so that the thread unwinds in the correct direction.


- * Hold the bobbin with your right hand with the thread unwinding to the left, and hold the end of the thread with your left hand. Then, with your right hand, place the bobbin in the bobbin case.

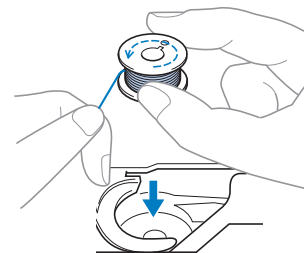

If the bobbin is inserted with the thread unwinding in the wrong direction, sewing will be done with an incorrect thread tension.


4 While holding the bobbin in place with your finger, pass the thread through the slit in the needle plate.

- * Hold down the bobbin with your right hand, and then pull the end of the thread around the tab with your left hand.

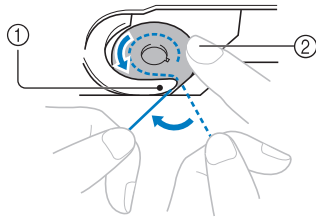

- ① Tab
- ② Hold down the bobbin with your right hand.

Pull the thread to pass it through the slit in the needle plate, then cut it with the cutter.

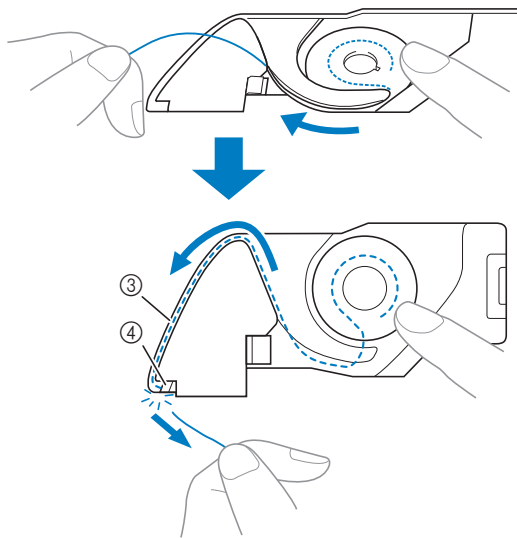


- ③ Slit
- ④ Cutter

Sewing with the correct thread tension is possible after the bobbin has been correctly installed in the bobbin case.


Tangled Thread on Wrong Side of Fabric

Symptom

- * The thread becomes tangled on the lower side of the fabric.

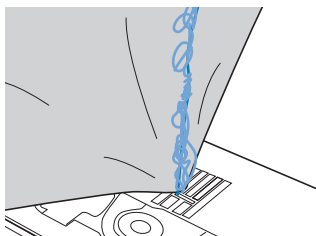

- * After starting sewing, a rattling noise is made and sewing cannot continue.
- * Looking under the fabric, there is tangled thread in the bobbin case.

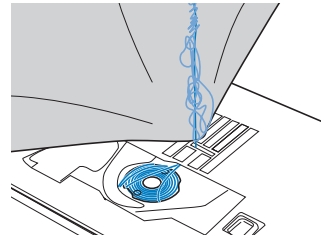

Cause

Incorrect upper threading

If the upper thread is incorrectly threaded, the upper thread passed through the fabric cannot be firmly pulled up and the upper thread becomes tangled in the bobbin case, causing a rattling noise.

Remedy

Remove the tangled thread, and then correct the upper threading.

1 Remove the tangled thread. If it cannot be removed, cut the thread with scissors.


- * Refer to "Cleaning the Race" in "CARE AND MAINTENANCE" on page 200.

2 Remove the upper thread from the machine.

3 Refer to the following steps to correct the upper threading.


- * If the bobbin was removed from the bobbin case, refer to "Setting the Bobbin" on page 58 and "Remedy" in the section "Upper Thread Is Too Tight" on page 203 to correctly install the bobbin.

- 4** Raise the presser foot using the presser foot lever.

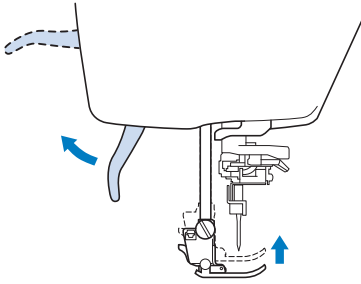


* If the presser foot is not raised, the machine cannot be threaded correctly.

- 5** Raise the needle by turning the handwheel toward you (counterclockwise) so that the mark on the wheel points up, or press "Needle Position" button once or twice to raise the needle.

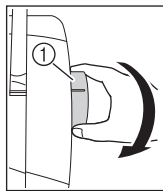


or

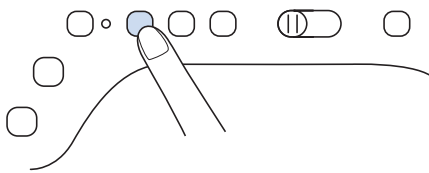


① Mark

- 6** While holding the thread with both hands, pull the thread up from under the thread guide plate.

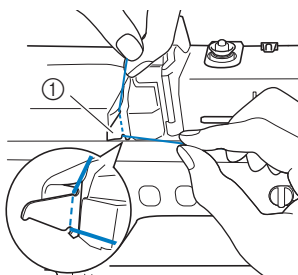


① Thread guide plate

- 7** While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

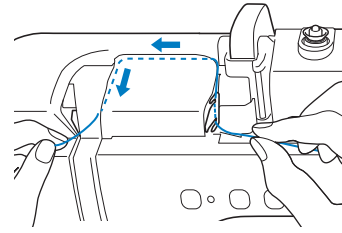


- 8** Guide the thread down, up, then down through the groove, as shown in the illustration.

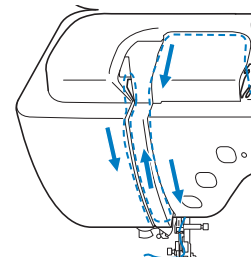


Memo

- Look in the upper groove area to check if the thread catches on the thread take-up lever visible inside the upper groove area.

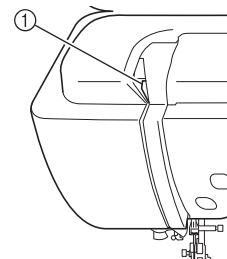

① Look in the upper groove area

- 9** Pass the thread through the needle bar thread guide (marked "6") by holding the thread with both hands and guiding it as shown in the illustration.

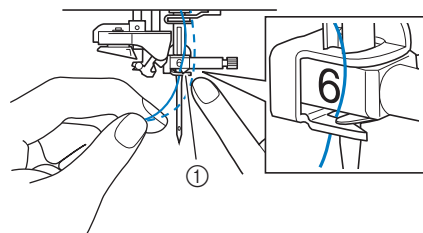

① Needle bar thread guide


- 10** Thread the needle according to steps **10** and **15** in "UPPER THREADING" on page 61.

Incorrect Thread Tension


■ Symptoms

- Symptom 1: The lower thread is visible from the upper side of the fabric.
- Symptom 2: The upper thread appears as a straight line on the upper side of the fabric.
- Symptom 3: The upper thread is visible from the lower side of the fabric.
- Symptom 4: The lower thread appears as a straight line on the lower side of the fabric.
- Symptom 5: The stitching on the lower side of the fabric is loose or has slack.

□ Symptom 1

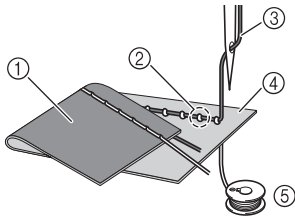

□ Symptom 3

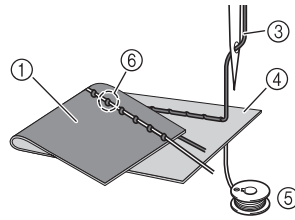

- ① Lower side of fabric
- ② Lower thread visible on upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- ⑤ Lower thread
- ⑥ Upper thread visible from lower side of fabric

■ Cause/Remedy

□ Cause 1

The machine is not correctly threaded.

<With symptoms 1 and 2 described above>

The lower threading is incorrect.

Adjust the upper thread tension and then refer to “Upper Thread is Too Tight” on page 87.

<With symptoms 3 through 5 described above>

The upper threading is incorrect.

Adjust the upper thread tension and then refer to “Tangled Thread on Wrong Side of Fabric” on page 204 to correct the upper threading.

□ Cause 2

A needle and thread appropriate for the fabric are not being used.

The machine needle that should be used depends on the type of fabric sewn and the thread thickness.

If a needle and thread appropriate for the fabric are not being used, the thread tension will not be adjusted correctly, causing wrinkles in the fabric or skipped stitches.

- * Refer to “Fabric/Thread/Needle Combinations” on page 71 to check that a needle and thread appropriate for the fabric are being used.

□ Cause 3

An appropriate upper tension is not selected.

Adjust the upper thread tension to select an appropriate thread tension.

The appropriate thread tension differs according to the type of fabric and thread being used.

- * Adjust the thread tension while test sewing on a piece of scrap fabric that is the same as that used in your project.



Note

- If the upper threading and lower threading are incorrect, the thread tension cannot be adjusted correctly, even by adjusting the upper thread tension. Check the upper threading and lower threading first, and then adjust the thread tension.

- * When the lower thread is visible on the upper side of the fabric, set the upper thread tension to a lower number. (Loosen the thread tension.)
- * When the upper thread is visible on the lower side of the fabric, set the upper thread tension to a higher number. (Tighten the thread tension.)




Fabric Is Caught in the Machine and Cannot be Removed

If the fabric is caught in the machine and cannot be removed, the thread may have become tangled under the needle plate. Follow the procedure described below to remove the fabric from the machine. If the operation could not be completed according to the procedure, instead of attempting to complete it forcefully, contact your authorized Brother dealer or the nearest Brother authorized service center.


■ Removing the Fabric from the Machine

- 1** Immediately stop the machine.
- 2** Turn the main power to OFF, and then unplug the machine.
- 3** Remove the needle.
If the needle is lowered into the fabric, turn the handwheel away from you (clockwise) to raise the needle out of the fabric, and then remove the needle.
* Refer to "CHANGING THE NEEDLE" on page 69.
- 4** Remove the presser foot and presser foot holder.
* Refer to "CHANGING THE PRESSER FOOT" on page 72.
- 5** Lift up the fabric and cut the threads below it.
If the fabric can be removed, remove it. Continue with the following steps to clean the race.
- 6** Slide the needle plate lever toward you.

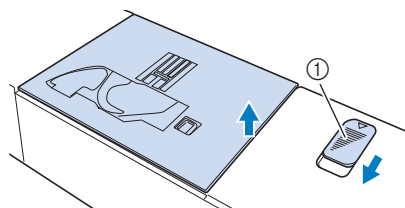


- ① Slide toward you.
→ The needle plate opens.

- 7** Slide out the needle plate with your right hand to remove it.

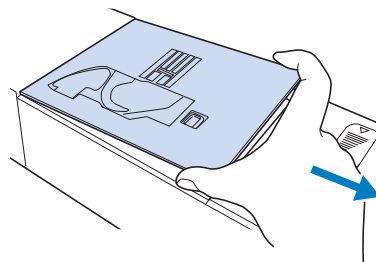


- 8** Grasp the bobbin case, and then gently lift out.

If threads remain in the bobbin case, remove them.

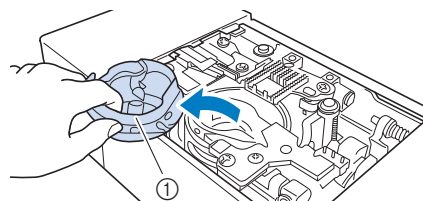



- ① Bobbin case

- 9** Use the cleaning brush or a vacuum cleaner to remove any dust or loose threads from the race and its surrounding area.

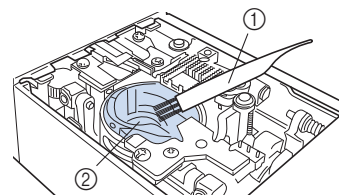


- ① Cleaning brush
② Race

- 10** Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the ● mark on the machine.

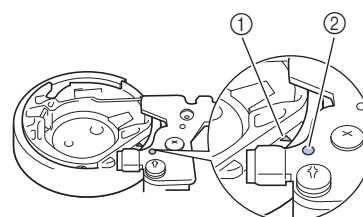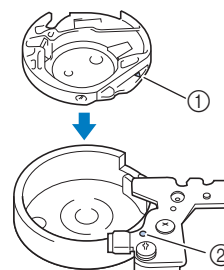

* Align the ▲ and ● marks.

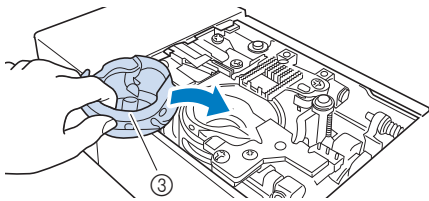


- ① ▲ mark
- ② ● mark
- ③ Bobbin case

* Make sure that the indicated points are aligned before installing the bobbin case.

⚠ CAUTION


- Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case, contact your nearest Brother authorized service center.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.

11 Insert the tabs on the needle plate into the notches in the machine.

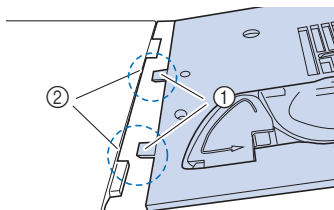

- ① Tabs
- ② Notches

12 Press down on the right side of the needle plate to secure it.

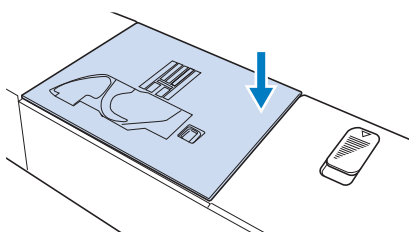

13 Check the condition of the needle, and then install it.

If the needle is in a poor condition, for example, if it is bent, be sure to install a new needle.

* Refer to "CHANGING THE NEEDLE" on page 69.

⚠ CAUTION

- Never use bent needles. Bent needles can easily break, possibly resulting in injuries.



Note

- After completing this procedure, continue with the following procedure in "Checking Machine Operations" to check that the machine is operating correctly.



Memo

- Since the needle may have been damaged when the fabric was caught in the machine, we recommend replacing it with a new one.

■ Checking Machine Operations

If the needle plate has been removed, check machine operations to confirm that installation has been completed correctly.

1 Turn on the machine.


2 Select .



Note

- Do not yet install the presser foot and thread.
- Be sure to select Straight stitch (Middle).

3 Slowly turn the handwheel toward you (counterclockwise), and look from all sides to check that the needle falls at the center of the hole in the needle plate.

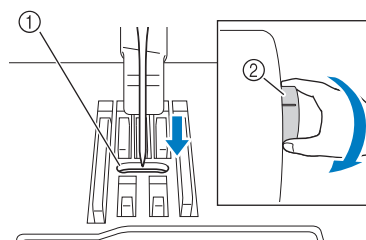

- ① Hole in the needle plate
- ② Handwheel

If the needle contacts the needle plate, remove the needle plate, and then install it again.

⚠ CAUTION

- Be sure to unplug the machine before removing the needle plate. Otherwise, electric shock or injury may result.

4 Select zigzag stitch . At this time, increase the stitch length and width to their maximum settings.

5 Slowly turn the handwheel toward you (counterclockwise) and check that the needle bar and feed dogs operate correctly.

If the needle or feed dogs contact the needle plate, the machine may be malfunctioning; therefore, contact your authorized Brother dealer or the nearest Brother authorized service center.

6 Turn off the machine, and then install the bobbin and presser foot.

* Refer to “Setting the Bobbin” on page 58 and “CHANGING THE PRESSER FOOT” on page 72.

7 Correctly thread the machine.

* For details on the machine, refer to “UPPER THREADING” on page 61.



Note

- The thread may have become tangled as a result of incorrect upper threading. Make sure that the machine is correctly threaded.





8 Perform trial sewing with normal fabric.








Note

- Remember when sewing thin fabrics, select a center stitch that is shorter in length and use the straight stitch needle plate for straight sewing stitches. A lightweight paper stabilizer can also be placed on the underside of the fabric.

List of Symptoms

If you have a minor problem with your machine, check the following solutions. If the solutions suggested do not correct the problem, contact your authorized Brother dealer. Press  →  →  for advice about minor sewing problems during sewing. Press  at any time to return to the original screen.


■ Getting Ready

Problem	Cause	Solution	Page
Cannot thread the needle.	Needle is not in the correct position.	Press the “Needle Position” button to raise the needle.	15
	Needle is installed incorrectly.	Reinstall the needle correctly.	69
	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	61
	The needle threader hook is bent and does not pass through the eye of the needle.	Contact your authorized Brother dealer.	—
	The needle threader lever cannot be moved or returned to its original position.	Contact your authorized Brother dealer.	—
	A size 65/9 needle is being used.	The needle is incompatible with the needle threader. Manually pass the thread through the eye of the needle.	64
Cannot lower the presser foot with the presser foot lever.	Presser foot was raised using the “Presser Foot Lifter” button.	Press the “Presser Foot Lifter” button to lower the presser foot.	15
Bobbin thread does not wind neatly on the bobbin.	The thread is not passed through the bobbin winding thread guide correctly.	Correctly pass the thread through the bobbin winding thread guide.	65
	Bobbin spins slowly.	Press  in the bobbin winding window to increase the bobbin winding speed.	55
	The thread that was pulled out was not wound onto the bobbin correctly.	Wind the thread that was pulled off around the bobbin 5 or 6 times clockwise.	53
	The empty bobbin was not set on the pin properly.	Set the empty bobbin on the pin and slowly turn the bobbin until you hear it click in place.	52
While winding the bobbin, the bobbin thread was wound below the bobbin winder seat.	You did not wind the bobbin thread properly when you initially wound the bobbin, or the bobbin thread was not properly set in the guides.	After removing the thread wound below the bobbin winder seat, wind the bobbin correctly. Follow the drawn images on the top of the machine for guidance when threading the machine for bobbin winding.	52
The bobbin thread cannot be pulled up.	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	58
Machine does not operate	All keys and buttons have been locked by  .	Press to unlock all keys and  buttons.	66, 72
Nothing appears in the LCD.	Main power switch is not turned on.	Turn the main power to ON.	26
	The plug of the power cord is not inserted into an electrical outlet.	Insert the plug of the power cord into an electrical outlet.	27
The LCD screen does not look very clear.	The brightness of the screen is not adjusted.	Adjust the “Screen Display Brightness” in the settings screen.	30
Nothing happens, even if the LCD display is pressed	The screen has been locked.	Press either of the following keys to unlock the screen.  	—
The LCD screen is fogged up.	Condensation has formed on the LCD screen.	After a while, the cloudiness will disappear.	—
The dual purpose stylus cannot be operated.	The dual purpose stylus is dirty.	Clean the light-emitting part of the dual purpose stylus.	—
	The battery is dead.	Replace the battery with a new one.	97

■ While Sewing

Problem	Cause	Solution	Page
Machine does not operate.	“Start/Stop” button was not pressed.	Press the “Start/Stop” button.	15
	There is no stitch pattern selected.	Select a stitch pattern.	107, 162
	Presser foot is not lowered.	Lower the presser foot.	15
	“Start/Stop” button was pressed with the foot controller attached.	Remove the foot controller, or use the foot controller to operate the machine.	78
	The “Start/Stop” button was pressed while the machine is set for the sewing speed controller to control the zigzag stitch width.	Use the foot controller instead of the “Start/Stop” button to operate the machine, or set the “Width Control” to “OFF” in the settings screen.	29, 78
Needle breaks.	Needle is installed incorrectly.	Reinstall the needle correctly.	69
	Needle clamp screw is not tightened.	Tighten the needle clamp screw.	70
	Needle is turned or bent.	Replace the needle.	69
	Using improper needle or thread for the selected fabric.	Check the “Fabric/Thread/Needle Combinations” chart.	71
	Wrong presser foot was used.	Use the recommended presser foot.	221
	Upper thread tension is too tight.	Adjust the thread tension.	87
	Fabric is pulled during sewing.	Do not pull the fabric during sewing.	—
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	61
	There are scratches around the opening in the needle plate.	Replace the needle plate, or consult your authorized Brother dealer.	200
	There are scratches around the opening in the presser foot.	Replace the presser foot, or consult your authorized Brother dealer.	72
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized Brother dealer.	200
	Needle is defective.	Replace the needle.	69
	A bobbin designed specifically for this machine is not used.	Use a bobbin designed specifically for this machine.	58
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	61
	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	58
	Presser foot is attached incorrectly.	Attach the presser foot correctly.	72
	Screw of the presser foot holder is loose.	Securely tighten the screw of the presser foot.	73
	Fabric is too thick.	Use fabric that the needle can pierce when the handwheel is turned.	82
	Fabric is fed forcefully when sewing thick fabric or thick seams.	Allow the fabric to be fed without being forcefully pushed.	71, 82
	Stitch length is too short.	Adjust the stitch length.	86
Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	52	

Problem	Cause	Solution	Page
Upper thread breaks.	Machine is not threaded correctly (used the wrong spool cap, spool cap is loose, the thread did not catch the needle bar threader, etc.)	Rethread the machine correctly.	61
	Knotted or tangled thread is being used.	Remove any knots or tangles.	—
	The selected needle is not appropriate for the thread being used.	Select a needle that is appropriate for the type of thread being used.	71
	Upper thread tension is too tight.	Adjust the thread tension.	87
	Thread is twisted.	Use scissors, etc., to cut the twisted thread and remove it from the race, etc.	—
	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Needle is installed incorrectly.	Reinstall the needle correctly.	69
	There are scratches around the opening of the needle plate.	Replace the needle plate, or consult your authorized Brother dealer.	200
	There are scratches around the opening in the presser foot.	Replace the presser foot, or consult your authorized Brother dealer.	72
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized Brother dealer.	200
	Using improper needle or thread for the selected fabric.	Check the “Fabric/Thread/Needle Combinations” chart.	71
	While sewing, the thread became knotted or tangled.	Rethread upper and lower thread.	58, 61
	A bobbin designed specifically for this machine is not used.	Use a bobbin designed specifically for this machine.	58
	The thread is tangled on the wrong side of the fabric.	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine. Be sure that the presser foot is in the raised position when threading the machine so that the upper thread sets properly in the upper tension.
Using improper needle or thread for the selected fabric.		Check the “Fabric/Thread/Needle Combinations” chart.	71
The upper thread is too tight.	The bobbin thread is incorrectly installed.	Correctly install the bobbin thread.	58
Bobbin thread breaks.	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	58
	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	52
	There are scratches on the bobbin or it doesn't rotate properly.	Replace the bobbin.	58
	Thread is twisted.	Use scissors, etc. to cut the twisted thread and remove it from the race, etc.	—
	A bobbin designed specifically for this machine is not used.	Use a bobbin designed specifically for this machine.	58
Fabric puckers.	There is a mistake in the upper or bobbin threading.	Check the steps for threading the machine and rethread it correctly.	58, 61
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	61
	Using improper needle or thread for the selected fabric.	Check the “Fabric/Thread/Needle Combinations” chart.	71
	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Stitches are too long when sewing thin fabrics.	Shorten the stitch length.	86
	Thread tension is set incorrectly.	Adjust the thread tension.	87
	Wrong presser foot.	Use the correct presser foot.	221
The stitch is not sewn correctly.	The presser foot that is used is not appropriate for the type of stitch that you wish to sew.	Attach the presser foot that is appropriate for the type of stitch that you wish to sew.	221
	The thread tension is incorrect.	Adjust the tension of the upper thread.	87
	The thread is tangled, for example, in the bobbin case.	Remove the tangled thread. If the thread is tangled in the bobbin case, clean the race.	200
Skipped stitches	Machine is threaded incorrectly.	Check the steps for threading the machine and rethread it correctly.	61
	Using improper needle or thread for the selected fabric.	Check the “Fabric/Thread/Needle Combinations” chart.	71

Problem	Cause	Solution	Page
Skipped stitches	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Needle is installed incorrectly.	Reinstall the needle correctly.	69
	Needle is defective.	Replace the needle.	69
	Dust or lint has collected under the needle plate.	Remove the dust or lint with the brush.	200
	Thin or stretch fabrics are being sewn.	Sew with one sheet of thin paper under the fabric.	84
No stitching	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	58
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	61
High-pitched sound while sewing	Dust or lint is caught in the feed dogs.	Remove the dust or lint.	200
	Pieces of thread are caught in the race.	Clean the race.	200
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	61
	A bobbin designed specifically for this machine is not used.	Use a bobbin designed specifically for this machine.	58
	There are needle holes or friction scratches in the bobbin case.	Replace the bobbin case, or consult your authorized Brother dealer.	200
Fabric does not feed through the machine.	Feed dogs are set in the down position.	Press  , and then turn the handwheel to raise the feed dogs.	128
	Stitches are too close together.	Lengthen the stitch length setting.	86
	Wrong presser foot was used.	Use the correct presser foot.	221
	Needle is turned, bent or the point is dull.	Replace the needle.	69
	Thread is entangled.	Cut the entangled thread and remove it from the race.	—
	Zigzag foot “J” is slanted on a thick seam at the beginning of stitching.	Use the presser foot locking pin (black button on the left side) on zigzag foot “J” to keep the presser foot level while sewing.	83
The fabric feeds in the opposite direction.	The feed mechanism is damaged.	Contact your authorized Brother dealer.	—
The needle contacts the needle plate.	The needle clamp screw is loose.	Firmly tighten the needle clamp screw. If the needle is bent or blunt, replace it with a new one.	70
	Needle is turned, bent or the point is dull.	Replace the needle.	69
Fabric being sewn with the machine cannot be removed.	Thread is tangled below the needle plate.	Lift up the fabric and cut the threads below it, and clean the race.	204
A broken needle has fallen into the machine.	—	Turn off the machine, and then remove the needle plate. If the needle that fell into the machine can be seen, use tweezers to remove it. After removing the needle, return the needle plate to its original position. Before turning on the machine, slowly turn the handwheel toward you to check that it turns smoothly. If the handwheel does not turn smoothly or the needle that fell into the machine cannot be removed, consult your authorized Brother dealer.	—
The handwheel feels sluggish when it is turned.	Thread is tangled in the bobbin case.	Remove the tangled thread from the bobbin case. Re-install the bobbin case so it is correctly positioned.	204
The built-in camera cannot detect the buttonhole foot.	The buttonhole foot is dirty.	Clean the area of the buttonhole foot to be detected.	146
	Mark “A+” or 3 dots on the presser foot is shaded.	Keep these area clean.	146

■ After Sewing

Problem	Cause	Solution	Page
Thread tension is incorrect.	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	61
	Bobbin is set incorrectly.	Reset the bobbin. (If needle plate was removed, reinstall needle plate.)	58
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combinations" chart.	71
	Presser foot holder is not attached correctly.	Reattach the presser foot holder correctly.	—
	Thread tension is set incorrectly.	Adjust the thread tension.	87
	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	52
	Needle is turned, bent or the point is dull.	Replace the needle.	69
	A bobbin designed specifically for this machine is not used.	Use a bobbin designed specifically for this machine.	58
Character or decorative stitch patterns are misaligned.	Stitch pattern adjustment settings were set incorrectly.	Revise the stitch pattern adjustment settings.	168
Stitch pattern does not turn out.	Wrong presser foot was used.	Attach the correct presser foot.	221
	Did not use a stabilizer material on thin fabrics or stretch fabrics.	Attach a stabilizer material.	167
	Thread tension is set incorrectly.	Adjust the thread tension.	87
	Fabric was pulled, pushed or fed at an angle while it was being sewn.	Sew while guiding the fabric with your hands so that the fabric is fed in a straight line.	77
	The thread is tangled, for example, in the bobbin case.	Remove the tangled thread. If the thread is tangled in the bobbin case, clean the race.	200

CAUTION

- This machine is equipped with a thread detection device. If the "Start/Stop" button is pushed before the upper threading is done, the machine will not operate properly.
- If the power is disconnected during sewing:
Turn the main power to OFF and unplug the machine.
If you restart the machine, follow the Operation Manual for operating the machine correctly.

ERROR MESSAGES

If the machine is not properly set and the “Start/Stop” button or the “Reverse/Reinforcement Stitch” button is pressed, or if the operation procedure is incorrect, the machine does not start. An alarm sounds and an error message is displayed on the LCD. If an error message displays, follow the instructions in the message.


Below is an explanation of error messages. Refer to these when necessary (if you press or do the operation correctly while the error message is displayed, the message disappears).

⚠ CAUTION

- **Be sure to rethread the machine. If you press the “Start/Stop” button without rethreading the machine, the thread tension may be wrong or the needle may break and cause injury.**



This message is displayed when the motor locks due to tangled thread or for other reasons related to thread delivery.

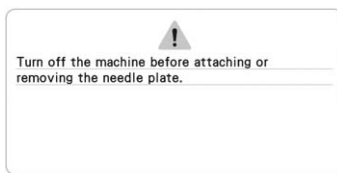

This message is displayed when you try to sew with a stitch other than a middle needle position stitch while the single-hole needle plate is installed.

This message is displayed when the needle plate is removed with the machine on or when the machine is turned on and embroidery or embroidery edit mode is selected.




This message is displayed when the machine needs to be maintained. (page 202)




This message is displayed when you try to combine more than 71 stitch patterns.



This message is displayed when the speed control lever is set to control the zigzag stitch width, and the “Start/ Stop” button is pushed. Use the foot controller to operate the machine.

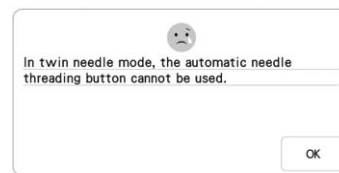

This message is displayed when the automatic needle threading button is pushed while twin needle sewing is set.

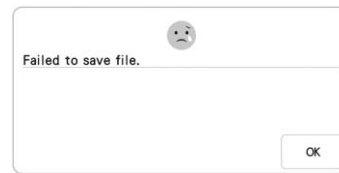


This message appears when you try to save more than 100 camera image or settings screen image files in the USB media. In this case, delete a file from the USB media or use different USB media. (page 33)




This message appears when or is pressed to delete the settings for a utility stitch. To delete the selected settings, press .



This message is displayed when the stitch patterns you are editing take up too much memory, or if you are editing too many stitch patterns for the memory.

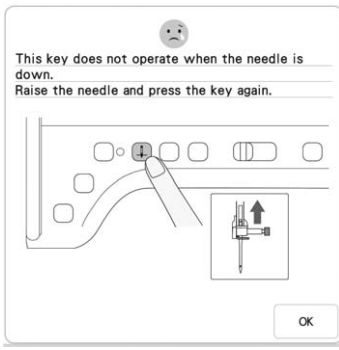


This message is displayed when a key on the LCD display is touched while the needle is in the down position.

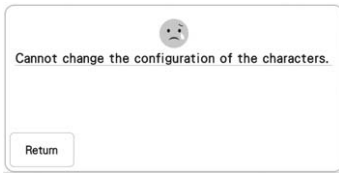

This message is displayed when there are too many characters and the curved character configuration is impossible.



This message is displayed when the upper thread is broken or not threaded correctly, and the "Start/Stop" button or the "Reverse/ Reinforcement Stitch" button is pressed.

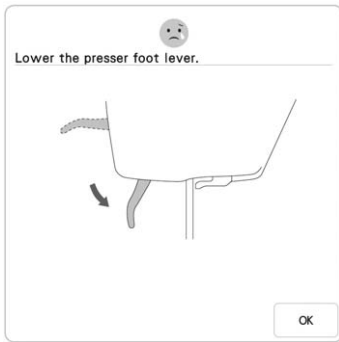


This message is displayed when the "Presser Foot Lifter" button is pushed while the presser foot lever is raised/the needle is lowered.




This message is displayed when the "Start/Stop" button is pushed to sew utility stitches or character/decorative stitches while the foot controller is connected.




This message is displayed when there is no stitch pattern selected and the "Start/Stop" button or the "Reverse/Reinforcement Stitch" button is pressed.

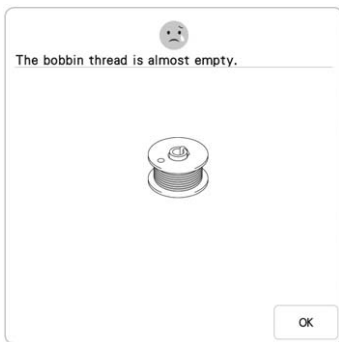

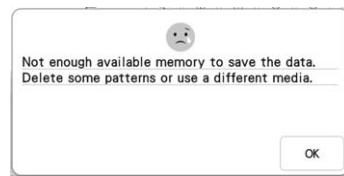


This message is displayed when the bobbin thread is running out.

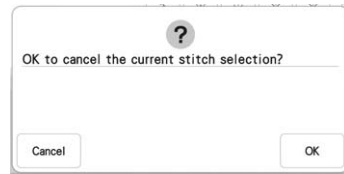


This message is displayed when the memory is full and the stitch pattern or embroidery pattern cannot be saved.



This message is displayed when, after selecting a stitch pattern, , , or  is pressed and the stitch pattern is about to be deleted.



This message is displayed when the bobbin is being wound, and the motor locks because the thread is tangled, etc.

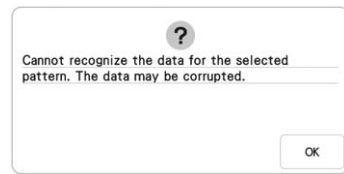


This message is displayed when there is a possibility that the data for the selected stitch pattern is corrupted.




This message is displayed when you try to use incompatible media.




This message is displayed when you attempt to select a stitch pattern after the USB media in which the stitch pattern is saved has been changed.

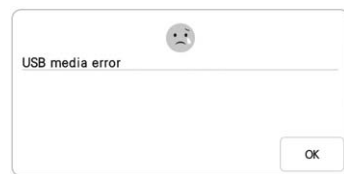

This message is displayed when an error occurs with the USB media.

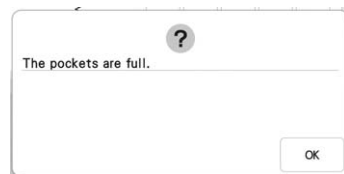

This message is displayed when the memory is full and a stitch pattern must be deleted.

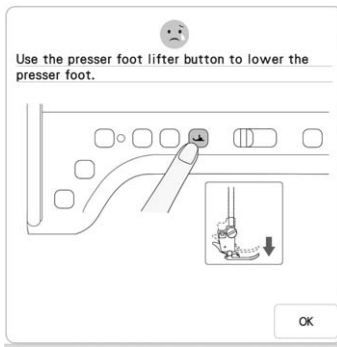

This message is displayed when a button, such as the “Start/Stop” button, is pushed while the presser foot is raised.



This message is displayed when it seems that the upper thread has not been threaded correctly.



This message is displayed when the file size exceeds the data capacity of the machine. Confirm the file size and format (page 36).






This message appears if the file format is incompatible with this machine. Check the list of compatible file formats (page 36).




This message is displayed when the image is deleted.




This message is displayed when you press  Sewing Guide in the screen other than the utility stitch, or press  Pattern Explanation in the screen other than the utility stitch or character/decorative stitch.

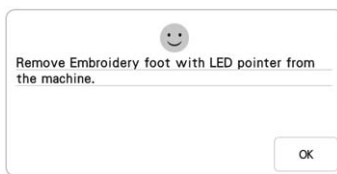

This message appears when you try to start sewing utility stitches or character/decorative stitches with the embroidery foot with the LED pointer attached to the machine. Remove the embroidery foot with the LED pointer before entering the sewing mode.

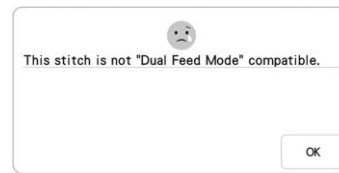

This message appears when the dual feed foot cannot be used with the current stitch. Select other stitch.

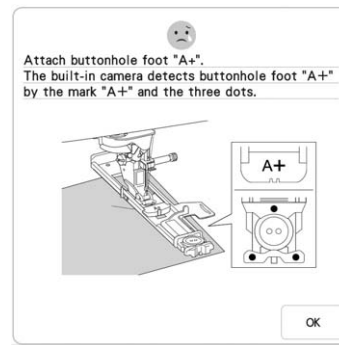


This message appears when start sewing buttonhole stitches without attaching buttonhole foot “A+”.

Alarm Sounds

If the operation was performed incorrectly, an alarm sounds to indicate that an error occurred. If the operation was performed correctly, the machine beeps to confirm the operation.

Memo

- To cancel the operation beep or to change the volume, press , display page 4 of the General settings screen, and then change the setting for “Machine Speaker Volume”. Refer to page 30 for more details.

SPECIFICATIONS

	Item	Specification
Machine (Box 1 of 2)	Dimensions of machine	Approx. 690 mm (W) × 349 mm (H) × 322 mm (D) (approx. 27-11/64 inches (W) × 13-47/64 inches (H) × 12-43/64 inches (D))
	Dimensions of box	Approx. 805 mm (W) × 510 mm (H) × 405 mm (D) (approx. 31-11/16 inches (W) × 20-5/64 inches (H) × 15-15/16 inches (D))
	Weight of machine	Approx. 19.6 kg (approx. 43.2 lb)
	Weight of box (for shipping)	Approx. 23.0 kg (approx. 50.7 lb)
	Sewing speed	70 to 1050 stitches per minute
	Needles	Home sewing machine needles (HA × 130)
Embroidery Unit (Box 2 of 2)	Dimensions of embroidery unit	Approx. 637 mm (W) × 150 mm (H) × 576 mm (D) (approx. 25-5/64 inches (W) × 5-29/32 inches (H) × 22-43/64 inches (D))
	Dimensions of machine with embroidery unit attached	Approx. 973 mm (W) × 349 mm (H) × 576 mm (D) (approx. 38-5/16 inches (W) × 13-47/64 inches (H) × 22-43/64 inches (D))
	Dimensions of box	Approx. 800 mm (W) × 695 mm (H) × 205 mm (D) (approx. 31-1/2 inches (W) × 27-23/64 inches (H) × 8-5/64 inches (D))
	Weight of embroidery unit	Approx. 5.6 kg (approx. 12.3 lb)
	Weight of box (for shipping)	Approx. 9.2 kg (approx. 20.3 lb)
Total Shipping Weight (Combination of all 2 boxes complete)		Approx. 43.4 kg (approx. 95.7 lb)
Data storage		USB media/SD card (SD and SDHC)

* Please be aware that some specifications may change without notice.

UPGRADING YOUR MACHINE'S SOFTWARE

You can use USB media to upgrade software for your machine. When an upgrade program is available on "<http://s.brother/cpdab/>", please download the files following the instructions on the website and steps below.



Note


- Use a USB media with a capacity from 4GB to 32GB when upgrading the machine. Check that no data other than the upgrade file is saved on the USB media being used before starting to upgrade.

Upgrade Procedure Using USB Media


- 1 While pressing the "Automatic Threading" button, turn the main power to ON.

→ The following screen will appear on the LCD.

- 2 Press  or .

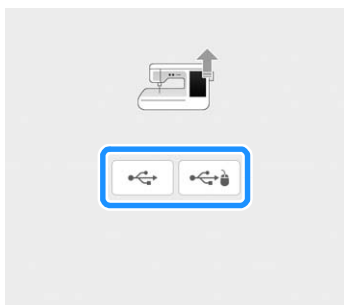

- 3 Insert the USB media into the USB port corresponding to the button pressed in step 2. USB port on the machine. The media device should only contain the upgrade file.

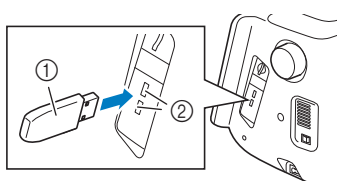


- ① USB media
- ② USB port



Note

- The access lamp will begin blinking after inserting USB media, and it will take about 5 to 6 seconds to recognize the media. (Time will differ depending on the USB media).

- 4 Press .

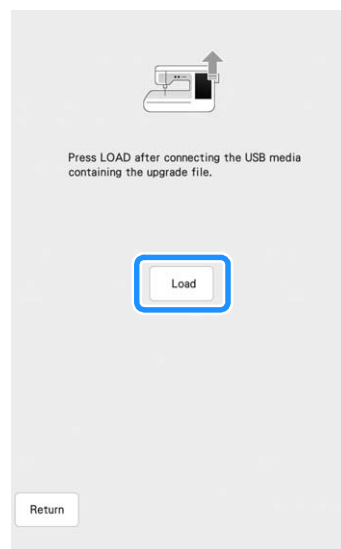

→ The upgrade file is loaded.



Note


- Do not turn off your machine while the machine is saving the update software to itself. If the machine's power is turned off while saving the update software, it may result in damage to the machine.
- If an error occurs, a red text error message will appear. When the installation is performed successfully, following message will appear.




- 5 Remove the USB media, and turn the machine off and on again.

Downloading Update Files Via a Wireless Network Connection


If the machine is connected to a wireless network, update files can be downloaded directly to the machine using this network.

- 1 Press , display the following screen, and then download the file using either method.

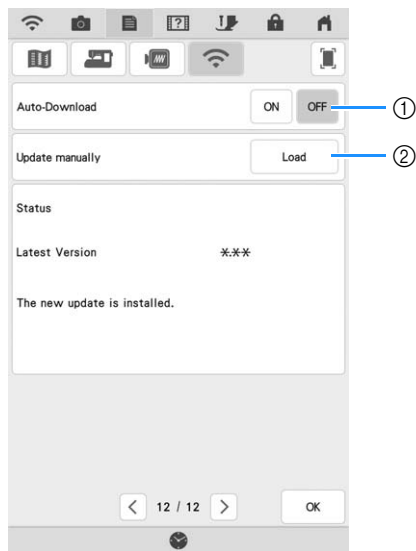

- ① When set to "ON", the machine periodically checks if there is a new version of the update file. If there is one, it is downloaded.
- ② If is pressed, the machine will check if there is a new version of the update file. If there is one, it is downloaded.
- The result from checking appears at the bottom of the screen.

Memo


- If downloading is in progress, or if downloading is complete,  appears on the Wireless LAN key in the upper-left corner of the screen. Press the key to view the status in the settings screen.



- Operation of the machine may become slow during downloading.

- 2 When downloading is finished, turn off the machine, then hold down the "Automatic Threading" button while turning on the machine.

- 3 Press  to update the machine.

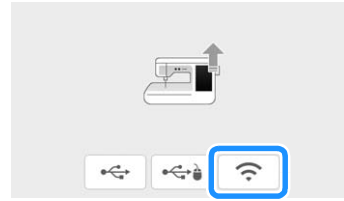

Note

- Do not turn off your machine while the machine is saving the update software to itself. If the machine's power is turned off while saving the update software, it may result in damage to the machine.



Memo









 



















- If there are changes or additions to functions, manuals available on the machine may be updated.

















































STITCH SETTING CHART








































 

 







The following chart shows information for each utility stitch concerning applications, stitch lengths, stitch widths, and whether or not the twin needle mode can be used.








 
 











 



 **Note**
















 


 


 


 
 


























- Quilting foot “C” is used when the straight stitch needle plate is attached to the machine. Refer to “Using free motion Quilting Foot “C”” on page 128.




















 






















Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Straight stitch (Left)			General sewing, gather, pintuck, etc. Reverse stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	—	—	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Straight stitch (Left)			General sewing, gather, pintuck, etc. Reinforcement stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	—	—	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Straight stitch (Middle)			General sewing, gather, pintuck, etc. Reverse stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	—	—	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Straight stitch (Middle)			General sewing, gather, pintuck, etc. Reinforcement stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	—	—	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Triple stretch stitch			General sewing for reinforcement and decorative topstitching	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Stem stitch			Reinforced stitching, sewing and decorative applications	1.0 (3/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Decorative stitch			Decorative stitching, top stitching	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Basting stitch			Basting	—	—	5.0 (13/64)	5.0 (13/64)	NO
	Zigzag stitch			For overcasting, mending. Reverse stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	3.5 (9/64)	0.0 - 7.0 (0 - 9/32)	1.4 (1/16)	0.0 - 5.0 (0 - 13/64)	OK (J)
	Zigzag stitch			For overcasting, mending. Reinforcement stitch is sewn while pressing “Reverse/Reinforcement Stitch” button.	3.5 (9/64)	0.0 - 7.0 (0 - 9/32)	1.4 (1/16)	0.0 - 5.0 (0 - 13/64)	OK (J)
	Zigzag stitch (Right)			Start from right needle position, zigzag sew at left.	3.5 (9/64)	2.5 - 5.0 (3/32 - 13/64)	1.4 (1/16)	0.3 - 5.0 (1/64 - 13/64)	OK (J)
	Zigzag stitch (Left)			Start from left needle position, zigzag sew at right.	3.5 (9/64)	2.5 - 5.0 (3/32 - 13/64)	1.4 (1/16)	0.3 - 5.0 (1/64 - 13/64)	OK (J)
	2 steps elastic zigzag			Overcasting (medium weight and stretch fabrics), tape and elastic	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)


















Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	2 steps elastic zigzag			Overcasting (medium weight and stretch fabrics), tape and elastic	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	3 steps elastic zigzag			Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Overcasting stitch			Reinforcing of light and medium weight fabrics	3.5 (9/64)	2.5 - 5.0 (3/32 - 13/64)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Overcasting stitch			Reinforcing of heavyweight fabric	5.0 (13/64)	2.5 - 5.0 (3/32 - 13/64)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Overcasting stitch			Reinforcing of medium, heavyweight and easily friable fabrics or decorative stitching.	5.0 (13/64)	3.5 - 5.0 (9/64 - 13/64)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Overcasting stitch			Reinforced seaming of stretch fabric	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Overcasting stitch			Reinforcing of medium stretch fabric and heavyweight fabric, decorative stitching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Overcasting stitch			Reinforcement of stretch fabric or decorative stitching	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Overcasting stitch			Stretch knit seam	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Single diamond overcast			Reinforcement and seaming stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Single diamond overcast			Reinforcement of stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	1.8 (1/16)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	With side cutter			Straight stitch while cutting fabrics	—	—	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	NO
	With side cutter			Zigzag stitch while cutting fabrics	3.5 (9/64)	3.5 - 5.0 (9/64 - 13/64)	1.4 (1/16)	0.0 - 5.0 (0 - 13/64)	NO
	With side cutter			Overcasting stitch while cutting fabrics	3.5 (9/64)	3.5 - 5.0 (9/64 - 13/64)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	With side cutter			Overcasting stitch while cutting fabrics	5.0 (13/64)	3.5 - 5.0 (9/64 - 13/64)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	With side cutter			Overcasting stitch while cutting fabrics	5.0 (13/64)	3.5 - 5.0 (9/64 - 13/64)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Piecing stitch (Right)			Piecework/patchwork 6.5 mm (approx. 1/4 inch) right seam allowance	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Piecing stitch (Middle)			Piecework/patchwork	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO






















 
 
 

 






























Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Piecing stitch (Left)			Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Hand-look quilting			Quilting stitch made to look like hand quilting stitch	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Quilting appliqué zigzag stitch			Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.5 (9/64)	0.0 - 7.0 (0 - 9/32)	1.4 (1/16)	0.0 - 5.0 (0 - 13/64)	NO
	Quilting appliqué stitch			Quilting stitch for invisible appliqué or attaching binding	1.5 (1/16)	0.0 - 7.0 (0 - 9/32)	1.8 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Quilting stippling			Background quilting	7.0 (9/32)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Blind hem stitch			Hemming woven fabrics	0.0 (0)	+3.0 - -3.0 (+1/8 - -1/8)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Blind hem stitch stretch			Hemming stretch fabric	0.0 (0)	+3.0 - -3.0 (+1/8 - -1/8)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Blanket stitch			Appliqués, decorative blanket stitch	3.5 (9/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Blanket stitch			Appliqués, decorative blanket stitch	2.5 (3/32)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Shell tuck edge			Shell tuck edge finish on fabrics	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Satin scallop stitch			Decorating collar of blouse, edge of handkerchief	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	0.5 (1/64)	0.1 - 5.0 (0 - 13/64)	OK (J)
	Scallop stitch			Decorating collar of blouse, edge of handkerchief	7.0 (9/32)	0.0 - 7.0 (0 - 9/32)	1.4 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Patchwork join stitch			Patchwork stitches, decorative stitching	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	1.2 (1/16)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Patchwork double overlock stitch			Patchwork stitches, decorative stitching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Couching stitch			Decorative stitching, attaching cord and couching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.2 (1/16)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Smocking stitch			Smocking, decorative stitching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Feather stitch			Fagoting, decorative stitching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Fagoting cross stitch			Fagoting, bridging and decorative stitching	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Tape attaching			Attaching tape to seam in stretch fabric	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)



















 






 
















Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Ladder stitch			Decorative stitching	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	NO
	Rick-rack stitch			Decorative top stitching	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Decorative stitch			Decorative stitching	1.0 (3/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Decorative stitch			Decorative stitching	5.5 (7/32)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Serpentine stitch			Decorative stitching and attaching elastic	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Decorative stitch			Decorative stitching and appliqué	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	OK (J)
	Decorative stippling stitch			Decorative stitching	7.0 (9/32)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems, triple straight at left	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Decorative hems, triple straight at center	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching zigzag			Decorative hems, top stitching	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Decorative hems, lace attaching pin stitch	3.5 (9/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems	3.0 (1/8)	0.0 - 7.0 (0 - 9/32)	3.5 (9/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems daisy stitch	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	3.5 (9/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	3.5 (9/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	3.5 (9/64)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Heirloom, decorative hems	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Honeycomb stitch			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Honeycomb stitch			Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	3.5 (9/64)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Heirloom, decorative hems	4.0 (5/32)	0.0 - 7.0 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Decorative hems and bridging stitch	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Decorative hems. Fagoting, attaching ribbon	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	OK (J)
	Hemstitching			Decorative hems, smocking	6.0 (15/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems, smocking	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/16 - 13/64)	NO
	Hemstitching			Decorative hems, smocking	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems	5.0 (13/64)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Ladder stitch			Decorative hems. Fagoting, attaching ribbon	7.0 (9/32)	0.0 - 7.0 (0 - 9/32)	1.6 (1/16)	0.4 - 2.5 (1/64 - 3/32)	NO
	Narrow rounded buttonhole			Buttonhole on light to medium weight fabrics	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Wide round ended buttonhole			Buttonholes with extra space for larger buttons	5.5 (7/32)	3.5 - 6.5 (9/64 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Tapered round ended buttonhole			Reinforced waist tapered buttonholes	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Round ended buttonhole			Buttonholes with vertical bar tack in heavyweight fabrics	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Round ended buttonhole			Buttonholes with bar tack	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Round double ended buttonhole			Buttonholes for fine, medium to heavyweight fabrics	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Narrow squared buttonhole			Buttonholes for light to medium weight fabrics	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Wide squared buttonhole			Buttonholes with extra space for larger decorative buttons	5.5 (7/32)	3.5 - 6.5 (9/64 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Squared buttonhole			Heavy-duty buttonholes with vertical bar tacks	5.0 (13/64)	3.0 - 6.5 (1/8 - 1/4)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Stretch buttonhole			Buttonholes for stretch or woven fabrics	6.0 (15/64)	3.0 - 6.5 (1/8 - 1/4)	1.0 (3/64)	0.5 - 2.0 (1/64 - 5/64)	NO
	Heirloom buttonhole			Buttonholes for heirloom and stretch fabrics	6.0 (15/64)	3.0 - 6.5 (1/8 - 1/4)	1.5 (1/16)	1.0 - 3.0 (3/64 - 1/8)	NO
	Bound buttonhole			The first step in making bound buttonholes	5.0 (13/64)	0.0 - 6.5 (0 - 1/4)	2.0 (5/64)	0.2 - 4.0 (1/64 - 5/32)	NO
	Keyhole buttonhole			Buttonholes in heavyweight or thick fabrics for larger flat buttons	7.0 (9/32)	3.0 - 7.0 (1/8 - 9/32)	0.5 (1/64)	0.3 - 1.0 (1/64 - 3/64)	NO
	Tapered keyhole buttonhole			Buttonholes in medium to heavy weight fabrics for larger flat buttons	7.0 (9/32)	3.0 - 7.0 (1/8 - 9/32)	0.5 (1/64)	0.3 - 1.0 (1/64 - 3/64)	NO
	Keyhole buttonhole			Buttonholes with vertical bar tack for reinforcement in heavyweight or thick fabrics	7.0 (9/32)	3.0 - 7.0 (1/8 - 9/32)	0.5 (1/64)	0.3 - 1.0 (1/64 - 3/64)	NO
	4 steps buttonhole 1			Left side of 4 step buttonhole	5.0 (13/64)	1.5 - 7.0 (1/16 - 9/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	4 steps buttonhole 2			Bar tack of 4 step buttonhole	5.0 (13/64)	1.5 - 7.0 (1/16 - 9/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	4 steps buttonhole 3			Right side of 4 step buttonhole	5.0 (13/64)	1.5 - 7.0 (1/16 - 9/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	4 steps buttonhole 4			Bar tack of 4 step buttonhole	5.0 (13/64)	1.5 - 7.0 (1/16 - 9/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 3/64)	NO
	Darning			Darning of medium weight fabric	7.0 (9/32)	2.5 - 7.0 (3/32 - 9/32)	2.0 (5/64)	0.4 - 2.5 (1/64 - 3/32)	NO
	Darning			Darning of heavyweight fabric	7.0 (9/32)	2.5 - 7.0 (3/32 - 9/32)	2.0 (5/64)	0.4 - 2.5 (1/64 - 3/32)	NO
	Bar tack			Reinforcement at opening of pocket, etc.	2.0 (5/64)	1.0 - 3.0 (3/64 - 1/8)	0.4 (1/64)	0.3 - 1.0 (1/64 - 3/64)	NO

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Button sewing			Attaching buttons	3.5 (9/64)	2.5 - 4.5 (3/32 - 11/64)	—	—	NO
	Eyelet			For making eyelets, holes on belts, etc.	7.0 (9/32)	7.0 6.0 5.0 (9/32 15/64 13/64)	7.0 (9/32)	7.0 6.0 5.0 (9/32 15/64 13/64)	NO
	Star eyelet			For making star-shaped eyelets on holes.	—	—	—	—	NO
	Diagonally left up (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Reverse (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Diagonally right up (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Sideways to left (Straight)			For attaching appliqué on tubular pieces of fabric	—	—	—	—	NO
	Sideways to right (Straight)			For attaching appliqué on tubular pieces of fabric	—	—	—	—	NO
	Diagonally left down (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Forward (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Diagonally right down (Straight)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Sideways to left (Zigzag)			For attaching appliqué on tubular pieces of fabric	—	—	—	—	NO
	Sideways to right (Zigzag)			For attaching appliqué on tubular pieces of fabric	—	—	—	—	NO
	Forward (Zigzag)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Reverse (Zigzag)			For attaching appliqué on tubular pieces of fabric and mitering corners	—	—	—	—	NO
	Piecing stitch (Middle)			Piecework/patchwork	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Piecing stitch (Right)			Piecework/patchwork 6.5 mm (approx. 1/4 inch) right seam allowance	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Piecing stitch (Left)			Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	—	—	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Hand-look quilting			Quilting stitch made to look like hand quilting stitch	—	—	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Basting stitch			Basting	—	—	5.0 (13/64)	5.0 (13/64)	NO
	Stem stitch			Reinforced stitching, sewing and decorative applications	1.00 (3/64)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Quilting appliqué zigzag stitch			Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.50 (9/64)	0.00 - 7.00 (0 - 9/32)	1.6 (1/16)	0.0 - 5.0 (0 - 13/64)	NO
	Zigzag stitch (Right)			Start from right needle position, zigzag sew at left	3.50 (9/64)	2.50 - 5.00 (3/32 - 13/64)	1.6 (1/16)	0.3 - 5.0 (1/64 - 13/64)	NO
	Zigzag stitch (Left)			Start from left needle position, zigzag sew at right	3.50 (9/64)	2.50 - 5.00 (3/32 - 13/64)	1.6 (1/16)	0.3 - 5.0 (1/64 - 13/64)	NO
	2 steps elastic zigzag			Overcasting (medium weight and stretch fabrics), tape and elastic	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	3 steps elastic zigzag			Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Quilting appliqué stitch			Quilting stitch for invisible appliqué or attaching binding	2.00 (5/64)	0.00 - 7.00 (0 - 9/32)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Shell tuck edge			Shell tuck edge finish on fabrics	4.00 (5/32)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.2 - 5.0 (1/64 - 13/64)	NO
	Blanket stitch			Appliqués, decorative blanket stitch	3.50 (9/64)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Quilting stippling			Background quilting	7.00 (9/32)	0.00 - 7.00 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Overcasting stitch			Stretch knit seam	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Tape attaching			Attaching tape to seam in stretch fabric	5.50 (7/32)	0.00 - 7.00 (0 - 9/32)	1.4 (1/16)	0.2 - 5.0 (1/64 - 13/64)	NO
	Serpentine stitch			Decorative stitching and attaching elastic	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	2.0 (5/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Feather stitch			Fagoting, decorative stitching	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Fagoting cross stitch			Fagoting, bridging and decorative stitching	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Couching stitch			Decorative stitching, attaching cord and couching	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	1.2 (1/16)	0.2 - 5.0 (1/64 - 13/64)	NO

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin needle
					Auto.	Manual	Auto.	Manual	
	Patchwork double overlock stitch			Patchwork stitches, decorative stitching	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Smocking stitch			Smocking, decorative stitching	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Rick-rack stitch			Decorative top stitching	4.00 (5/32)	0.00 - 7.00 (0 - 9/32)	2.5 (3/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Decorative stitch			Decorative stitching and appliqué	6.00 (15/64)	0.00 - 7.00 (0 - 9/32)	1.0 (3/64)	0.2 - 5.0 (1/64 - 13/64)	NO
	Decorative stitch			Decorative stitching	5.50 (7/32)	0.00 - 7.00 (0 - 9/32)	1.6 (1/16)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Heirloom, decorative hems	5.00 (13/64)	0.00 - 7.00 (0 - 9/32)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Hemstitching			Decorative hems and bridging stitch	6.00 (15/64)	0.00 - 7.00 (0 - 9/32)	2.0 (5/64)	0.4 - 5.0 (1/64 - 13/64)	NO
	Single diamond overcast			Reinforcement and seaming stretch fabric	6.00 (15/64)	0.00 - 7.00 (0 - 9/32)	3.0 (1/8)	0.4 - 5.0 (1/64 - 13/64)	NO
	Overcasting stitch			Reinforcement of stretch fabric or decorative stitching	4.00 (5/32)	0.00 - 7.00 (0 - 9/32)	4.0 (5/32)	0.4 - 5.0 (1/64 - 13/64)	NO
	Free motion couching stitch			Free motion couching stitch	—	—	—	—	NO
	Basting stitch			Free motion basting stitch	—	—	—	—	NO
	Hand-look quilting			Quilting stitch made to look like hand quilting stitch	—	—	—	—	NO
	Hand-look quilting			Quilting stitch made to look like hand quilting stitch	—	—	—	—	NO
	Hand-look quilting			Quilting stitch made to look like hand quilting stitch	—	—	—	—	NO

INDEX

A

Accessories	
included accessories	17
options	21
Accessory case	16
Accessory compartment	16
Air vent	12
Alarm sounds	217
Alphabet characters	
character/decorative stitches	164
Appliqué	136
quilting	126
using a zigzag stitch	118
Arrow keys	191
Automatic fabric sensor system	91
Automatic reinforcement stitching	79
Automatic thread cutting key	88
Automatic threading button	15, 61

B

Back to beginning key	174
Ball point needle	71
Ball point needle 75/107	71
Bar tacks	152
Basting	142
Blind hem stitches	133
Block move key	193
Bobbin	
pulling up the bobbin thread	59
setting	58
winding	52
Bobbin case	
cleaning	200
Bobbin clip	16
Bobbin cover	14, 58
Bobbin winder	12
Bobbin winding switch	54
Built-in camera	93, 98
Button sewing	153
4 hole buttons	154
shank	154
Buttonholes	
four-step	150
odd-shaped/buttons that do not fit the button holder plate	149
one-step	146

C

Character/Decorative stitches	
adjustments	168
combining	176
editing	170
key functions	170
retrieving	184, 185
saving	183
selecting	162
sewing	167
stitch selection screens	163
Cleaning	
LCD screen	200
machine casing	200
race	200
Clock	27
Combining stitch patterns	
character/decorative stitches	176
Cord guide bobbin cover	119
Crazy quilting	118

D

Darning	151
Dart seam	114
Dual feed foot	74, 126
Dual purpose stylus	97, 191
Dual purpose stylus holder	98

E

Echo quilting	131
Eco mode	35
Editing	
character/decorative stitches	170
MY CUSTOM STITCH	190
Elastic zigzag stitches	119
Elongation key	173
Embroidery unit	15
carriage	15
End point setting	93
Enlarger key	191
Error messages	215
Eyelet	155

F

Fabrics	
fabric/thread/needle combinations	71
sewing heavyweight fabrics	82
sewing lightweight fabrics	84
sewing stretch fabrics	84, 148
Fagoting	139
Feed dogs	14, 128
Flat bed attachment	12
Flat fell seam	115
Foot controller	12, 78
Free motion quilting	
free motion echo quilting foot "E"	131
free motion open toe quilting foot "O"	130
free motion quilting foot "C"	128
Free motion sewing mode	128

G

Gathering	115
Grid direction key	191

H

Handle	12
Hand-look quilting	133
Handwheel	13
Heirloom	141
Hemstitching	
daisy stitch	141
drawn work	142
Home page screen	28

I

Image key	108, 175, 192
Innov-eye Technology (for U.S.A. only)	93
Insert key	194

K

Key functions	
character/decorative stitches	170
MY CUSTOM STITCH	190
utility stitches	105

Knee lifter 12, 90

L

L/R Shift 86
 LCD screen 12, 28
 cleaning 200
 light 30
 Lower threading
 pulling up the bobbin thread 59
 setting the bobbin 58
 winding the bobbin 52

M

Machine help key 39
 Machine operation mode key 210
 Main power switch 12, 26
 Mirror image key 107, 173
 MPEG-4 (MP4) videos 43
 Multi-directional sewing 155
 Multi-function foot controller 34
 Multi-purpose screwdriver 24
 Muvit (for U.S.A. only) 74
 MY CUSTOM STITCH
 designing 188
 entering data 190
 key functions 190
 retrieving 197
 saving 196
 storing in your list 196

N

Needle
 changing the needle 69
 changing the needle position 112
 checking the needle location 92
 fabric/thread/needle combinations 71
 twin needle 64
 Needle bar thread guides 14, 65
 Needle calibration 37
 Needle clamp screw 14
 Needle mode selection key 64
 Needle plate 14
 Needle position 92, 112
 Needle position button 15

O

Operation buttons 12, 15
 Overcasting 118, 120

P

Patchwork 118
 Piecing 125
 1/4" quilting foot with guide 125
 Pintuck 116
 Pivoting 89
 Point delete key 191
 Power cord 27
 Power cord receptacle 12
 Presser foot
 attaching 72
 pressure 91
 removing 72
 types 221
 Presser foot holder 14, 72
 Presser foot holder screw 14
 Presser foot lever 12, 83
 Presser foot lifter button 15
 Presser foot/Needle exchange key 64, 69, 72
 Pretension disk 12, 53, 56
 Projector 97, 99

Q

Quilting 123
 free motion 128
 with satin stitches 127

R

Race 200
 Reinforcement stitch 79
 Reinforcement stitch button 79
 Retrieving
 character/decorative stitch patterns 184
 machine's memory 184
 MY CUSTOM STITCH designs 197
 stitch settings 109
 USB media 185
 utility stitches 109
 Reverse stitch button 79
 Reverse/Reinforcement stitch button 15, 79
 Reverse/Reinforcement stitches 79

S

Satin stitches 127, 174
 Saving
 character/decorative stitches 183
 machine's memory 183
 MY CUSTOM STITCH designs 196
 stitch settings 109
 USB media 183
 utility stitches 109
 Scallop stitches 137
 Screen saver 36
 SD card
 usable 182
 Set key 191
 Settings
 automatic thread cutting 88
 embroidery settings 32
 general settings 30
 machine setting mode key 29
 sewing settings 29
 stitch length 86
 stitch width 85
 thread tension 87
 Sewing speed controller (speed control slide) 12, 15, 77
 Sewing type selection key 41
 Shelltuck stitches 137
 Shutoff support mode 35
 Side cutter 121
 Single/Repeat sewing key 173
 Single/Triple stitching key 191
 Size selection key 173
 Smocking stitches 138
 Speaker 30
 Specifications 218
 Spool cap 12
 Spool net 68
 Spool pin 12
 Spool stand 56, 66
 Start/Stop button 15
 Step stitch patterns 179
 Stitch setting chart 221
 StitchVision Technology (for U.S.A. only) 97
 Straight stitch foot 113
 Straight stitch needle plate 113
 Straight stitches 110
 Supplemental spool pin 12, 52, 65

T

Tape attaching 119
 Tape or elastic attaching 140
 Test key 192, 196

Thread	
fabric/thread/needle combinations	71
thread tension	87
Thread cutter	12, 78
Thread cutter button	15
Thread density key	174
Thread guide	12, 53, 56, 65
Thread guide plate	12, 56, 61
Top cover	12
Top stitching	138
Transparent nylon thread	71
Troubleshooting	203
Tutorial video	42
Twin needle	64

U

Up Close Viewer (for U.S.A. only)	93
Upgrading	219
Upper threading	
twin needle mode	64
using the “Automatic Threading” button	61
using the spool net	68
USB media	
recalling	185
saving	183
usable	182
USB mouse	49
USB port connector	
for media	13, 183
Utility stitches	
key functions	105
retrieving	109
saving	109
selecting	104
sewing type selection key	41
stitch pattern explanation key	44
stitch selection screens	106
stitch setting chart	221

W

Walking foot	73
Wireless network connection	46, 220

Z

Zigzag stitches	118
Zipper insertion	
centered	156
side	158

Please visit us at <http://s.brother/cpdab/> where you can get product support and answers to frequently asked questions (FAQs).



Be sure to install the latest software.
A variety of functional improvements are being performed in the latest version.



Brother SupportCenter is a mobile app that provides the support information for your Brother product.

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.